





# POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

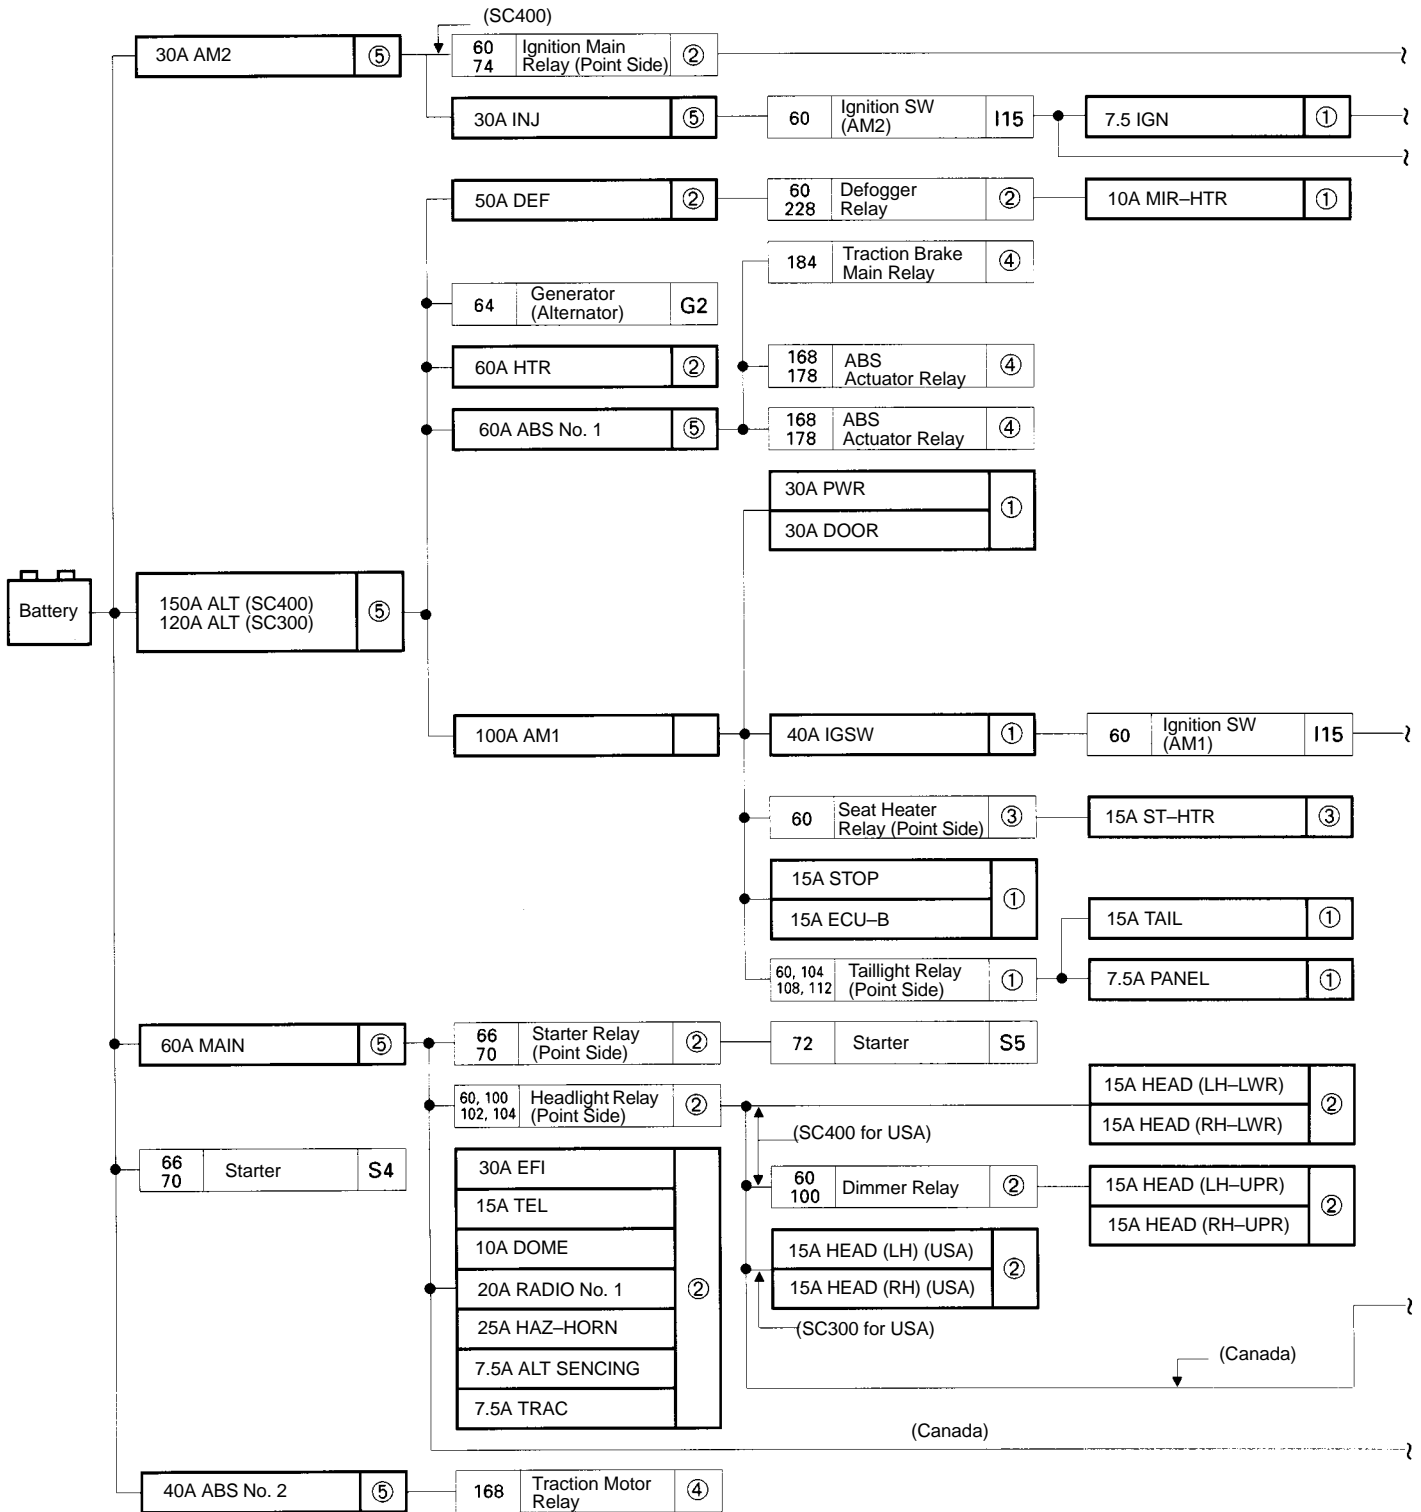

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 23)

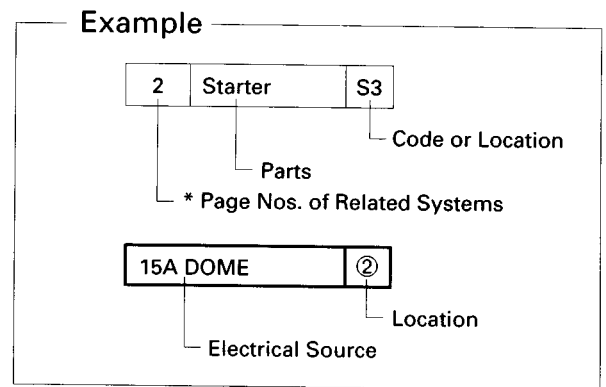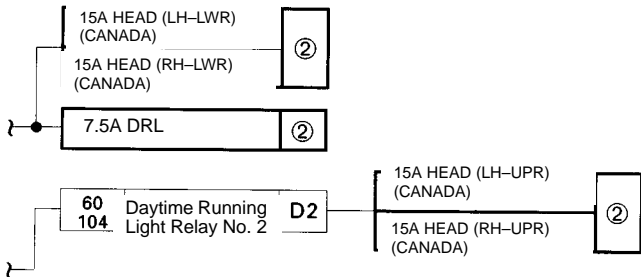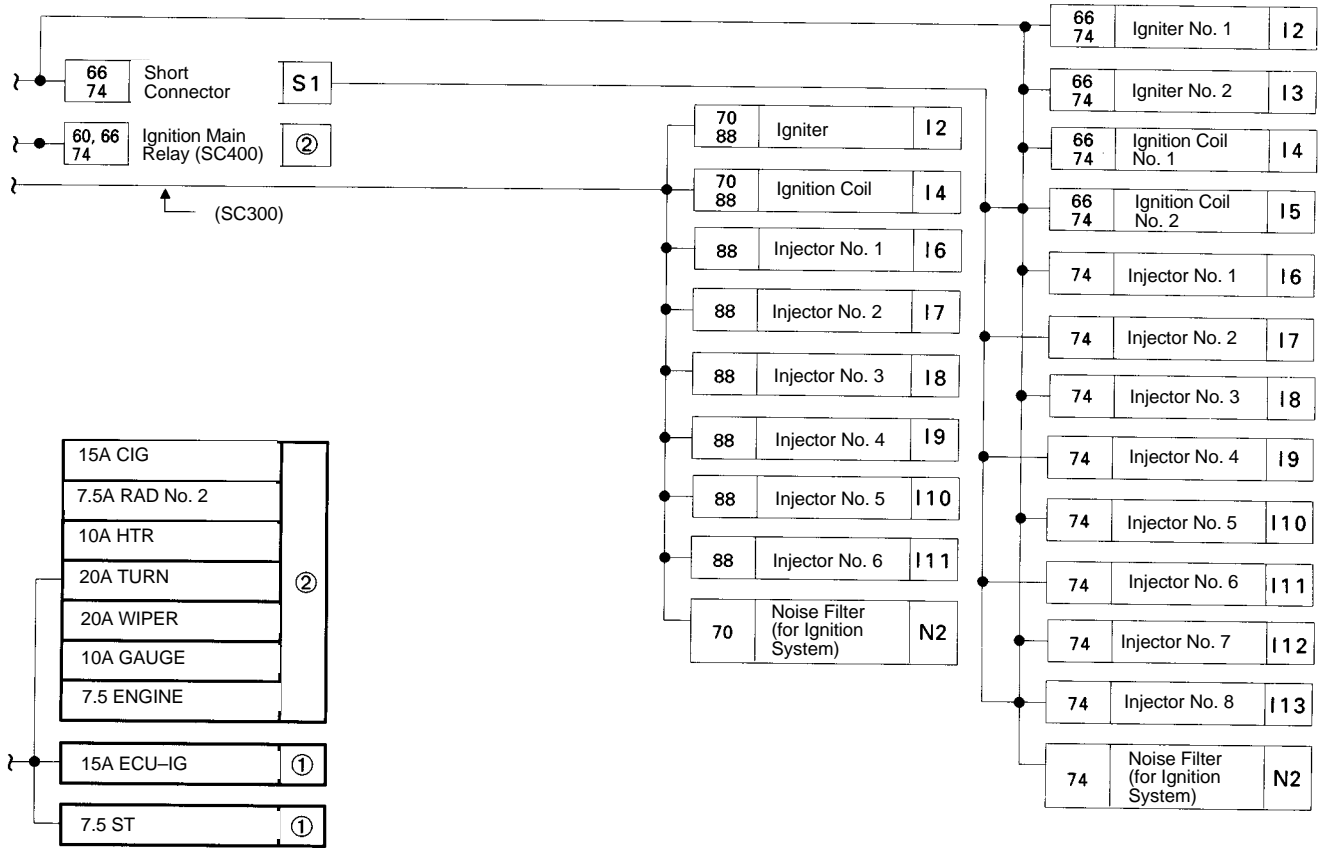

\* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

(4) : R/B No. 6 (See page 24)    (5) : Fuse Block (F9 See page 19)

# POWER SOURCE (Current Flow Chart)

Location	* Page Nos. of Related Systems	Parts	Code or Location	CB or Fuse	A3	A10	A11	A12	A13	A15	A19	A20	A21	A24	A30	A33	B1	B2	B3	B4	B5	C4	C5	C6	C9	C10	
					A/C Lock Sensor and A/C Magnetic Clutch	A/C Control Assembly				A/C Control SW and Radio SW	A/C Power Transistor	A/T Indicator Light (for Shift Lever)	ABS and Traction ECU		ABS ECU	Automatic Light Control Sensor	Auto Antenna Motor and Relay	Back-Up Light SW (for M/T)	Brake Fluid Level SW	Blower Motor	Blower Resistor (for Low Speed)	Buckle SW LH	Coolant Level Warning SW	Cornering Light LH	Cornering Light RH	Center Airbag Sensor Assembly	Cigarette Lighter
①	50A	DEF																									
	30A	DOOR																									
	30A	PWR																									
	15A	STOP											●	●													
	15A	ECU-B													●												
	10A	MIR-HTR																									
	10A	HTR				●	●	●	●																		
	20A	TURN																						●	●		
	20A	WIPER																									
	10A	GAUGE																									
	15A	ECU-IG											●		●	●	●										
	7.5A	ENGINE																									
	7.5A	IGN																									
	15A	CIG					●																		●	●	
	7.5A	RAD No. 2															●									●	
	15A	TAIL																									
	7.5A	PANEL								●																●	
	7.5A	ST																									
②	15A	TEL																									
	10A	DOME				●																					
	20A	RADIO No. 1														●											
	25A	HAZ-HORN																									
	30A	EFI																									
	7.5A	ALT SENCING																									
	15A	HEAD (LH) *1																									
	15A	HEAD (RH) *1																									
	15A	HEAD (LH-LWR) *2																									
	15A	HEAD (RH-LWR) *2																									
	15A	HEAD (LH-UPR) *2																									
	15A	HEAD (RH-UPR) *2																									
	60A	HTR									●										●	●					
7.5A	TRAC																										
7.5A	DRL (for Canada)																										
③	15A	ST-HTR																									

\* These are the page numbers of the first page on which the related system is shown.  
 The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 23)







# POWER SOURCE (Current Flow Chart)

Location	CB or Fuse	Parts	Code or Location	* Page Nos. of Related Systems	
				120	120
	H13	High Mount Stop Light (w/ Rear Spoiler)			74 88
	H14	High Mount Stop Light (w/o Rear Spoiler)			116
	I1	Idle Air Control Valve (ISC Valve)			224
	I14	Ignition Key Cylinder Light			124
	I15	Key Interlock Solenoid			108
	I16	Integration Relay			108 120
	L2	License Plate Light			116
	L3	Light Failure Sensor			116
	L6	Luggage Compartment Light			232
	L7	Luggage Compartment Light SW			232
	M2	Moon Roof Control Relay			228
	M4	Moon Roof Motor and Limit SW			266
	N1	Noise Filter (for Defogger System)			74 120 152 160 168 178 184 224
	N3	Noise Filter (for A/C System)			259
	N4	Noise Filter (for Stop Light)			152 160
	O2	Oil Pressure SW			60 74 123 138 152 160 259
	O5	O/D Main SW			66 76 88 138 152 190 200
	P1	Park/Neutral Position SW (Neutral Start SW), Back-Up Light SW and AT Indicator SW			259
	P4	Parking Brake SW			222
	P5	PPS ECU			
①	50A	DEF			
	30A	DOOR			
	30A	PWR			
	15A	STOP	●	●	
	15A	ECU-B			●
	10A	MIR-HTR			
	10A	HTR			●
	20A	TURN		●	
	20A	WIPER			
	10A	GAUGE		●	
	15A	ECU-IG			●
	7.5A	ENGINE			
	7.5A	IGN			
	15A	CIG		●	
	7.5A	RAD No. 2			
	15A	TAIL		●	●
	7.5A	PANEL			
	7.5A	ST			●
②	15A	TEL			
	10A	DOME		●	
	20A	RADIO No. 1			●
	25A	HAZ-HORN			
	30A	EFI	●		
	7.5A	ALT SENCING			
	15A	HEAD (LH) *1			
	15A	HEAD (RH) *1			
	15A	HEAD (LH-LWR) *2			
	15A	HEAD (RH-LWR) *2			
	15A	HEAD (LH-UPR) *2			
	15A	HEAD (RH-UPR) *2			
	60A	HTR			
	7.5A	TRAC			
7.5A	DRL (for Canada)				
③	15A	ST-HTR			

\* These are the page numbers of the first page on which the related system is shown.  
 The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 23)

116	148	148	148	148	190 198	190	190	190	190	190	190	190	190	190	190	190	190	190	190	190	112 251	112 256	206	112 259	123	126	120	108	123	126	120	108	228
Personal Light	Power Window Control SW RH	Power Window Master SW and Door Lock Control SW LH	Power Window Motor LH	Power Window Motor RH	Power Seat Control SW (for Driver's Seat)	Power Seat Control SW (for Passenger's Seat)	Power Seat ECU (for Driver's Seat)	Power Seat ECU (for Passenger's Seat)	Power Seat Motor (for Driver's Seat Front Vertical Control)	Power Seat Motor (for Driver's Seat Lumbar Support Control)	Power Seat Motor (for Driver's Seat Rear Vertical Control)	Power Seat Motor (for Driver's Seat Reclining Motor Control)	Power Seat Motor (for Driver's Seat Slide Control)	Power Seat Motor (for Passenger's Seat Reclining Control)	Radio and Player (w/ CD Player)	Radio and Player (w/o CD Player)	Remote Control Mirror ECU	Rheostat	Back-Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Window Defogger						
P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20	P21	R3	R4	R6	R8	R9			R10			R13							
	●	●	●	●	●	●	●		●	●	●	●	●	●	●			●			●												●
●								●	●							●	●		●			●											

(4) : R/B No. 5 (See page 23) (5) : R/B No. 6 (See page 24)



# POWER SOURCE (Current Flow Chart)

Location	* Page Nos. of Related Systems		206	206	206	226	224	116	74	88	120	152	160	168	178	184	190	224	251	251	226	226	226	226	138	138	138	232	200	200	112	226	168	168				
	Parts	Code or Location	Remote Control Mirror LH	Remote Control Mirror RH	Remote Control Mirror SW	Seat Heater SW (for M/T)	Shift Lock ECU	Step Light	Stop Light SW	Stereo Power Amplifier	Seat Heater (for Driver's Seat Back)	Seat Heater (for Driver's Seat Cushion)	Seat Heater (for Passenger's Seat Back)	Seat Heater (for Passenger's Seat Cushion)	Theft Deterrent Horn	Theft Deterrent and Door Lock ECU	Tilt and Power Telescopic ECU	Traction Cut SW and Seat Heater SW	Traction ECU																			
	CB or Fuse		R15	R16	R17	S8	S9	S12	S13	S14	S15	S16	S17	S18	S19	T1	T7	T8	T9	T10	T11	T12	T13															
①	50A	DEF																																				
	30A	DOOR																●																				
	30A	PWR																		●																		
	15A	STOP					●		●																													
	15A	ECU-B																																				
	10A	MIR-HTR	●	●																																		
	10A	HTR																																				
	20A	TURN																																				
	20A	WIPER																																				
	10A	GAUGE																																				
	15A	ECU-IG						●																														
	7.5A	ENGINE																																				
	7.5A	IGN																																				
	15A	CIG						●																														
	7.5A	RAD No. 2	●	●	●						●																											
	15A	TAIL																																				
	7.5A	PANEL																																				
7.5A	ST																																					
②	15A	TEL																																				
	10A	DOME						●																														
	20A	RADIO No. 1																																				
	25A	HAZ-HORN																																				
	30A	EFI																																				
	7.5A	ALT SENCING																																				
	15A	HEAD (LH) *1																																				
	15A	HEAD (RH) *1																																				
	15A	HEAD (LH-LWR) *2																																				
	15A	HEAD (RH-LWR) *2																																				
	15A	HEAD (LH-UPR) *2																																				
	15A	HEAD (RH-UPR) *2																																				
	60A	HTR																																				
	7.5A	TRAC																																				
7.5A	DRL (for Canada)																																					
③	15A	ST-HTR					●																															

\* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 23)



# POWER SOURCE (Current Flow Chart)

Location	CB or Fuse	Parts	Code or Location	* Page Nos. of Related Systems			
				126	124	168 178	
				Turn Signal Flasher	Cornering Light Relay	ABS Actuator Relay	
				③	④	⑤	
①	50A	DEF					
	30A	DOOR					
	30A	PWR					
	15A	STOP					
	15A	ECU-B					
	10A	MIR-HTR					
	10A	HTR					
	20A	TURN	●	●			
	20A	WIPER					
	10A	GAUGE			●		
	15A	ECU-IG					
	7.5A	ENGINE					
	7.5A	IGN					
	15A	CIG					
	7.5A	RAD No. 2					
	15A	TAIL					
	7.5A	PANEL					
	7.5A	ST					
	②	15A	TEL				
		10A	DOME				
20A		RADIO No. 1					
25A		HAZ-HORN					
30A		EFI					
7.5A		ALT SENCING					
15A		HEAD (LH) *1					
15A		HEAD (RH) *1					
15A		HEAD (LH-LWR) *2					
15A		HEAD (RH-LWR) *2					
15A		HEAD (LH-UPR) *2					
15A		HEAD (RH-UPR) *2					
60A		HTR					
7.5A		TRAC					
7.5A	DRL (for Canada)						
③	15A	ST-HTR					

↓ \* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 23)  
(4) : R/B No. 5 (See page 23) (5) : R/B No. 6 (See page 24)