



**AIR FUEL RATIO SENSOR**

(a) Measure the resistance between terminals HT and +B.

**Standard: 2.16 – 2.88  $\Omega$  at 20°C (68°F)**

(b) Measure the resistance between terminals HT and E1.

**Standard: 1 M $\Omega$  or more**