



1. REMOVE GENERATOR ASSY

- (a) Disconnect the generator connector.
- (b) Remove the nut, and disconnect the lead wire from terminal B.
- (c) Loosen the bolt A and B.
- (d) Loosen the bolt C to lessen the tension of the drive belt.
- (e) Remove the bolt A, B and the generator.

2. INSTALL GENERATOR ASSY

- (a) Temporarily install the bolt A and B.
- (b) Adjust the V-ribbed belt tension by tightening the adjusting bolt C. (See page 14-1)
- (c) Tighten the bolt A and B.

Torque:

Bolt A 58 N·m (592 kgf·cm, 43 ft·lbf)

Bolt B 18 N·m (184 kgf·cm, 13 ft·lbf)

- (d) Install the lead wire from terminal B.
Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)

3. INSPECT DRIVE BELT DEFLECTION AND TENSION(REFERENCE) (See page 14-1)