



TAILLIGHT

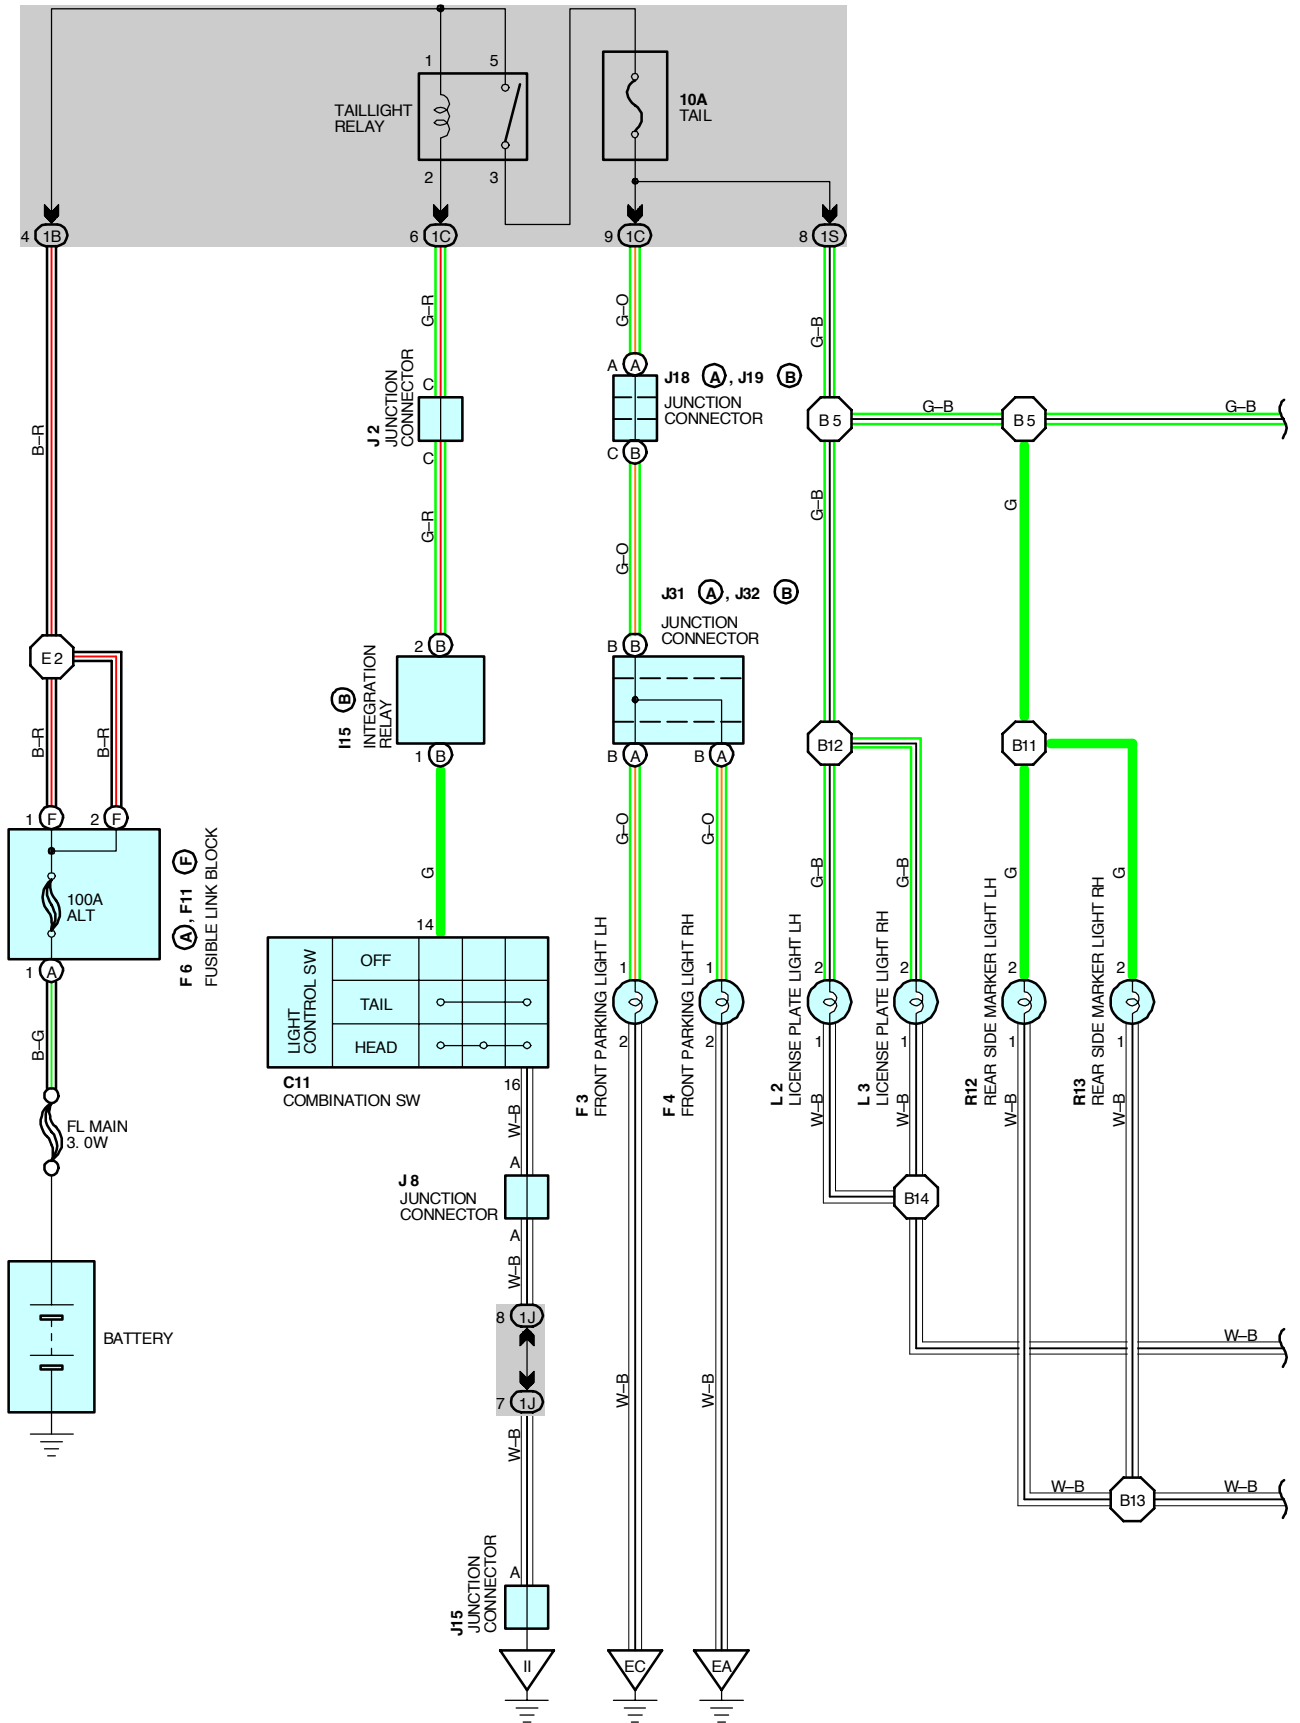

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

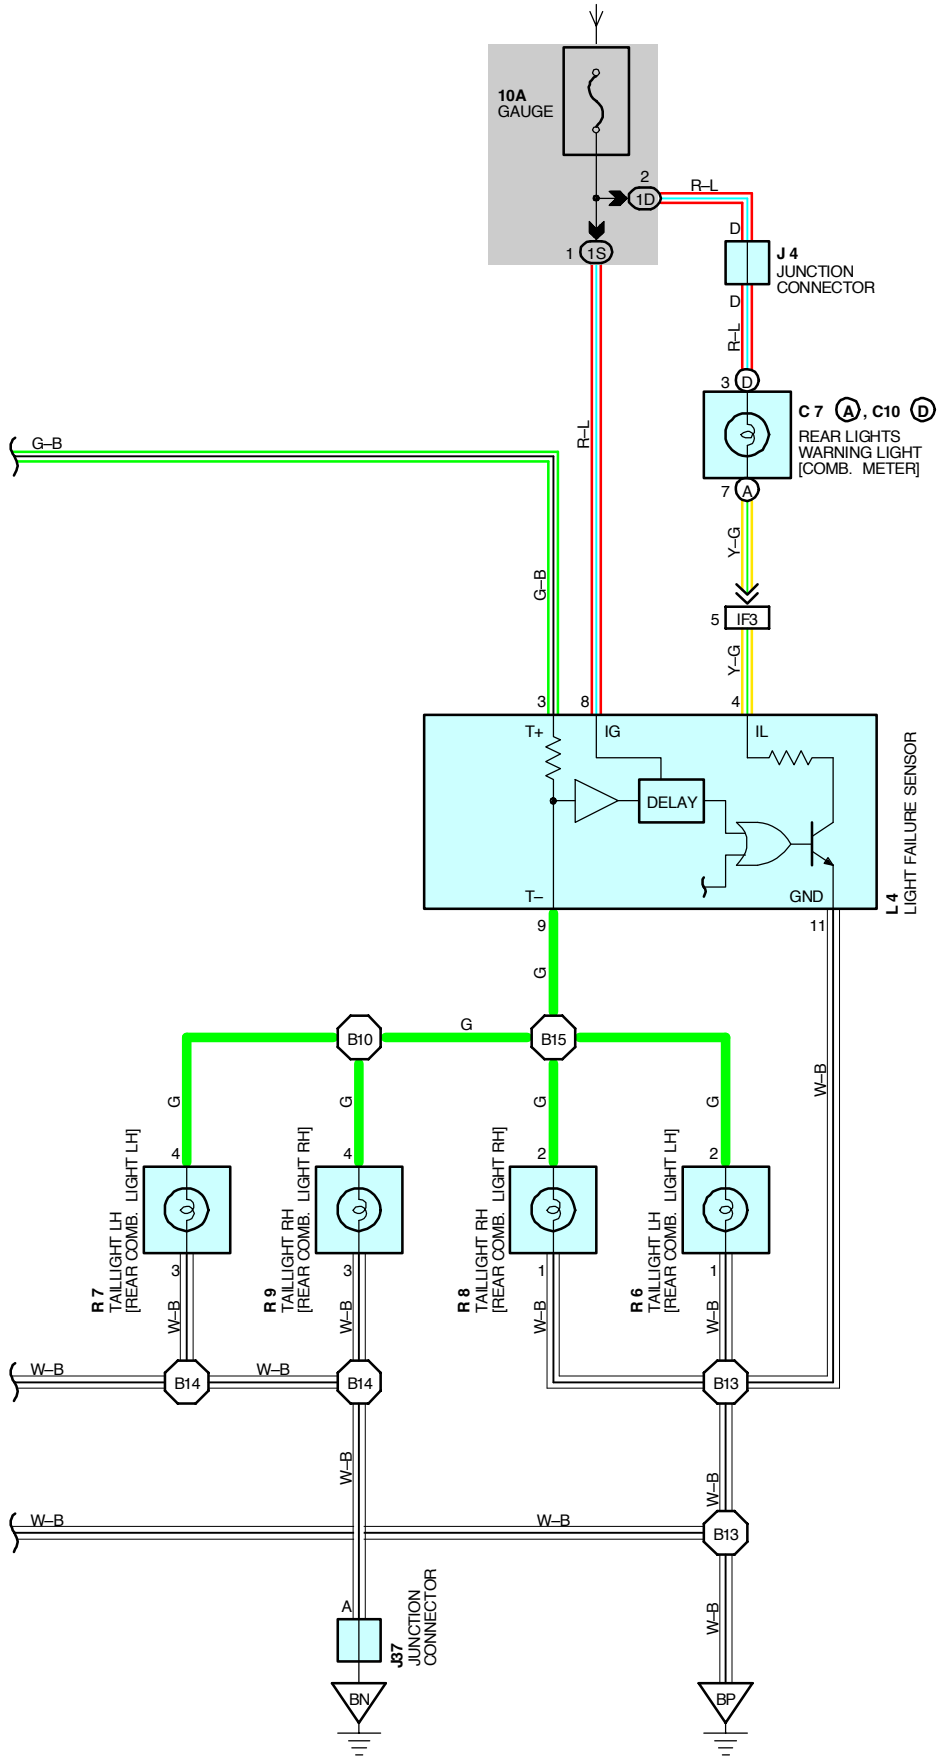

TAILLIGHT

SYSTEM OUTLINE

WHEN THE LIGHT CONTROL SW IS TURNED TO **TAIL** OR **HEAD** POSITION, THE CURRENT FLOWS TO **TERMINAL 3** OF THE LIGHT FAILURE SENSOR THROUGH THE **TAIL** FUSE.
 WHEN THE IGNITION SW IS TURNED ON, THE CURRENT FLOWS FROM THE **GAUGE** FUSE TO **TERMINAL 8** OF THE LIGHT FAILURE SENSOR, AND ALSO FLOWS THROUGH THE REAR LIGHT WARNING LIGHT TO **TERMINAL 4** OF THE LIGHT FAILURE SENSOR.

TAILLIGHT DISCONNECTION WARNING

WITH THE IGNITION SW ON AND THE LIGHT CONTROL SW TURNED TO **TAIL** OR **HEAD** POSITION, IF THE TAILLIGHT CIRCUIT IS OPEN, THE LIGHT FAILURE SENSOR DETECTS THE FAILURE BY THE CHANGE IN CURRENT FLOWING FROM **TERMINAL 3** OF THE LIGHT FAILURE SENSOR TO **TERMINAL 9** AND THE WARNING CIRCUIT OF THE LIGHT FAILURE SENSOR IS ACTIVATED.
 AS A RESULT, THE CURRENT FLOWS FROM **TERMINAL 4** OF THE LIGHT FAILURE SENSOR → **TERMINAL 11** → **GROUND** AND TURNS THE REAR LIGHTS WARNING LIGHT ON, WHICH REMAINS ON UNTIL THE LIGHT CONTROL SW IS TURNED OFF.

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

L4 LIGHT FAILURE SENSOR

4,8-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ON** POSITION

3-GROUND : APPROX. **12** VOLTS WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

11-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE		
C 7	A	28	J 4	29	L 3	30	
C10	D	28	J 8	29	L 4	30	
C11		28	J15	29	R 6	31	
F 3		26	J18	A	29	R 7	31
F 4		26	J19	B	29	R 8	31
F 6	A	26	J31	A	29	R 9	31
F11	F	26	J32	B	29	R12	31
I15	B	28	J37		30	R13	31
J 2		29	L 2		30		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	24	COWL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1C		
1D	24	INSTRUMENT PANEL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1J	24	COWL WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)
1S	24	FLOOR WIRE AND INSTRUMENT PANEL J/B (LOWER FINISH PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF3	36	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	RIGHT RADIATOR SIDE SUPPORT
EC	34	LEFT RADIATOR SIDE SUPPORT
II	36	INSTRUMENT PANEL BRACE LH
BN	40	UNDER THE LEFT CENTER PILLAR
BP	40	BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	34	COWL WIRE	B12	40	FLOOR WIRE
B10	40	FLOOR WIRE	B13		
B11			B14		


C 7 (A) BLUE

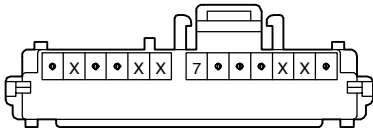

C10 (D) BROWN

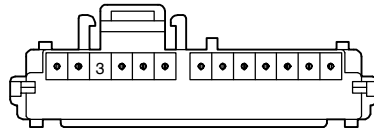

C11

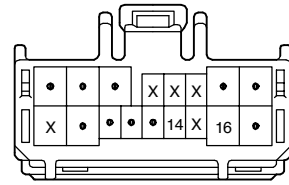


F 3 GRAY




F 4 GRAY



 
F 6 (A)




F11 (F)

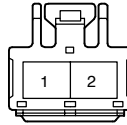

I15 (B)

 


J 2 BLACK

 


(HINT : SEE PAGE 7)

 J 4 BLACK




(HINT : SEE PAGE 7)

J 8 GRAY

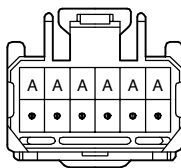


(HINT : SEE PAGE 7)

 J15




(HINT : SEE PAGE 7)

J18 (A) BLACK

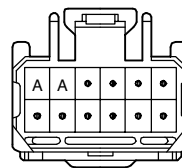


(HINT : SEE PAGE 7)

J19 (B) BLACK

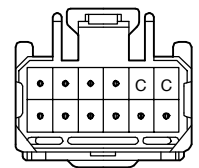


(HINT : SEE PAGE 7)

J31 (A)

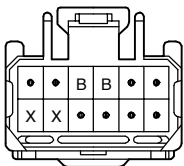


(HINT : SEE PAGE 7)

J32 (B)

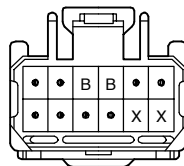

(HINT : SEE PAGE 7)

 J37



(HINT : SEE PAGE 7)

 
L 2 GRAY




L 3 GRAY




L 4




R 6 GRAY

 


R 7

 


R 8 GRAY

 

R 9

 

R12 GRAY

 

R13 GRAY

