

| | | |
|---|--------------------|-------------------------|
| Last Modified: 7-13-2007 | | 1.7 A |
| Service Category: Vehicle Interior | Section: Seat Belt | |
| Model Year: 2008 | Model: ES350 | Doc ID: RM000001P0100IX |
| Title: SEAT BELT: REAR SEAT INNER BELT ASSEMBLY: REMOVAL (2008 ES350) | | |

REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Rear Seat Side Airbag)

CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent airbag deployment [INFO](#) .

2. REMOVE REAR SEAT CUSHION ASSEMBLY [INFO](#)

3. REMOVE REAR SEAT INNER WITH CENTER BELT ASSEMBLY LH

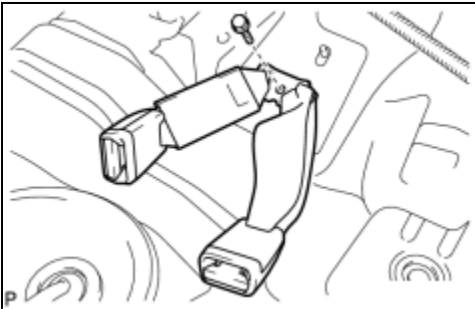

(a) Remove the bolt and the rear seat inner with center belt assembly LH.

4. REMOVE REAR SEAT HEADREST ASSEMBLY

5. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY

6. REMOVE REAR SEATBACK ASSEMBLY [INFO](#)

7. REMOVE REAR DOOR SCUFF PLATE LH [INFO](#)

8. REMOVE REAR DOOR SCUFF PLATE RH [INFO](#)

9. REMOVE REAR SEAT SIDE GARNISH LH (w/o Rear Seat Side Airbag) [INFO](#)

10. REMOVE REAR SEAT SIDE GARNISH RH (w/o Rear Seat Side Airbag) [INFO](#)

11. REMOVE REAR SEAT SIDE AIRBAG ASSEMBLY LH (w/ Rear Seat Side Airbag) [INFO](#)

12. REMOVE REAR SEAT SIDE AIRBAG ASSEMBLY RH (w/ Rear Seat Side Airbag)


HINT:

Use the same procedure for the RH side and the LH side.

13. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH [INFO](#)

14. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH INFO

15. DISCONNECT REAR SEAT 3 POINT TYPE BELT ASSEMBLY LH

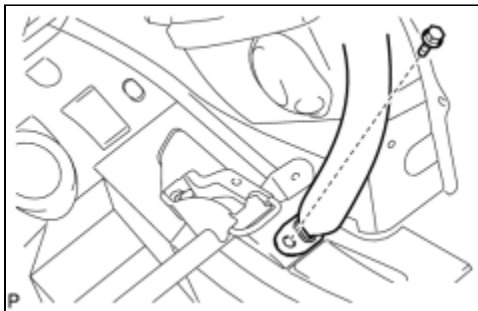


(a) Remove the bolt and disconnect the floor end of the rear seat 3 point type belt assembly LH.

16. DISCONNECT REAR SEAT 3 POINT TYPE BELT ASSEMBLY RH

HINT:


Use the same procedure for the RH side and the LH side.

17. DISCONNECT REAR SEAT INNER WITH CENTER BELT ASSEMBLY RH

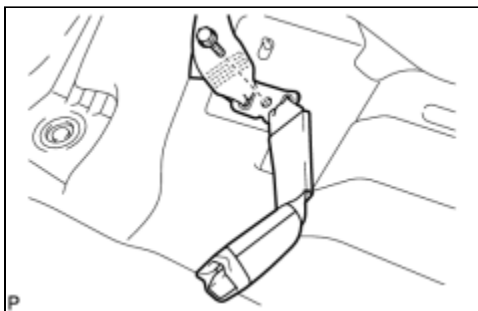

(a) Remove the bolt and disconnect the floor end of the rear seat inner with center belt assembly RH.

18. REMOVE REAR SEAT SHOULDER BELT HOLE COVER

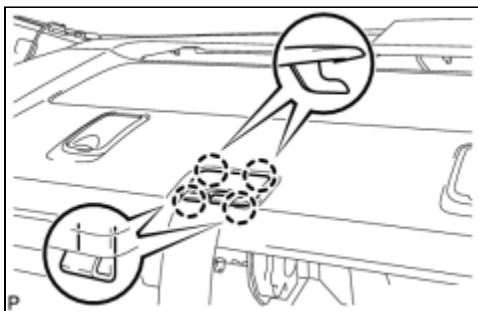


(a) Disengage the 4 claws and remove the rear seat shoulder belt hole cover.

HINT:

Use the same procedure for the other 2 rear seat shoulder belt hole covers.

19. REMOVE CENTER STOP LIGHT SET (w/o Rear Sunshade) INFO

20. REMOVE PACKAGE TRAY TRIM PANEL ASSEMBLY (w/o Rear Sunshade)

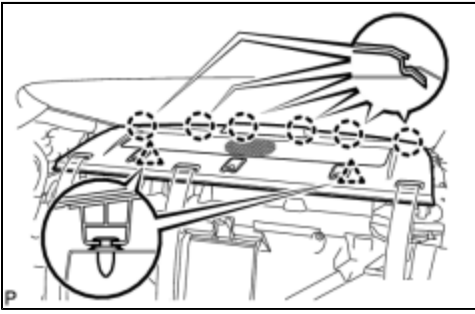

(a) Disengage the 2 clips.

(b) Pass the 3 rear seat belt floor anchors through the package tray trim panel assembly.

(c) Disengage the 6 claws and remove the package tray trim panel assembly.

21. REMOVE PACKAGE TRAY TRIM PANEL ASSEMBLY (w/ Rear Sunshade)

INFO

22. REMOVE REAR SEAT INNER WITH CENTER BELT ASSEMBLY RH



(a) Remove the bolt and the rear seat inner with center belt assembly RH.

