

Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Sliding Roof/Convertible	
Model Year: 2008	Model: ES350	Doc ID: RM000001F2C00RX
Title: SLIDING ROOF: SLIDING ROOF HOUSING (for Standard): REMOVAL (2008 ES350)		

REMOVAL

1. REMOVE REAR SEAT CUSHION ASSEMBLY [INFO](#)
2. REMOVE REAR SEAT HEADREST ASSEMBLY
3. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY
4. REMOVE REAR SEATBACK ASSEMBLY [INFO](#)
5. REMOVE SEAT BELT ANCHOR COVER CAP LH [INFO](#)
6. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY LH [INFO](#)
7. REMOVE FRONT SEAT HEADREST ASSEMBLY (for Driver Seat)
8. REMOVE FRONT SEAT OUTER TRACK BRACKET COVER LH [INFO](#)
9. REMOVE FRONT SEAT INNER TRACK BRACKET COVER LH [INFO](#)
10. REMOVE FRONT SEAT REAR OUTER TRACK BRACKET COVER LH [INFO](#)
11. REMOVE FRONT SEAT REAR INNER TRACK BRACKET COVER LH [INFO](#)
12. REMOVE FRONT SEAT ASSEMBLY LH [INFO](#)
13. REMOVE SEAT BELT ANCHOR COVER CAP RH [INFO](#)
14. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY RH [INFO](#)
15. REMOVE FRONT SEAT HEADREST ASSEMBLY (for Front Passenger Seat)
16. REMOVE FRONT SEAT OUTER TRACK BRACKET COVER RH [INFO](#)
17. REMOVE FRONT SEAT INNER TRACK BRACKET COVER RH [INFO](#)
18. REMOVE FRONT SEAT REAR OUTER TRACK BRACKET COVER RH [INFO](#)
19. REMOVE FRONT SEAT REAR INNER TRACK BRACKET COVER RH [INFO](#)
20. REMOVE FRONT SEAT ASSEMBLY RH [INFO](#)
21. REMOVE FRONT DOOR SCUFF PLATE LH [INFO](#)

22. REMOVE FRONT DOOR OPENING TRIM COVER LH [INFO](#)
23. REMOVE SIDE INSTRUMENT PANEL LH [INFO](#)
24. REMOVE FRONT PILLAR GARNISH LH [INFO](#)
25. REMOVE REAR DOOR SCUFF PLATE LH [INFO](#)
26. REMOVE LOWER CENTER PILLAR GARNISH LH [INFO](#)
27. REMOVE UPPER CENTER PILLAR GARNISH LH [INFO](#)
28. REMOVE REAR SEAT SIDE GARNISH LH (w/o Rear Seat Side Airbag) [INFO](#)
29. REMOVE REAR SEAT SIDE AIRBAG ASSEMBLY LH (w/ Rear Seat Side Airbag) [INFO](#)
30. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH [INFO](#)
31. REMOVE FRONT DOOR SCUFF PLATE RH [INFO](#)
32. REMOVE FRONT DOOR OPENING TRIM COVER RH [INFO](#)
33. REMOVE SIDE INSTRUMENT PANEL RH [INFO](#)
34. REMOVE FRONT PILLAR GARNISH RH [INFO](#)
35. REMOVE REAR DOOR SCUFF PLATE RH [INFO](#)
36. REMOVE LOWER CENTER PILLAR GARNISH RH [INFO](#)
37. REMOVE UPPER CENTER PILLAR GARNISH RH [INFO](#)
38. REMOVE REAR SEAT SIDE GARNISH RH (w/o Rear Seat Side Airbag) [INFO](#)
39. REMOVE REAR SEAT SIDE AIRBAG ASSEMBLY RH (w/ Rear Seat Side Airbag) [INFO](#)
40. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH [INFO](#)
41. REMOVE INSTRUMENT PANEL FINISH PANEL END LH [INFO](#)
42. REMOVE INSTRUMENT PANEL FINISH PANEL END RH [INFO](#)
43. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY [INFO](#)
44. REMOVE UPPER CONSOLE PANEL ASSEMBLY WITH FRONT ASH RECEPTACLE [INFO](#)
45. REMOVE HEATER SEAT SWITCH CONSOLE BASE (w/o Seat Heater System) [INFO](#)

46. REMOVE HEATER SEAT SWITCH CONSOLE BASE (w/ Seat Heater System) [INFO](#)
47. REMOVE CONSOLE BOX POCKET [INFO](#)
48. REMOVE CONSOLE BOX CARPET [INFO](#)
49. REMOVE CONSOLE REAR END PANEL SUB-ASSEMBLY [INFO](#)
50. REMOVE REAR CONSOLE BOX ASSEMBLY [INFO](#)
51. REMOVE NO. 2 CONSOLE BOX DUCT [INFO](#)
52. REMOVE NO. 3 CONSOLE BOX DUCT [INFO](#)
53. DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY [INFO](#)
54. REMOVE SHIFT LEVER ASSEMBLY [INFO](#)
55. REMOVE FLOOR CARPET BRACKET LH [INFO](#)
56. REMOVE FLOOR CARPET BRACKET RH [INFO](#)
57. REMOVE LUGGAGE COMPARTMENT FLOOR MAT (w/ DVD Player)
58. REMOVE SPARE WHEEL COVER TRAY (w/ DVD Player)
59. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (w/ DVD Player) [INFO](#)
60. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK (w/ DVD Player) [INFO](#)
61. REMOVE REAR FLOOR FINISH PLATE (w/ DVD Player) [INFO](#)
62. REMOVE LUGGAGE COMPARTMENT INNER TRIM COVER RH (w/ DVD Player) [INFO](#)
63. DISCONNECT STEREO COMPONENT AMPLIFIER ASSEMBLY CONNECTOR (w/ DVD Player) [INFO](#)
64. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER [INFO](#)
65. REMOVE RAIN SENSOR COVER (w/ Rain Sensor) [INFO](#)
66. REMOVE ROOF CONSOLE BOX ASSEMBLY [INFO](#)
67. REMOVE VISOR BRACKET COVER [INFO](#)
68. REMOVE VISOR ASSEMBLY LH [INFO](#)
69. REMOVE VISOR ASSEMBLY RH [INFO](#)
70. REMOVE VISOR HOLDER [INFO](#)

71. REMOVE COAT HOOK



72. REMOVE SPOT LIGHT ASSEMBLY



73. REMOVE ASSIST GRIP SUB-ASSEMBLY



74. REMOVE ROOF HEADLINING ASSEMBLY



75. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY LH




76. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

77. REMOVE SLIDING ROOF SIDE GARNISH LH

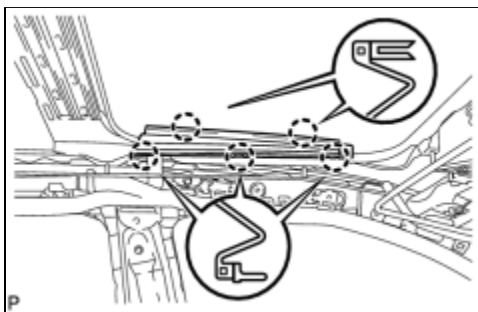

(a) Disengage the 5 claws and remove the sliding roof side garnish LH.


78. REMOVE SLIDING ROOF SIDE GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.


79. REMOVE SLIDING ROOF GLASS SUB-ASSEMBLY

(a) Using a T25 "TORX" driver, remove the 4 screws and sliding roof glass sub-assembly.

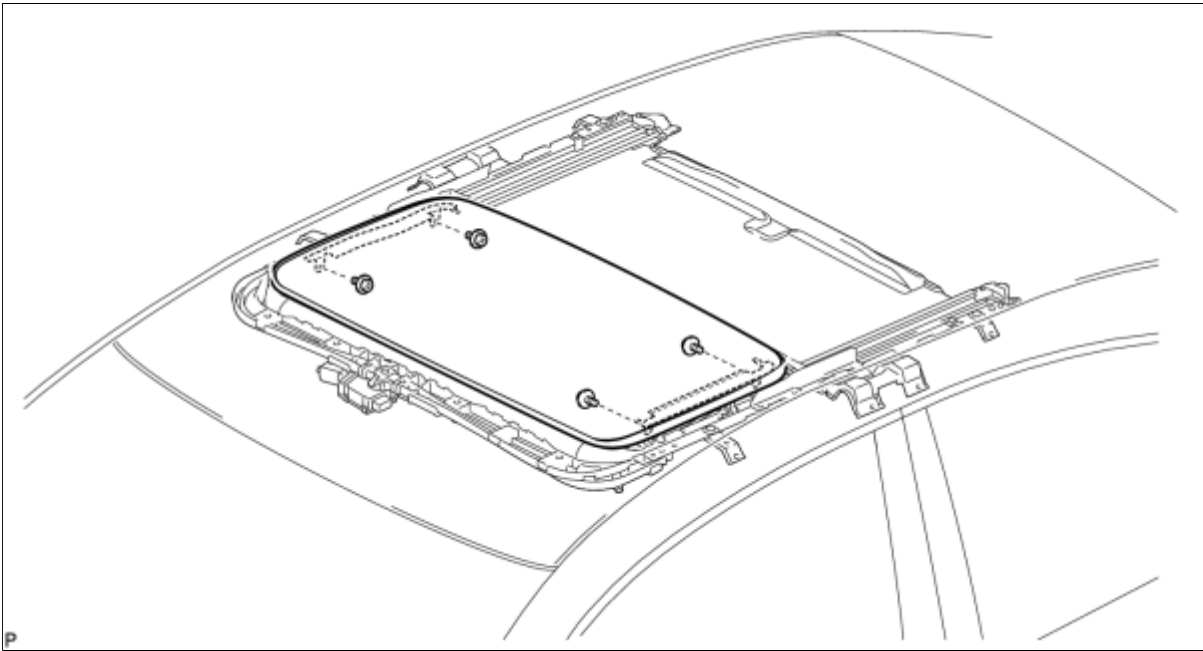

80. REMOVE SLIDING ROOF HOUSING SUB-ASSEMBLY

- (a) Disconnect the 4 sliding roof drain hoses.
- (b) Remove the 8 bolts, 8 nuts, and sliding roof housing sub-assembly.

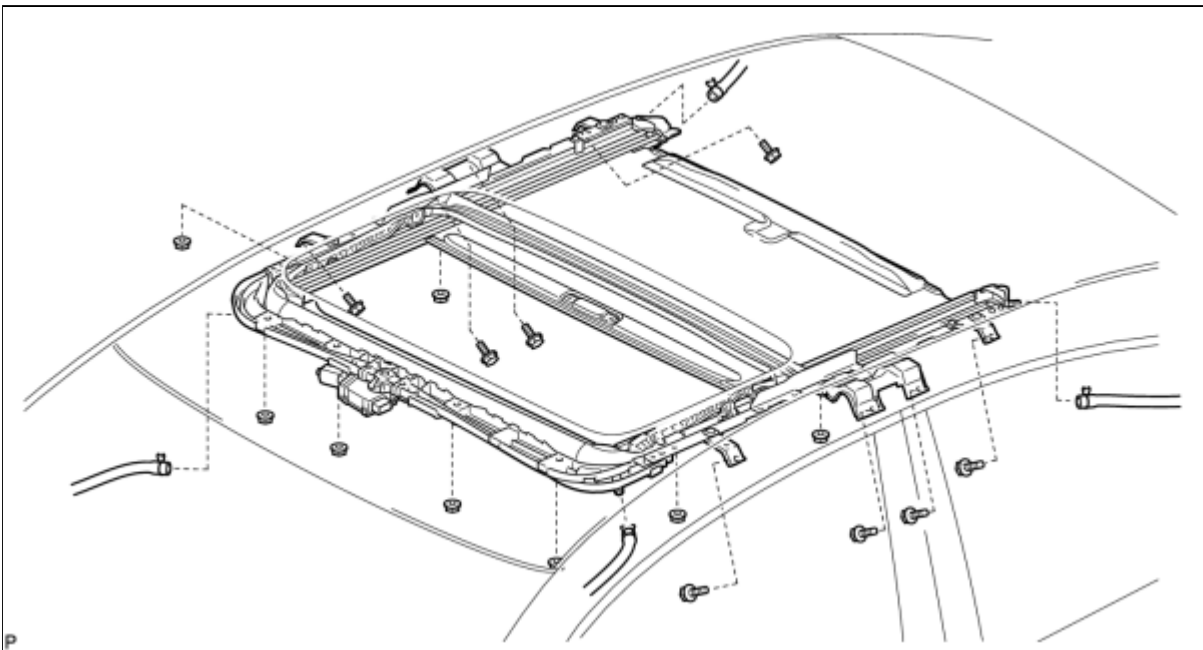

81. REMOVE SLIDING ROOF WEATHERSTRIP

- (a) Remove the sliding roof weatherstrip from the sliding roof glass sub-assembly.

