


Last Modified: 7-13-2007		1.6 G
Service Category: Vehicle Exterior	Section: Door/Hatch	
Model Year: 2008	Model: ES350	Doc ID: RM000001UM200MX
Title: ENGINE HOOD / DOOR: LUGGAGE COMPARTMENT DOOR OPENER OUTER SWITCH: INSPECTION (2008 ES350)		

INSPECTION

1. INSPECT LUGGAGE KEY ELECTRICAL SWITCH

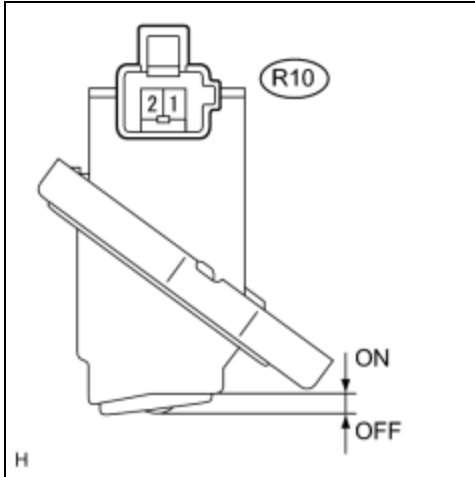

(a) Disconnect the switch connector.

(b) Measure the resistance according to the value(s) in the table below.

Standard resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
R10-1 - R10-2	Luggage compartment open switch not pushed (OFF)	10 k Ω or higher
	Luggage compartment open switch pushed (ON)	Below 1 Ω

