

■ ENTRY FUNCTION

1. System Diagram

The certification ECU controls the entry function. The system diagram below shows the main components that relate to the function.

