

Last Modified: 7-13-2007		1.6 A
Service Category: Suspension	Section: Front Suspension	
Model Year: 2008	Model: ES350	Doc ID: RM0000011DP00SX
Title: SUSPENSION: FRONT STABILIZER BAR: REMOVAL (2008 ES350)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

3. REMOVE FRONT WHEELS


4. SEPARATE STEERING INTERMEDIATE SHAFT ASSEMBLY

INFO

5. SEPARATE TIE ROD END SUB-ASSEMBLY

INFO

6. REMOVE FRONT STABILIZER LINK ASSEMBLY LH

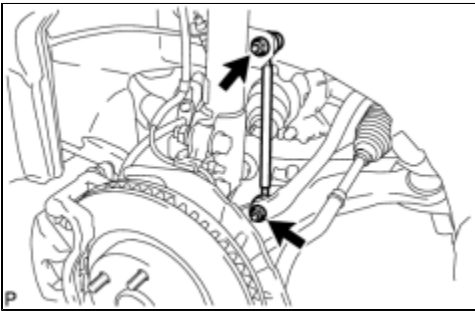


(a) Remove the 2 nuts and the front stabilizer link assembly LH.

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (6 mm) to hold the stud.

7. REMOVE FRONT STABILIZER LINK ASSEMBLY RH

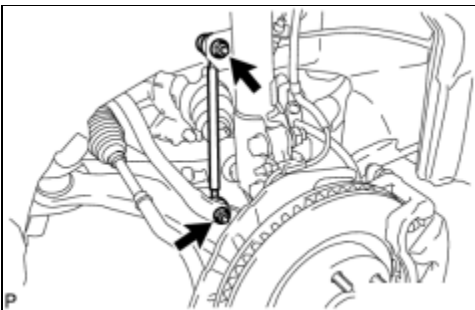

(a) Remove the 2 nuts and the front stabilizer link assembly RH.

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (6 mm) to hold the stud.


8. REMOVE ENGINE ASSEMBLY WITH TRANSAXLE

HINT:

Refer to the instructions for removal of the engine assembly


INFO

9. REMOVE FRONT NO. 1 STABILIZER BRACKET LH

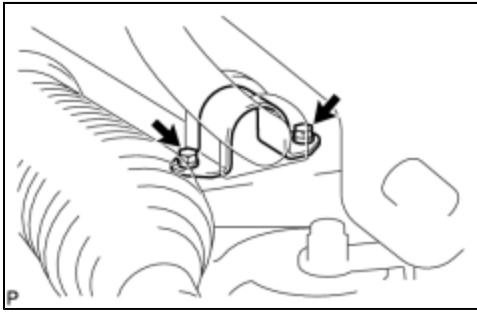

(a) Remove the 2 bolts and the front No. 1 stabilizer bracket LH from the front frame assembly.

10. REMOVE FRONT NO. 1 STABILIZER BRACKET RH

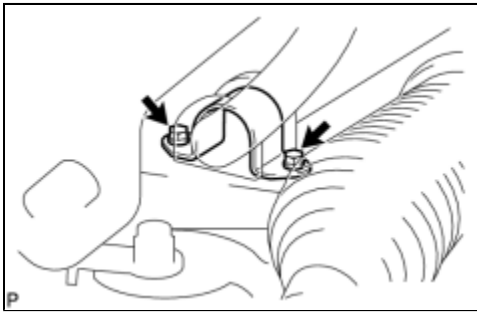

(a) Remove the 2 bolts and the front No. 1 stabilizer bracket RH from the front frame assembly.

11. REMOVE FRONT NO. 1 STABILIZER BAR BUSHING

(a) Remove the 2 front No. 1 stabilizer bar bushings from the front stabilizer bar.

12. REMOVE FRONT STABILIZER BAR

