


Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Lighting (ext)	
Model Year: 2008	Model: ES350	Doc ID: RM000002E6R002X
Title: LIGHTING: TURN SIGNAL FLASHER ASSEMBLY: REMOVAL (2008 ES350)		

REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATE LH [INFO](#)
2. REMOVE FRONT DOOR OPENING TRIM COVER LH [INFO](#)
3. REMOVE SIDE INSTRUMENT PANEL LH [INFO](#)
4. REMOVE INSTRUMENT PANEL FINISH PANEL END LH [INFO](#)
5. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY [INFO](#)
6. REMOVE NO. 1 SWITCH HOLE BASE [INFO](#)
7. REMOVE TURN SIGNAL FLASHER ASSEMBLY

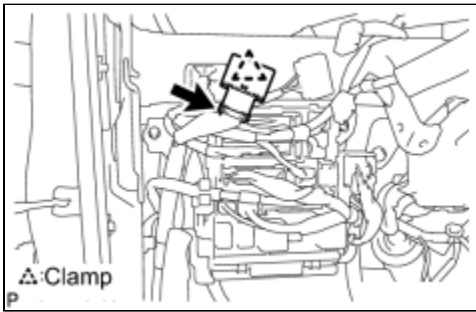

(a) Disconnect the connector.

(b) Remove the clamp and the turn signal flasher assembly.

