


POWER DISTRIBUTOR

DESCRIPTION

- The power distributor is built into the engine room relay block, and uses a small mechanical relay and semiconductor relay for a compact and lightweight design.
- The power distributor has a headlight control function. This function dims the headlights (Hi beam) in accordance with operation signals from the main body ECU while the daytime running light system is operating. For details, see page BE-36.

Engine Room Relay Block

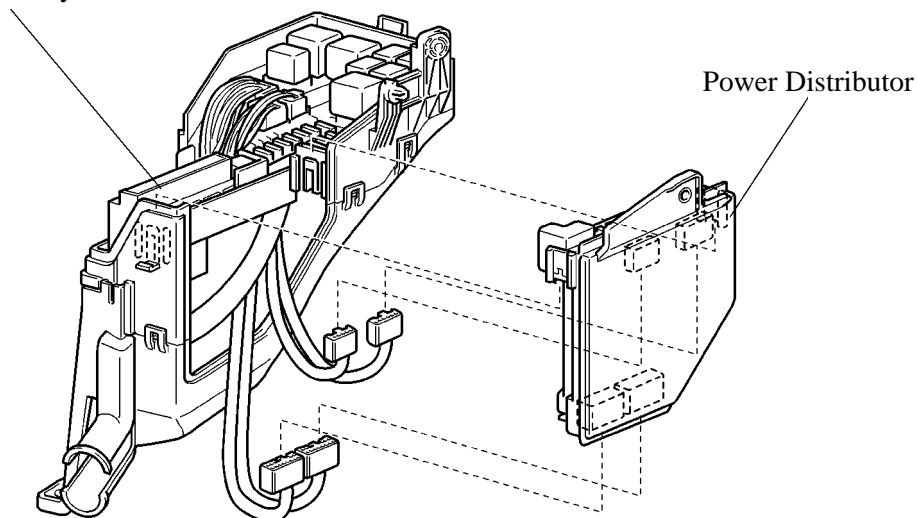

01YBE09Y

- The components of the power distributor are shown below.

Component	Relay
Mechanical Relay	<ul style="list-style-type: none"> ● Horn Relay ● A/F Relay ● Security Horn Relay ● EFI Relay ● Circuit Opening Relay ● Headlight Relay (RH)*1 ● Headlight Relay (LH)*1
Semiconductor Relay	<ul style="list-style-type: none"> ● Daytime Running Light Relay (Headlight HI Beam Relay) ● Headlight Relay (RH)*2 ● Headlight Relay (LH)*2

*1: Models with halogen type headlight

*2: Models with HID type headlight