

Last Modified: 7-13-2007		1.6 G
Service Category: Audio/Visual/Telematics		Section: Audio/Video
Model Year: 2008	Model: ES350	Doc ID: RM0000020Q500DX
Title: AUDIO / VISUAL: FRONT CENTER SPEAKER: ON-VEHICLE INSPECTION (2008 ES350)		

ON-VEHICLE INSPECTION

1. INSPECT FRONT STEREO COMPONENT SPEAKER

HINT:

Remove interior parts so that the front stereo component speaker can be seen.

(a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the front stereo component speaker.

(b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the front stereo component speaker.

(c) Speaker resistance check

(1) Disconnect the front stereo component speaker connector.

(2) Measure the resistance between the terminals of the speaker.

Standard resistance:

7 to 9 Ω

If the result is not as specified, replace the front stereo component speaker.

