 
 


- \* 1 : 14 Speaker
- \* 2 : 8 Speaker
- \* 3 : w/ Bluetooth w/o LEXUS Navigation System
- \* 4 : w/ LEXUS Navigation System
- \* 6 : w/ DVD Changer

 
 
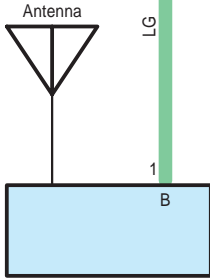 


 
E69(A), E70(B), E71(C), E72(D), E73(E), E74(F), f1(G)  
Radio Receiver Assembly

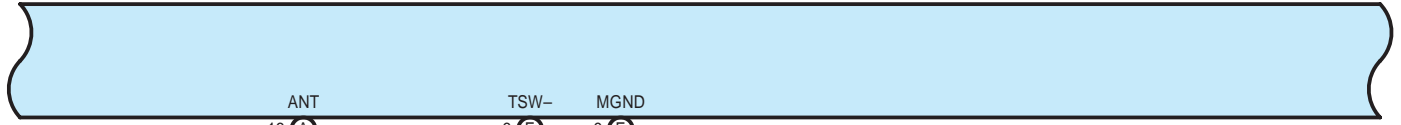 


E10  
Antenna Amplifier


- \* 1 : 14 Speaker
- \* 2 : 8 Speaker
- \* 3 : w/ Bluetooth w/o LEXUS Navigation System
- \* 4 : w/ LEXUS Navigation System
- \* 5 : w/ Bluetooth

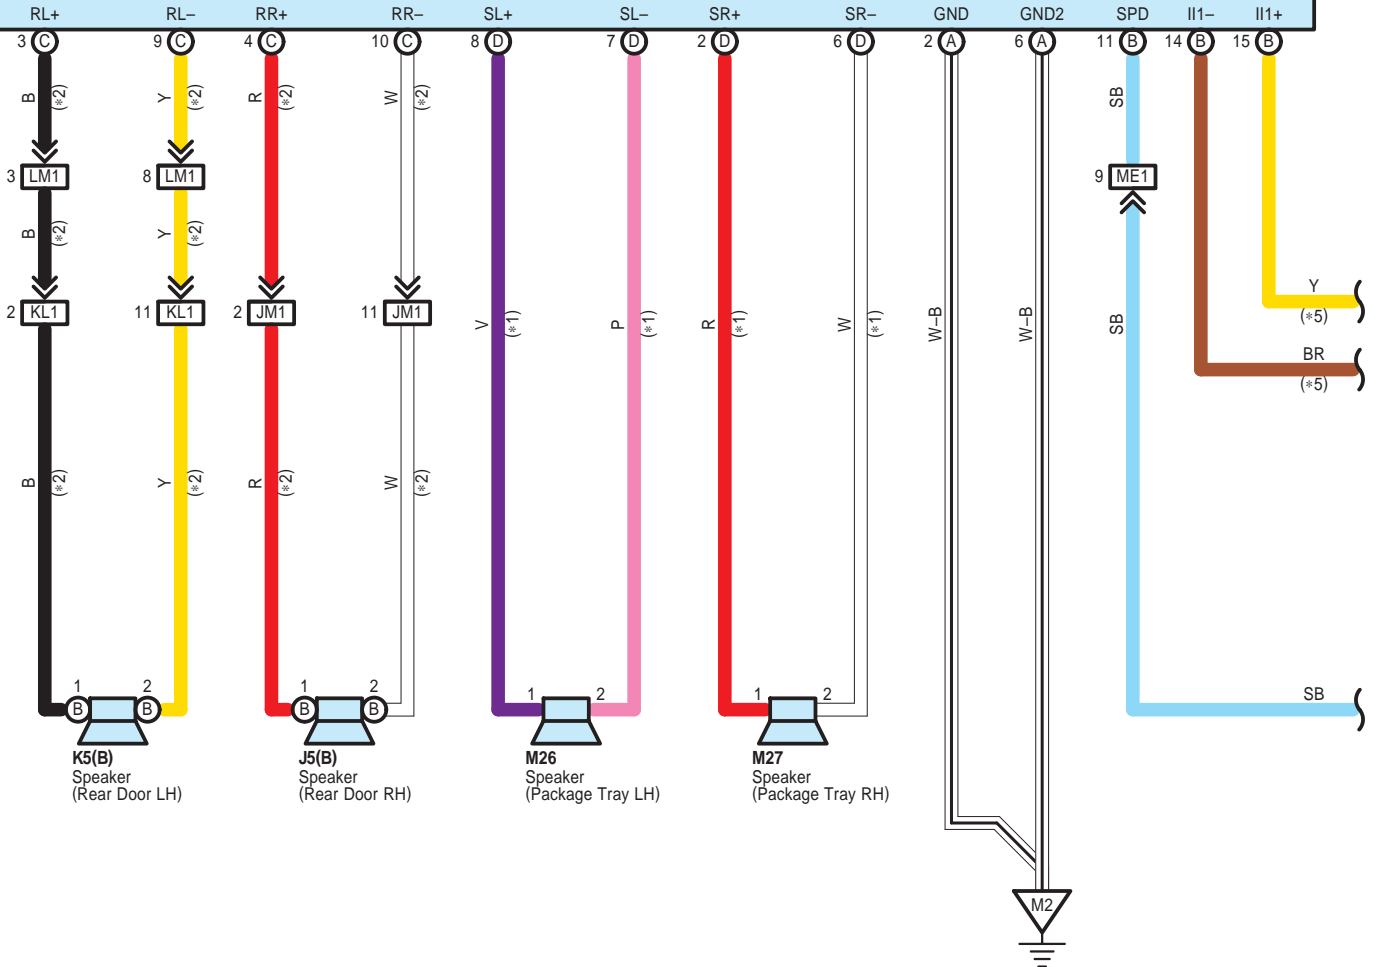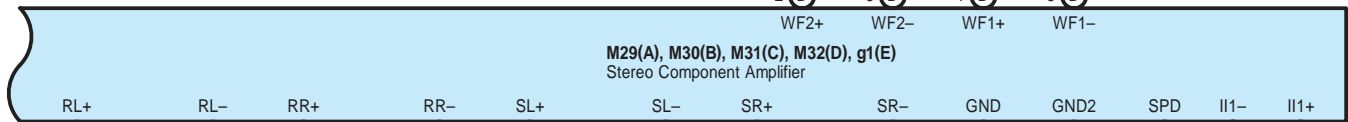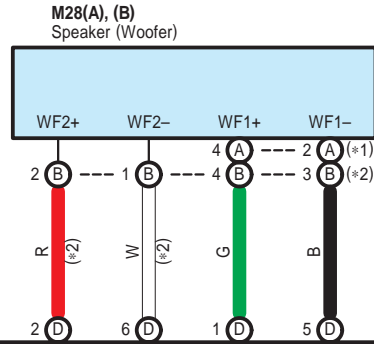


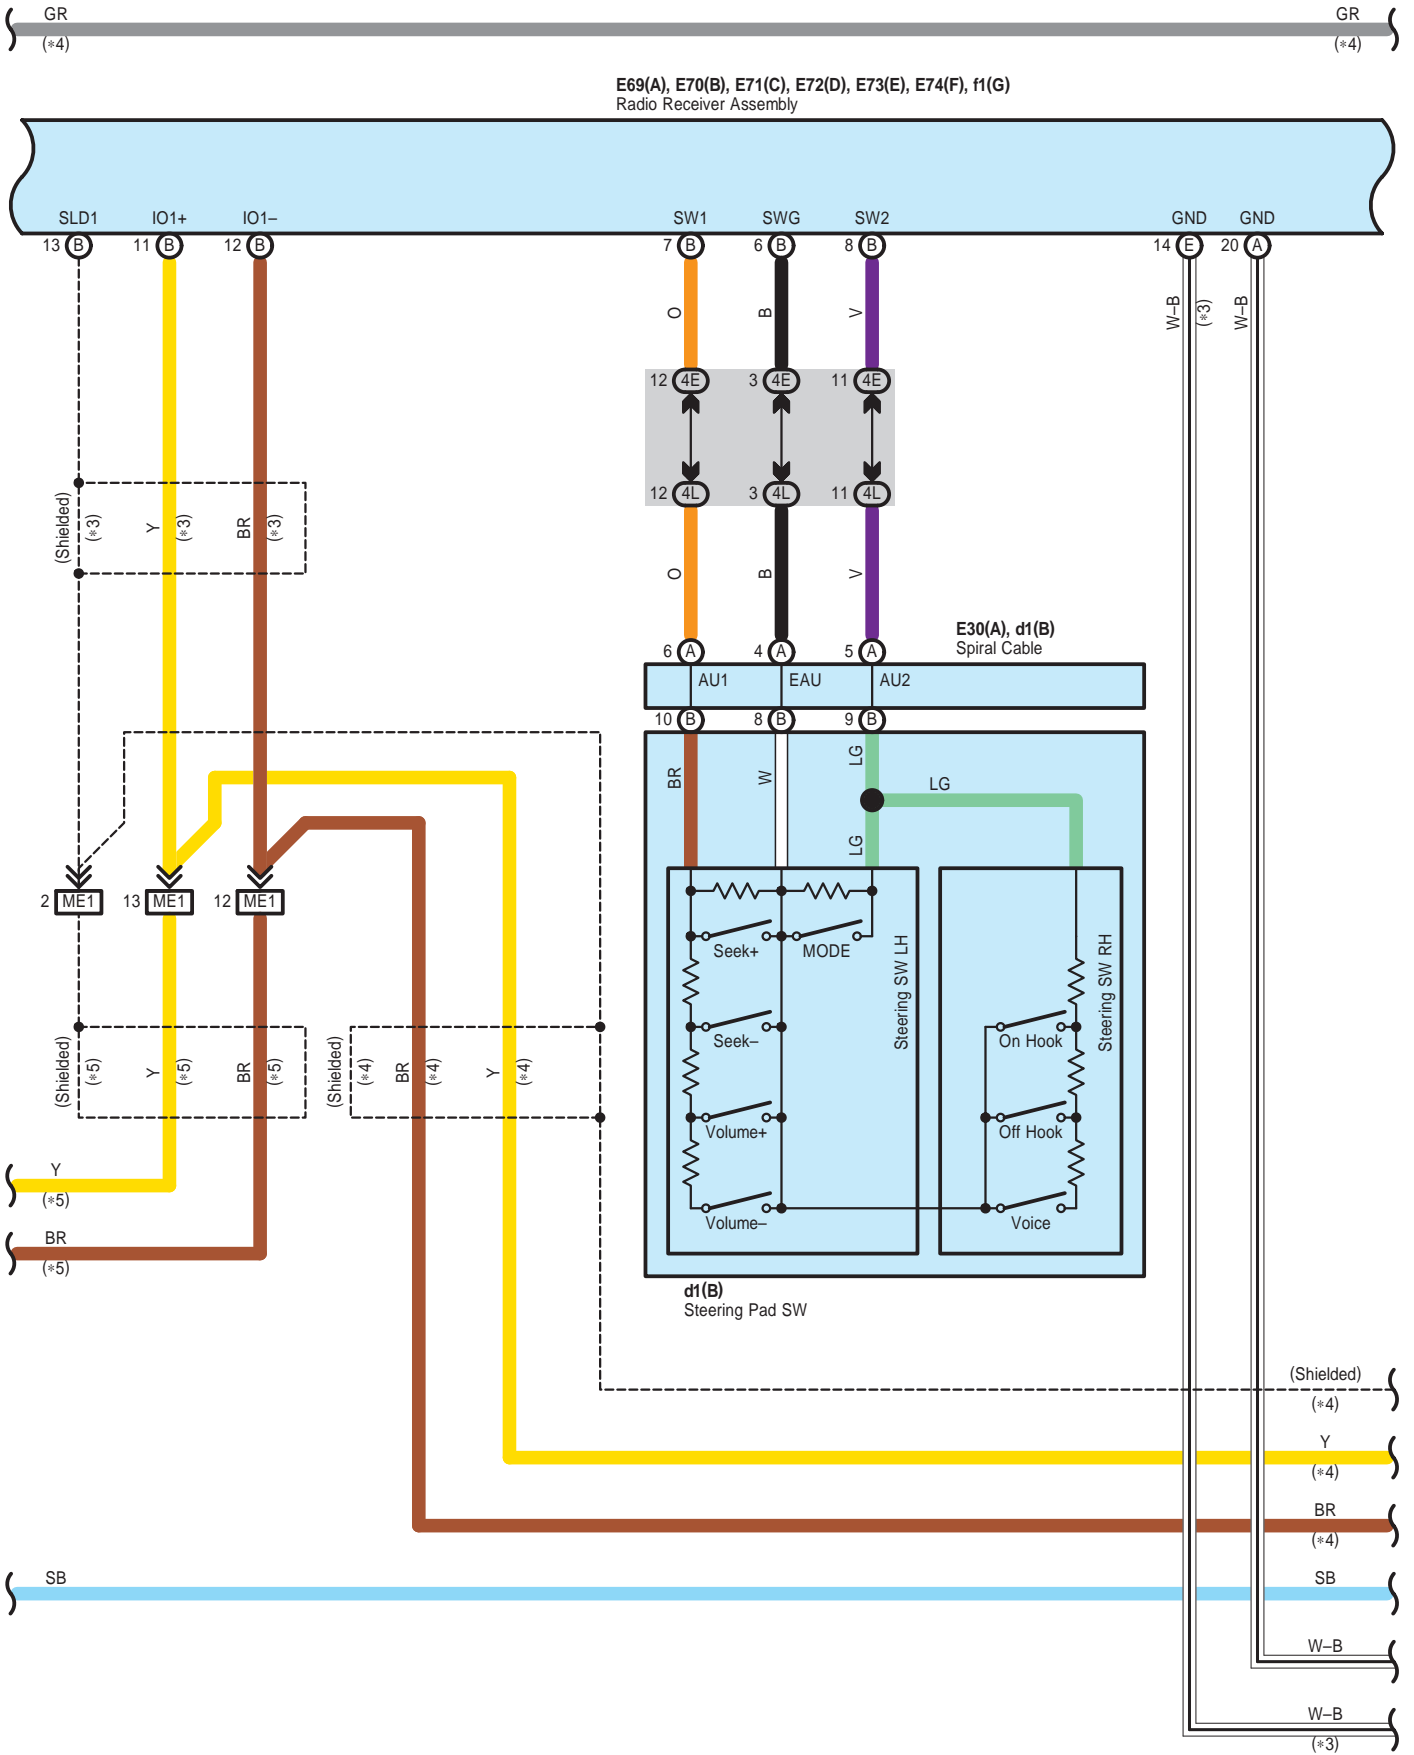


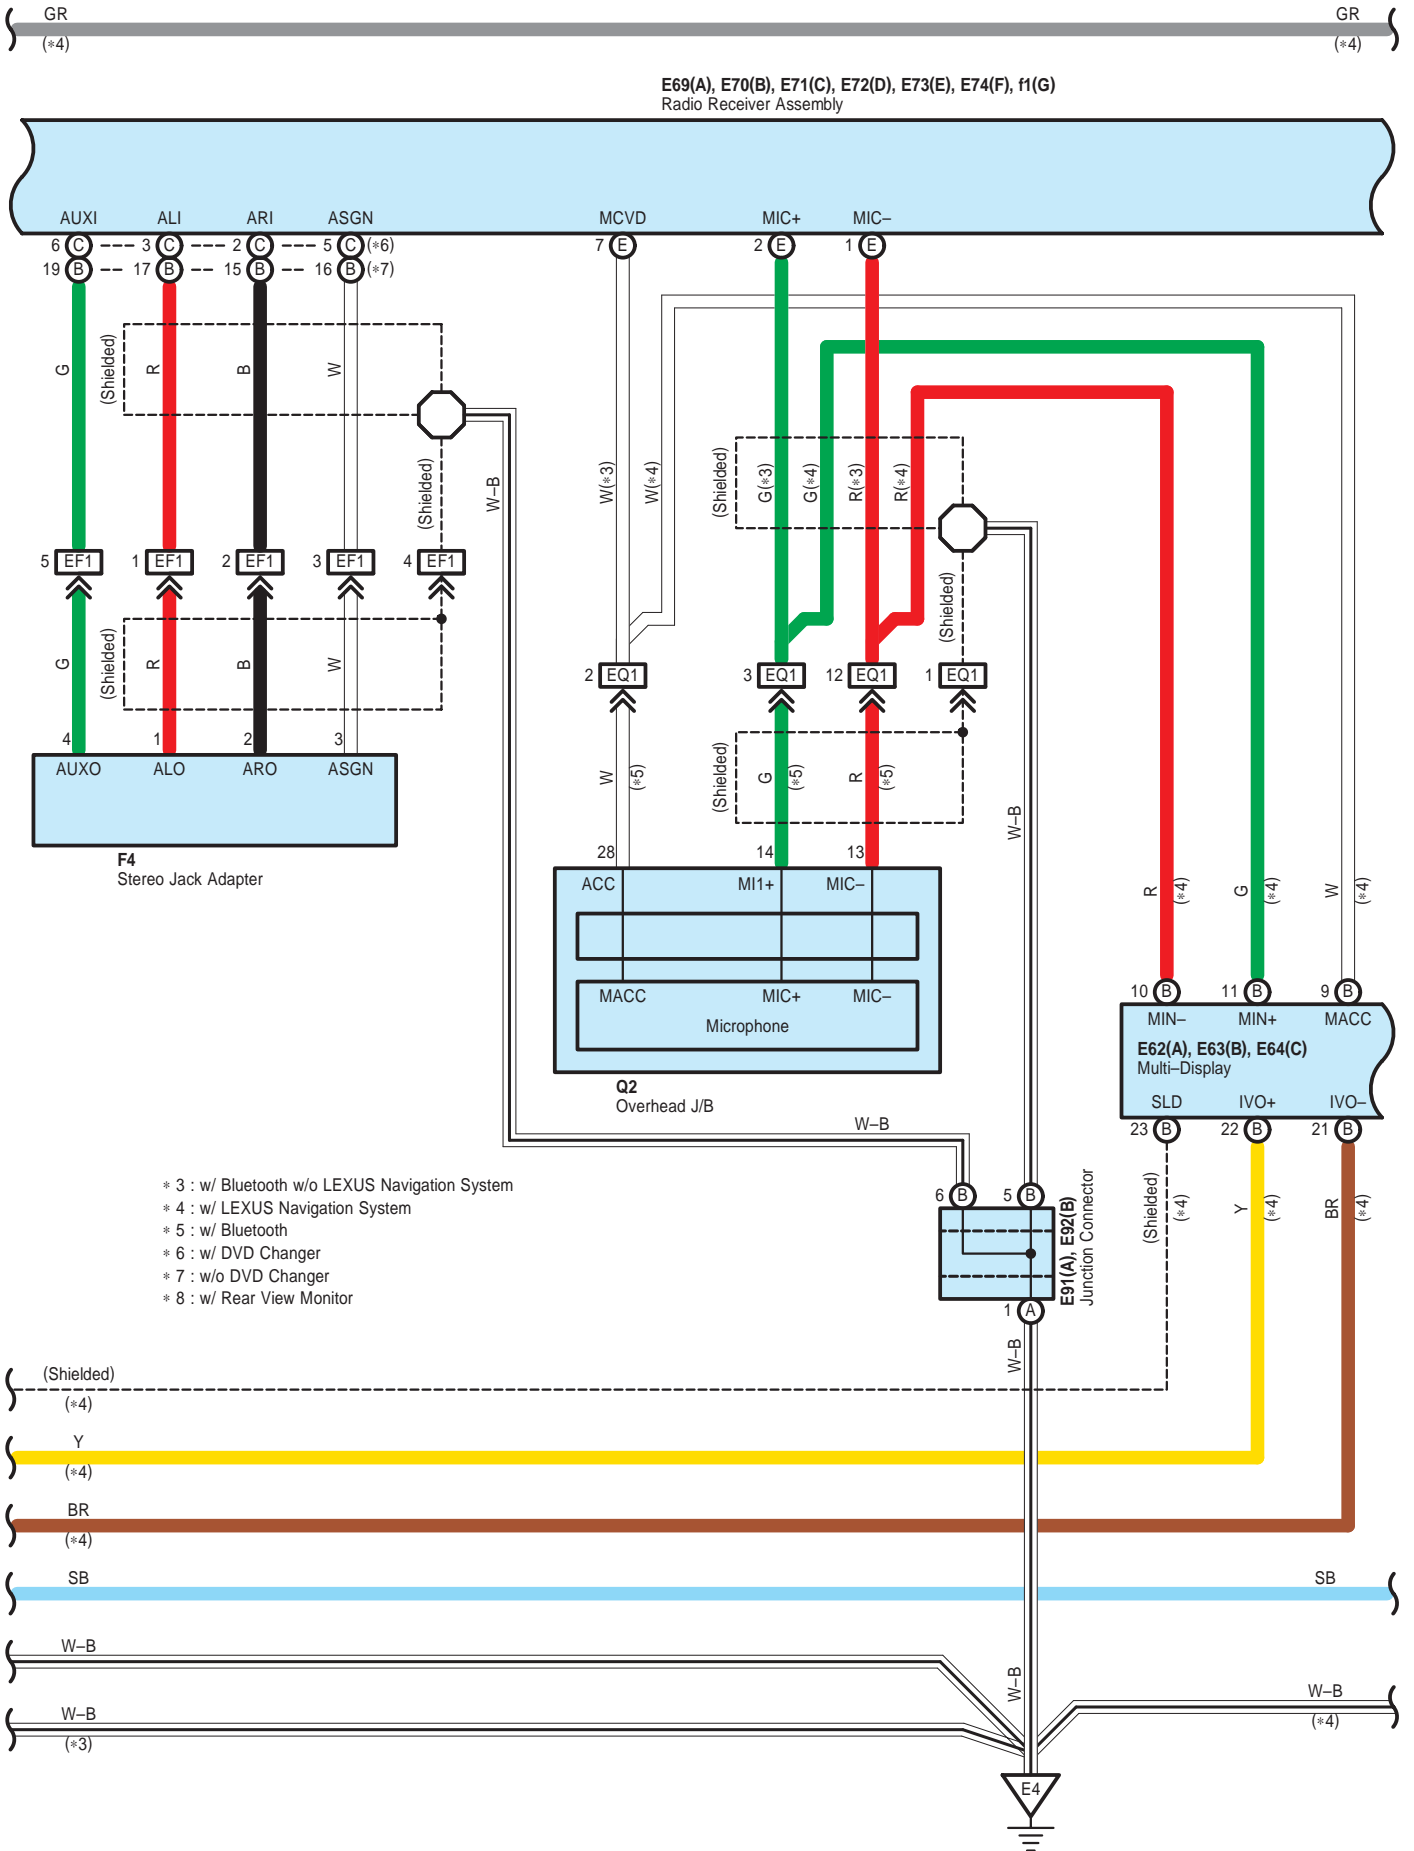

   - \* 3 : w/ Bluetooth w/o LEXUS Navigation System
- \* 4 : w/ LEXUS Navigation System
- \* 5 : w/ Bluetooth
- \* 6 : w/ DVD Changer
- \* 7 : w/o DVD Changer
- \* 8 : w/ Rear View Monitor

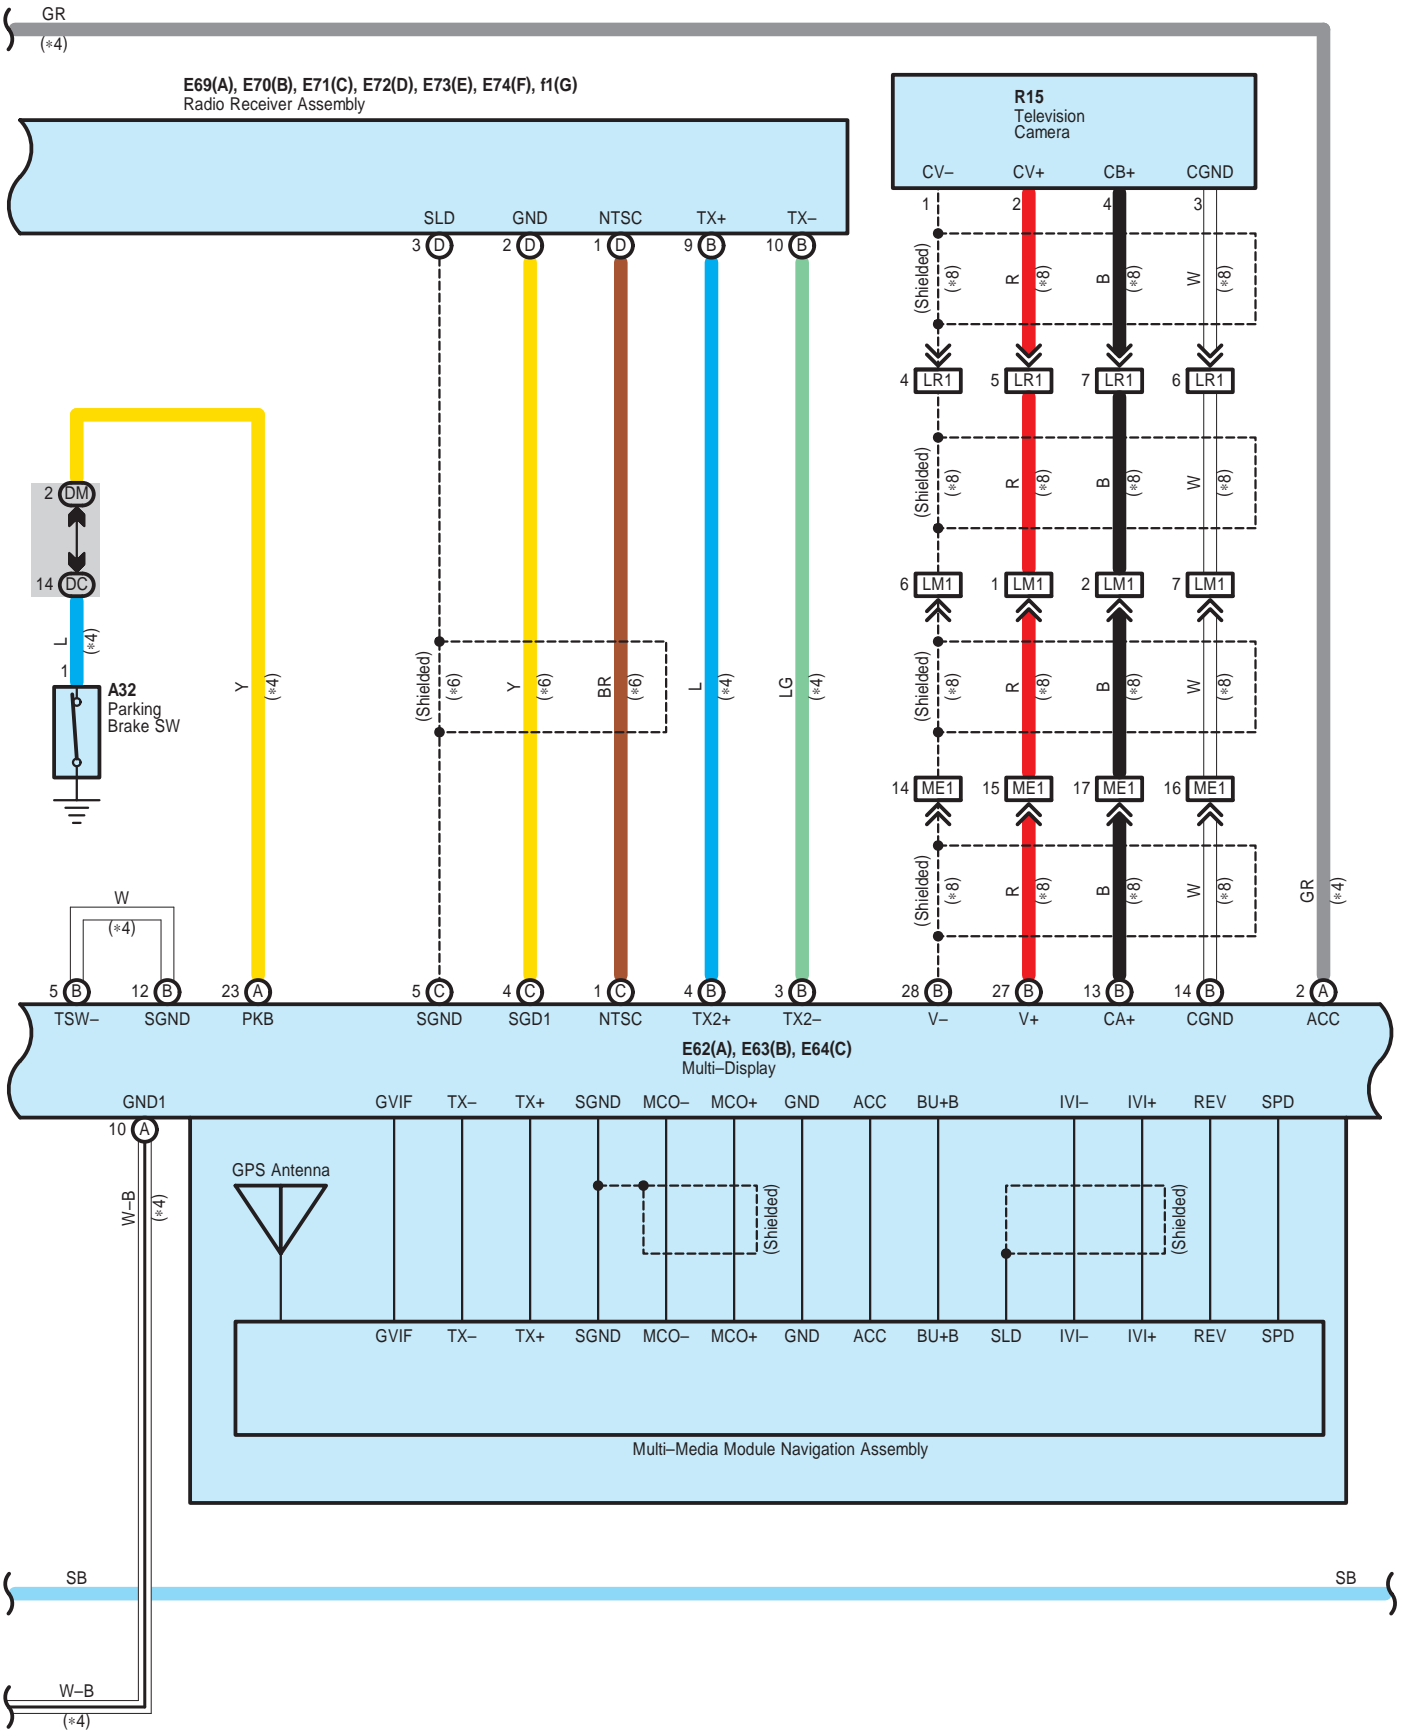

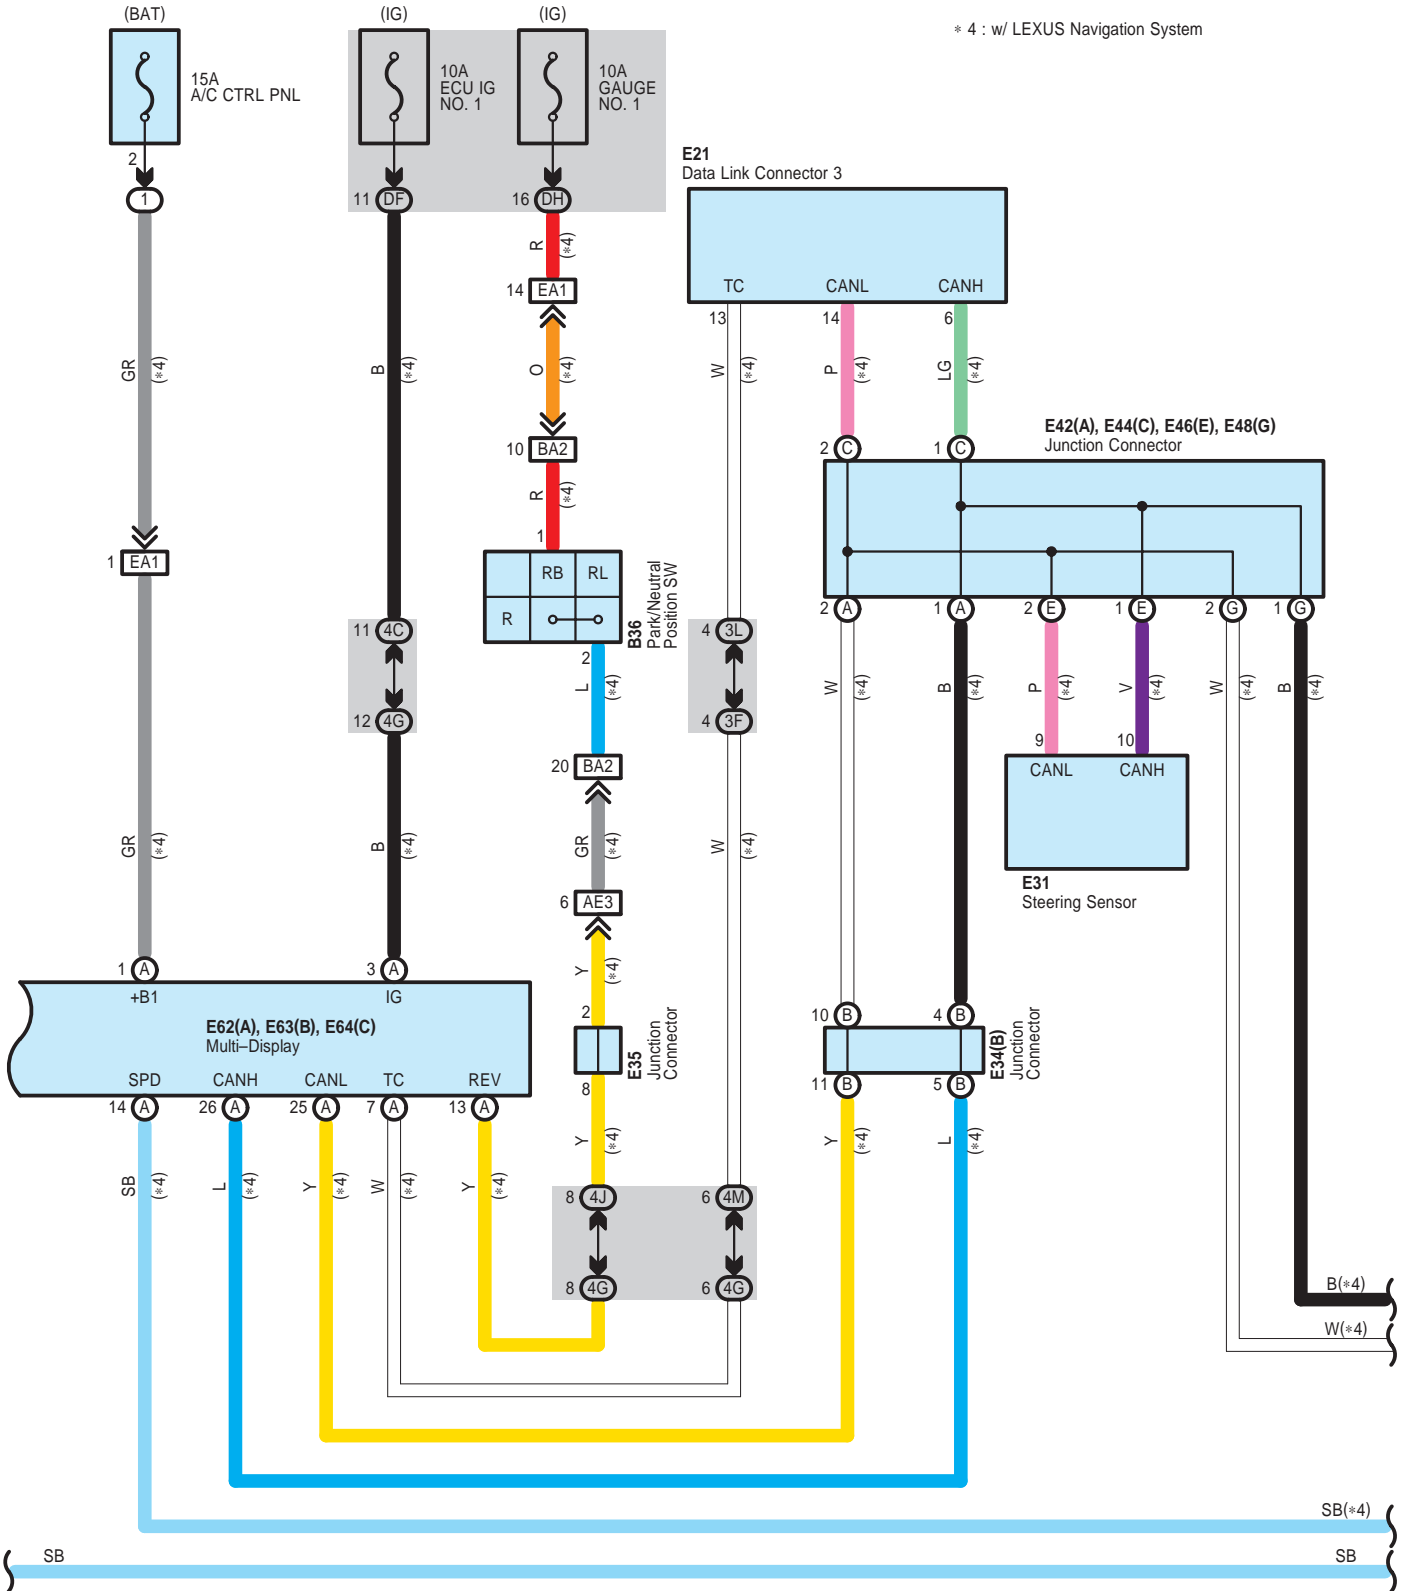

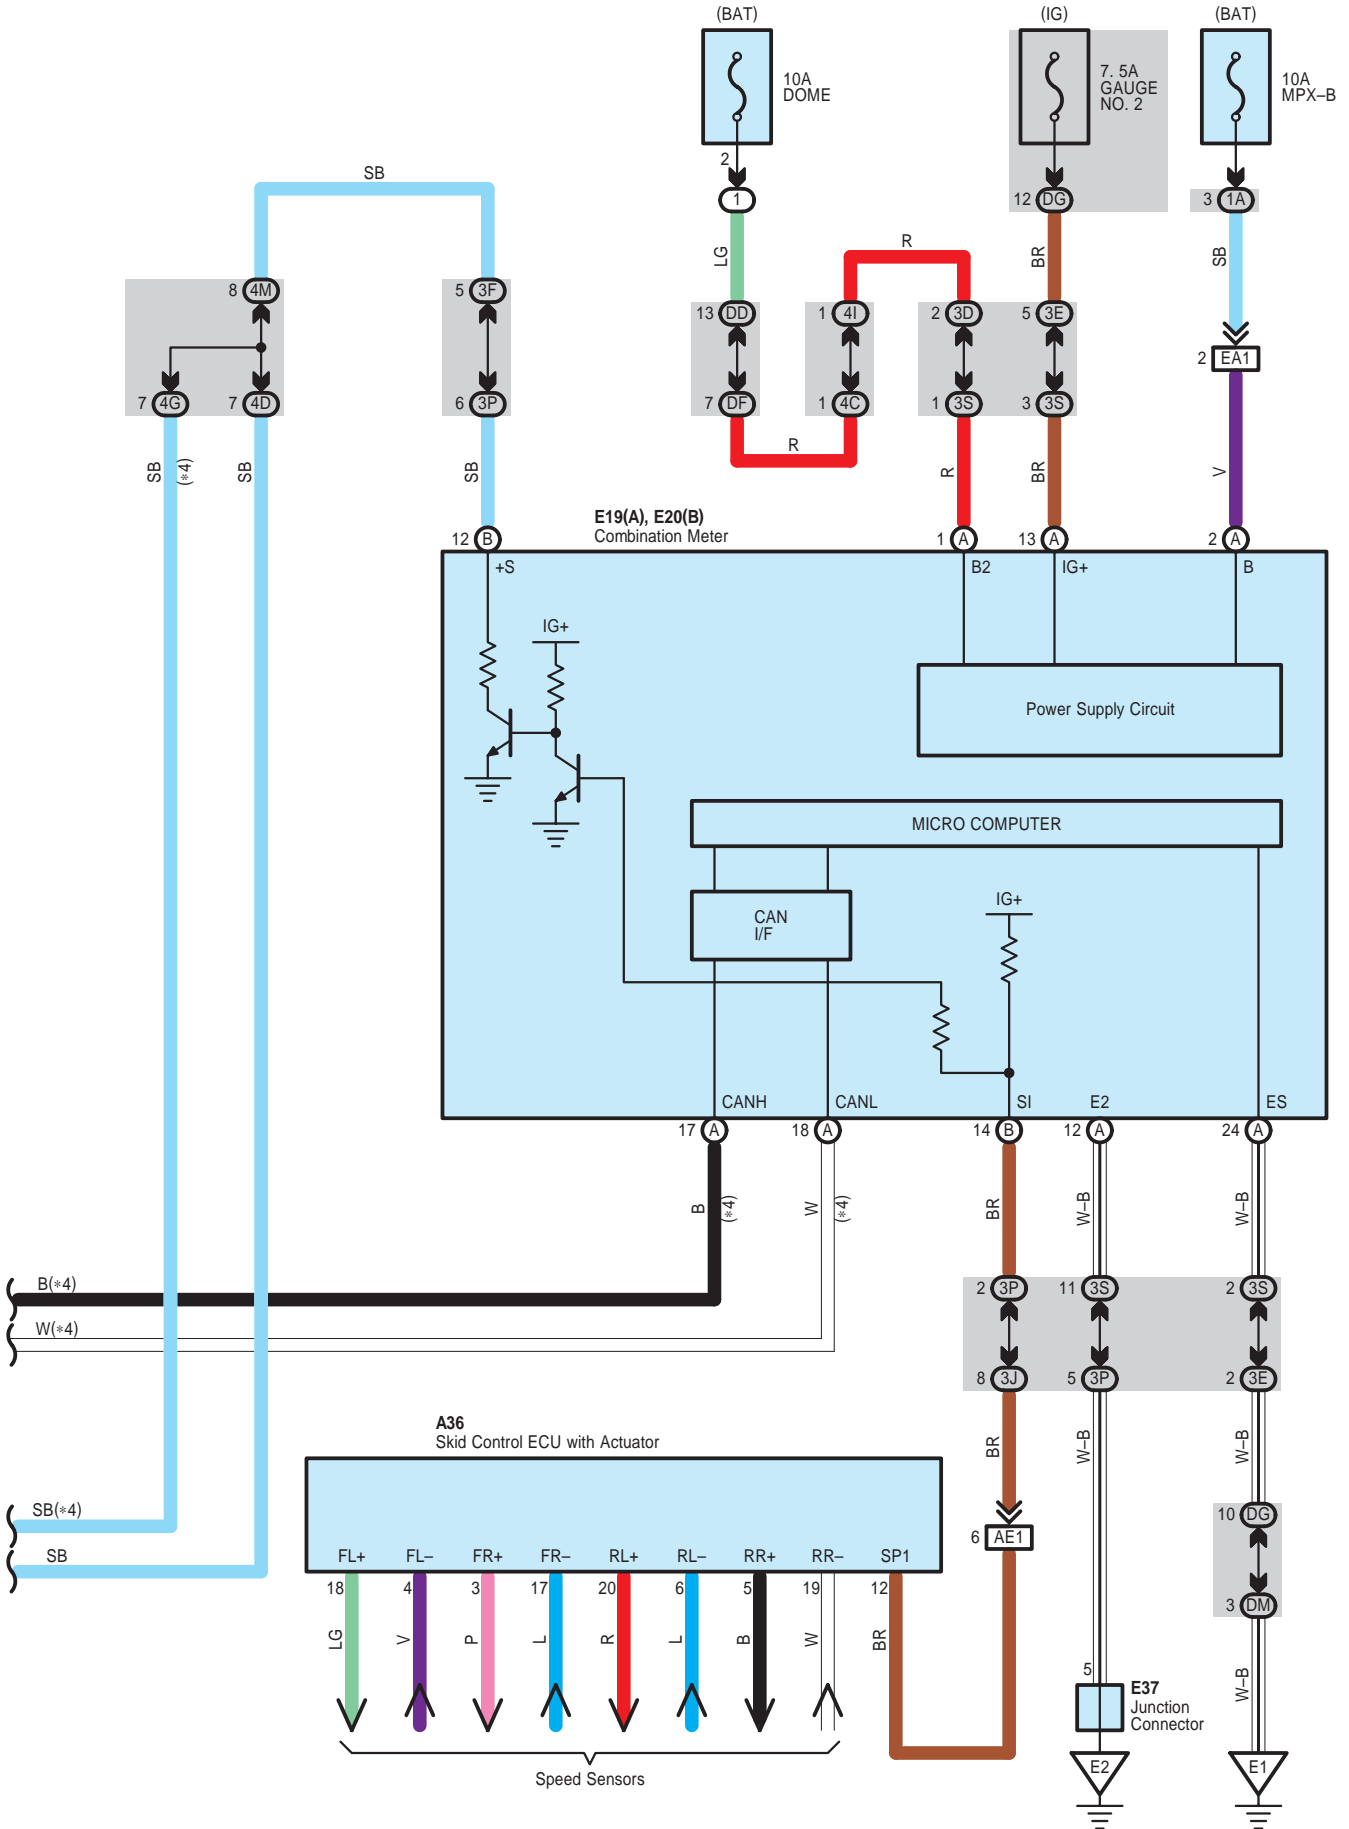





A 32  
White



 A 36  
Black

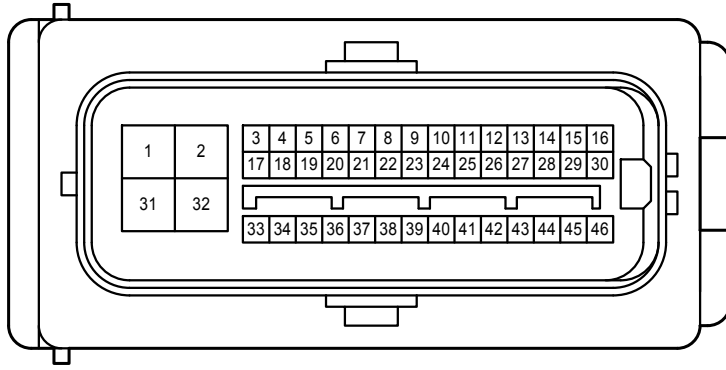


B 36  
Gray

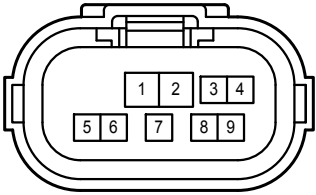 


E 10  
White



 
E 19  
White

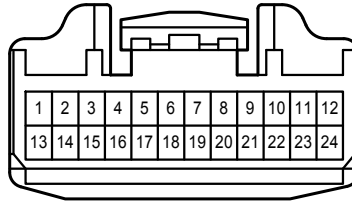


E 20  
White

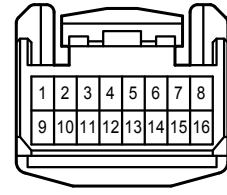 


E 21  
Black

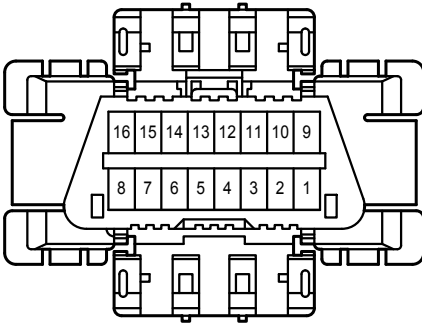 


E 30  
Black

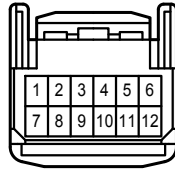 


E 31  
Gray

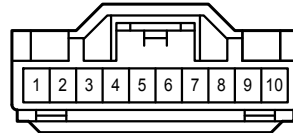 


E 34  
Blue

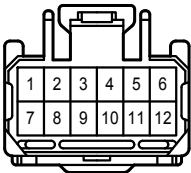 


E 35  
Blue

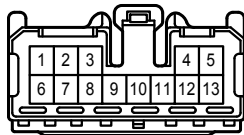 


E 37  
White

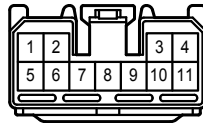 


E 42  
White

 


E 44  
White

 


E 46  
White

 


E 48  
White

 


E 62  
White

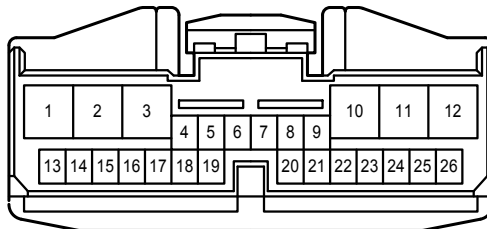 


E 63  
White

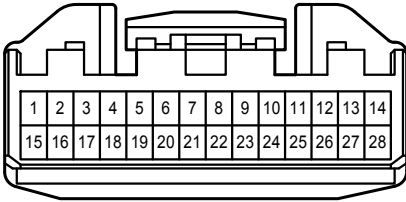 


E 64  
Blue

 


E 69  
White

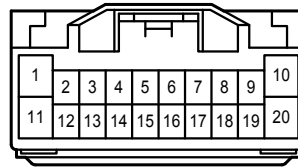 


E 70  
White

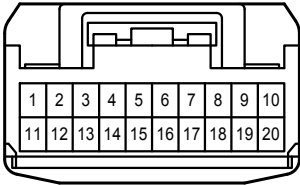 


E 71  
Blue

 

E 72  
White

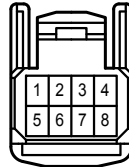 


E 73  
White

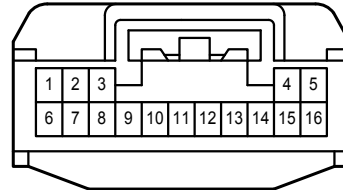 


E 74  
White



 
E 86  
White

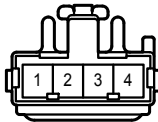


E 87  
White

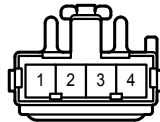 


E 91  
Black

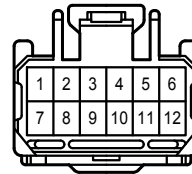 


E 92  
Black

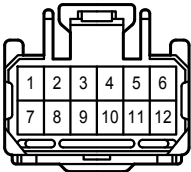 


E 94  
White

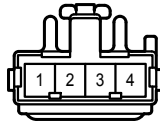 


E 95  
White

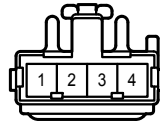 

F 4  
Gray

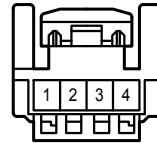 

G 2  
White

 

H 8  
White



I 7  
White



J 5  
Gray



 
(8 Speaker)

J 5  
White



(14 Speaker)

J 6  
White

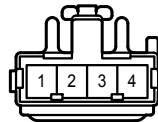

K 5  
Gray



 
(8 Speaker)

K 5  
White




(14 Speaker)


K 6  
White

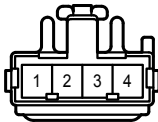


M 11  
Blue
























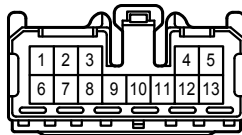 


M 26  
White

 


M 27  
White

 

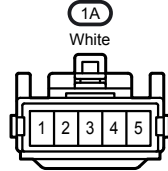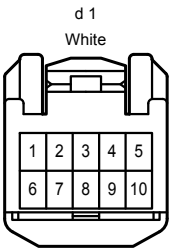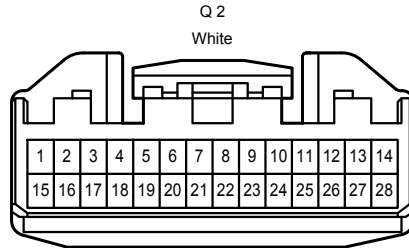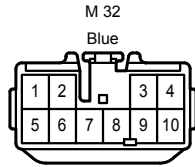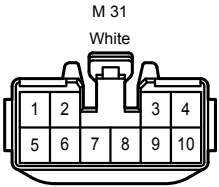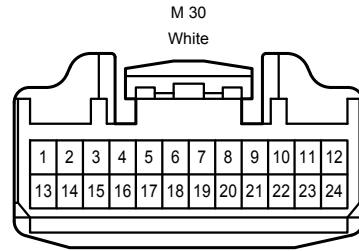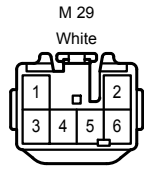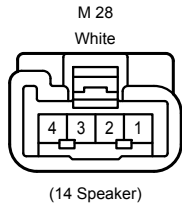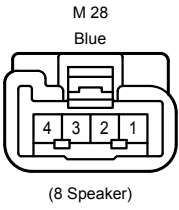                        


4J

 Gray




4L

 Gray




4M

 White




DC

 White

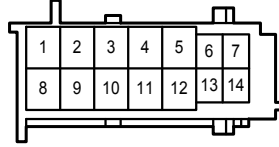


DD

 White

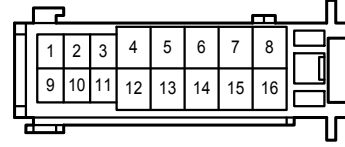


DF

 White

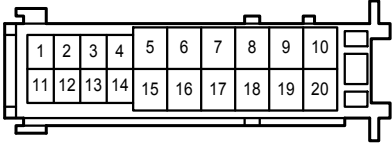


DG

 White

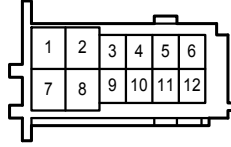


DH

 White

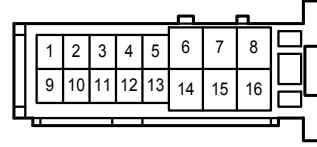


DM

 White

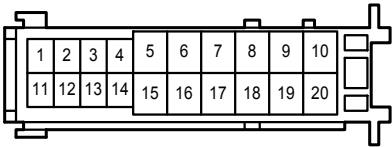


AE1

 Gray

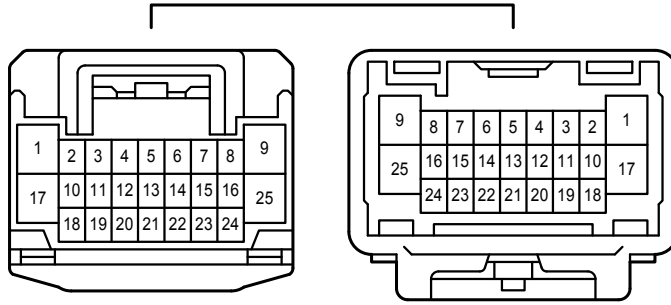

AE3

 
White

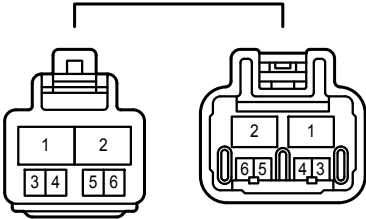

BA2


Black

 White

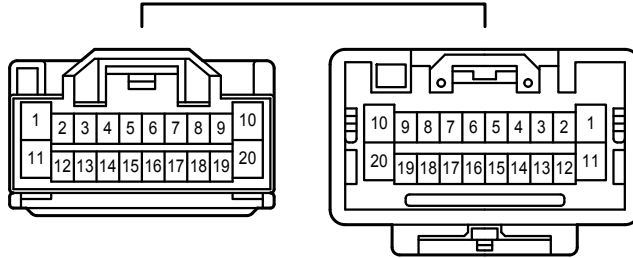


EA1

 White

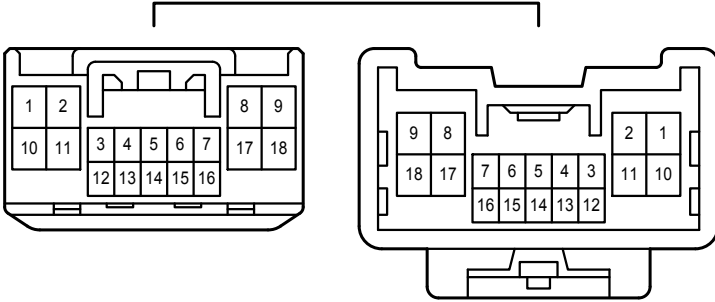


EF1

 
White

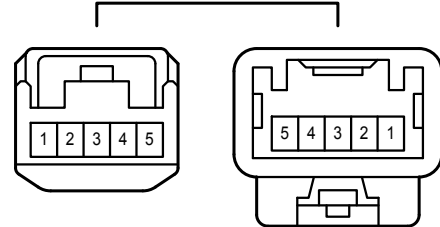


EM3  
White

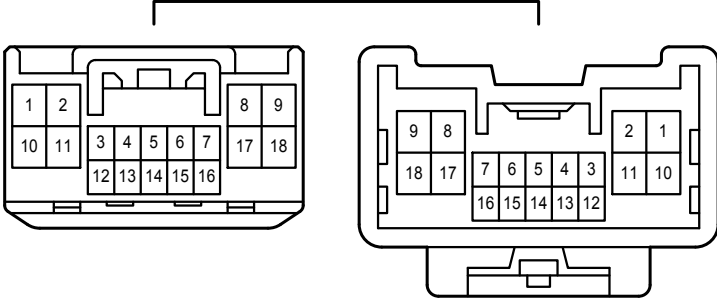 


EQ1  
White

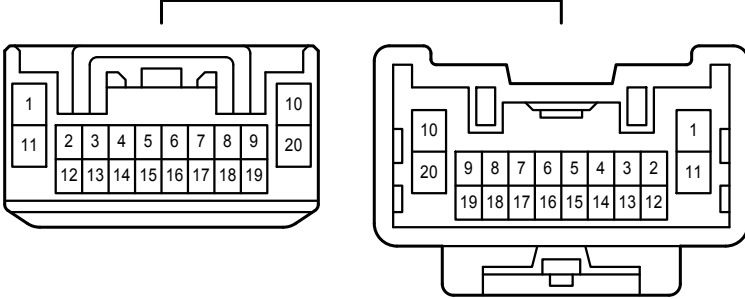 


GE1  
White

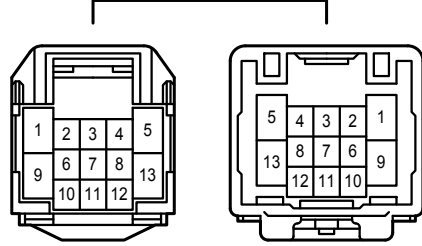 


HE1  
White

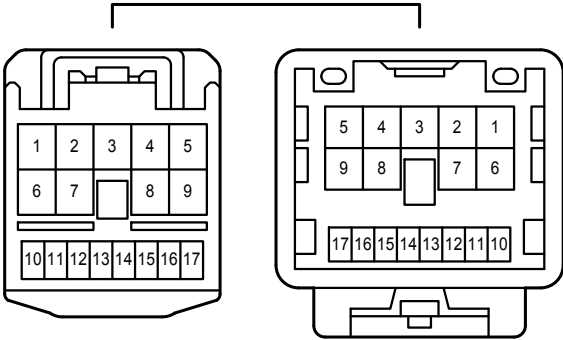 


IE1  
White

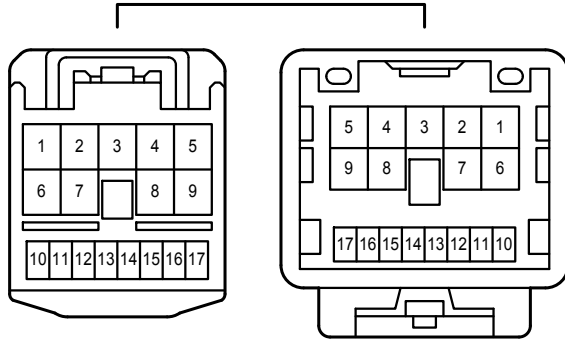 

JM1  
White


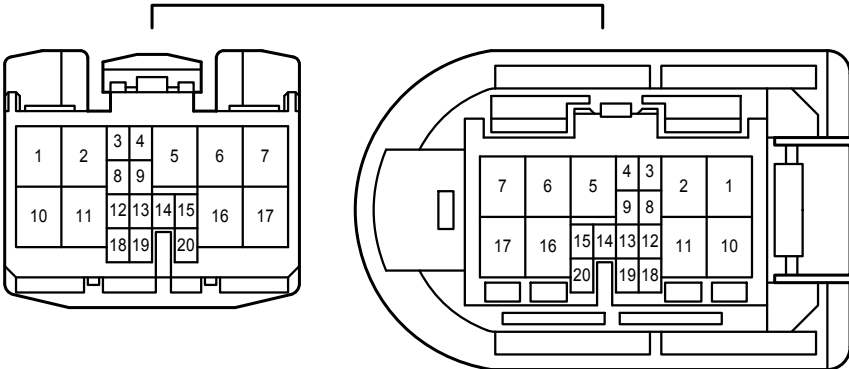 


KL1  
White

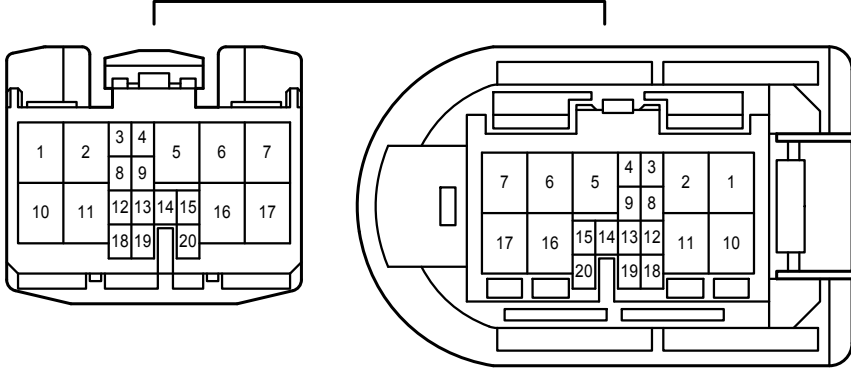 


LM1  
White

  LR1  
White

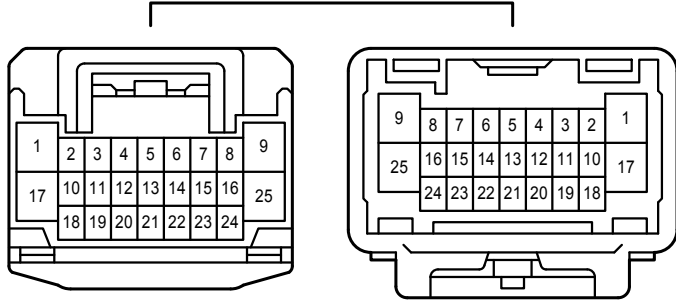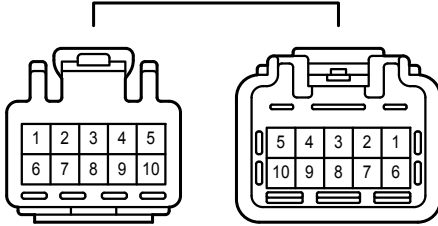

MA1  
Black

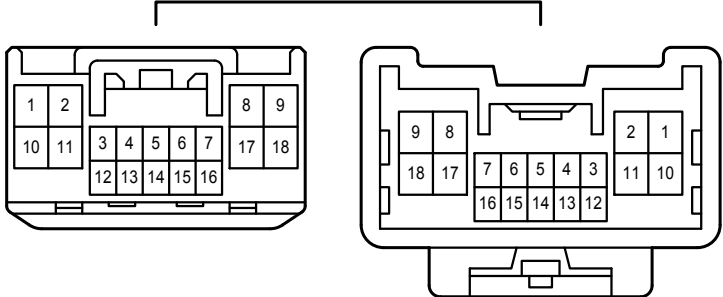 

ME1  
Blue

fg1  
Blue

