


(b) Disconnect the connector and remove the upper console panel assembly with front ash receptacle.

28. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY



(a) Apply protective tape to the area shown in the illustration.

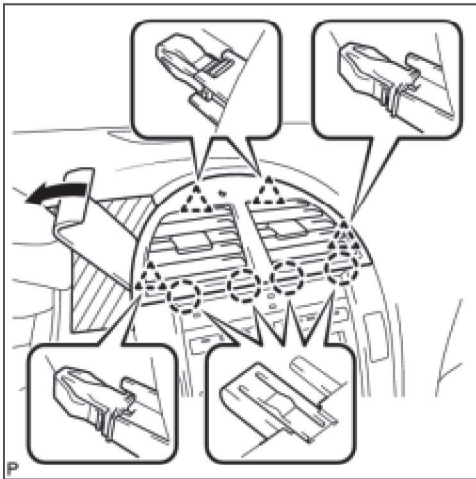


(b) Using a moulding remover, disengage the 4 claws and 4 clips, and remove the No. 2 instrument panel register assembly.

(c) Disconnect the connector.


29. REMOVE INTEGRATION CONTROL PANEL WITH RADIO RECEIVER ASSEMBLY (w/o Navigation System) [INFO](#)

30. REMOVE MULTI-DISPLAY WITH RADIO RECEIVER ASSEMBLY (w/ Navigation System) [INFO](#)

31. REMOVE HEATER SEAT SWITCH CONSOLE BASE (w/o Seat Heater System)

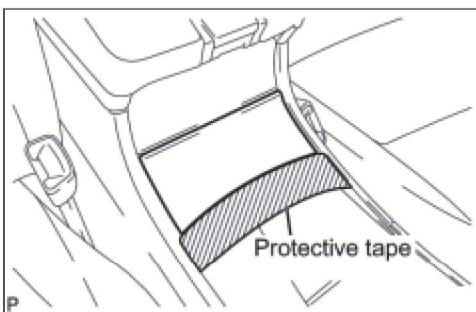


(a) Apply protective tape to the area shown in the illustration.

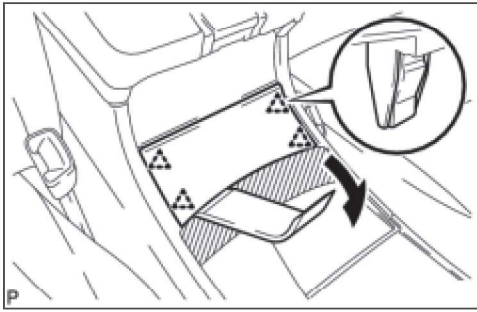


(b) Using a moulding remover, disengage the 4 clips and remove the heater seat switch console base.

32. REMOVE HEATER SEAT SWITCH CONSOLE BASE (w/ Seat Heater System)

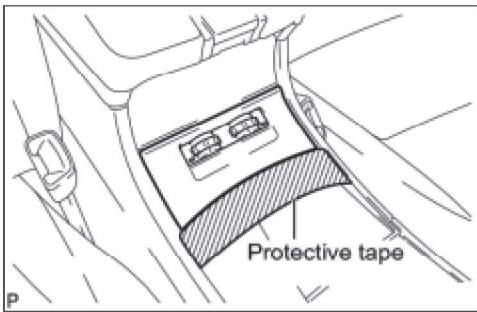


(a) Apply protective tape to the area shown in the illustration.

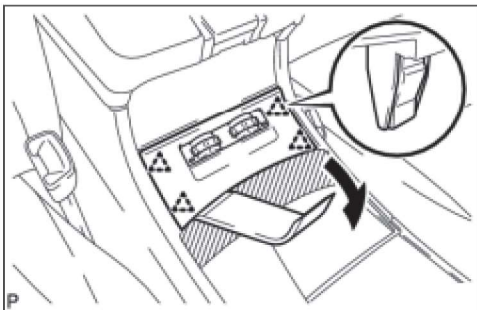

(b) Using a moulding remover, disengage the 4 clips.


(c) Disconnect each connector and remove the heater seat switch console base.

33. REMOVE CONSOLE BOX POCKET

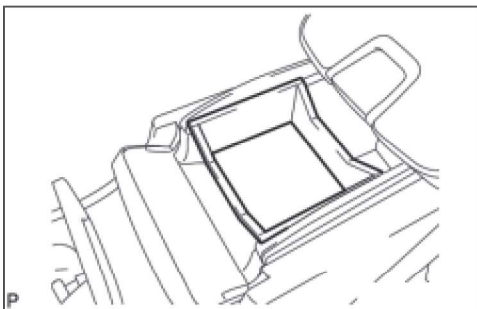


(a) Remove the console box pocket.

34. REMOVE CONSOLE BOX CARPET

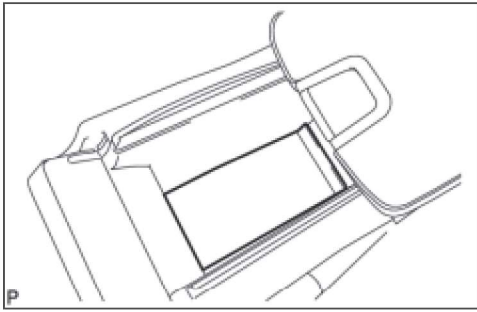


(a) Remove the console box carpet.

35. REMOVE CONSOLE REAR END PANEL SUB-ASSEMBLY

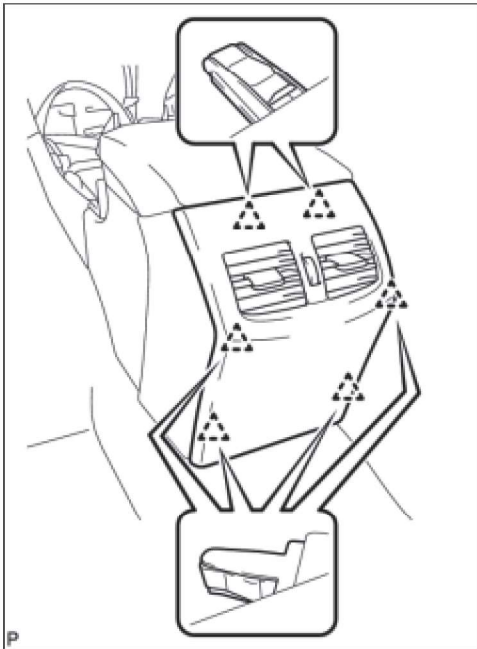



(a) Disengage the 6 claws and remove the console rear end panel sub-assembly.

36. REMOVE REAR CONSOLE BOX ASSEMBLY

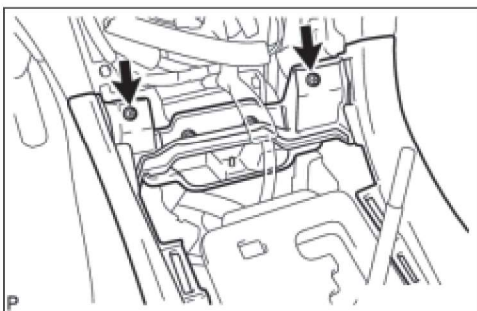


(a) Remove the 2 screws <F>.

(b) Remove the 2 bolts <E>.

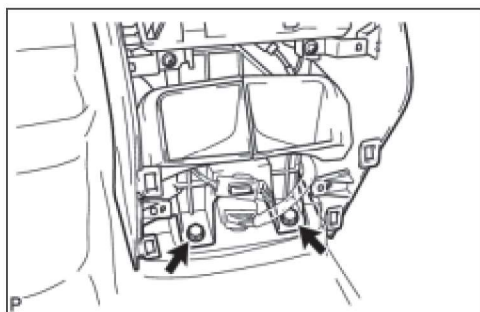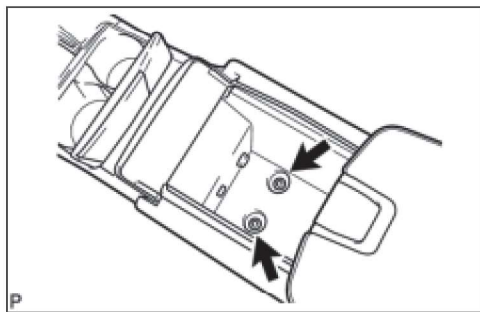

(c) Remove the 2 bolts <E>.

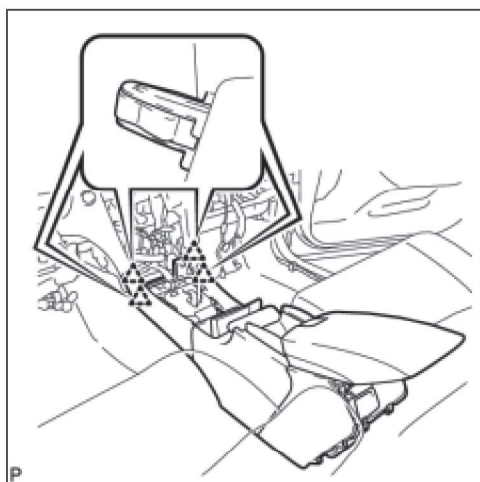

(d) Disengage the 4 clips and remove the rear console box assembly.

(e) Disconnect each connector.

37. REMOVE FRONT PILLAR GARNISH LH INFO

38. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Using a screwdriver, disengage the 2 clips.

HINT: