

## 1-2. Opening, closing and locking the doors and trunk Trunk

The trunk can be opened using the trunk opener, entry function or wireless remote control.

### ■ Trunk opener



Release the trunk lid.

### ■ Entry function


→P. 4

### ■ Wireless remote control

→P. 16

1  
Before driving

## Locking the trunk opener feature

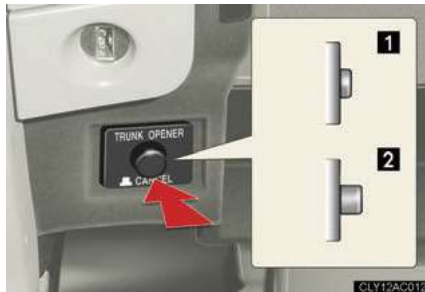

Turn the main switch in the glove box OFF to disable the trunk opener.

- 1 ON
- 2 OFF

The trunk lid cannot be opened even with the trunk opener, the wireless remote control or the entry function.