


Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Lighting (ext)	
Model Year: 2008	Model: ES350	Doc ID: RM000002CSK002X
Title: LIGHTING: HEADLIGHT ASSEMBLY: REMOVAL (2008 ES350)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (for HID Headlight)
2. REMOVE COOL AIR INTAKE DUCT SEAL [INFO](#)
3. REMOVE FRONT BUMPER ASSEMBLY [INFO](#)
4. REMOVE HOOD HINGE COVER [INFO](#)
5. REMOVE ENGINE ROOM SIDE COVER [INFO](#)
6. REMOVE HOOD TO FRONT FENDER SEAL
7. REMOVE HEADLIGHT ASSEMBLY

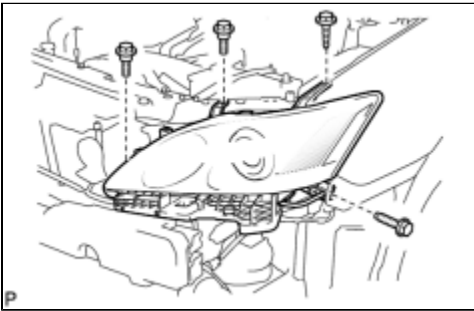

(a) Remove the 3 bolts and screw.

(b) Disconnect the connectors and remove the headlight assembly.

