Last Modified: 06-07-2019	6.8:8.0.48	Doc ID: RM10000000QAXT
Model Year Start: 2016	Model: ES300H	Prod Date Range: [07/2015 - ]
Title: MIRROR (EXT): OUTER REAR VIEW MIRROR COVER: REMOVAL; 2016 - 2018 MY ES300H [07/2015 - ]		

## **REMOVAL**

# **CAUTION / NOTICE / HINT**

## HINT:

- Use the same procedure for the RH and LH sides.
- The following procedure is for the LH side.

## **PROCEDURE**

### **1. REMOVE OUTER MIRROR**


#### INFO


#### 2. REMOVE NO. 2 OUTER MIRROR COVER


(a) Remove the 5 screws.

(b) Disengage the 2 claws and 4 guides and remove the visor assembly.


(c) Disengage the 2 guides.

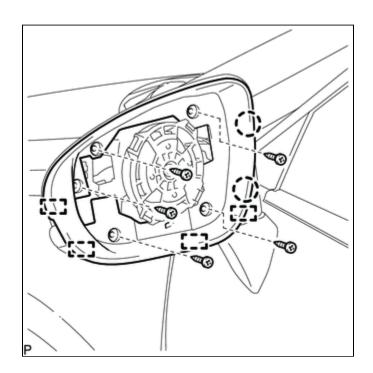

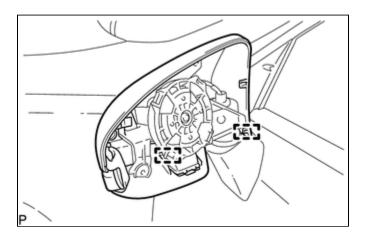

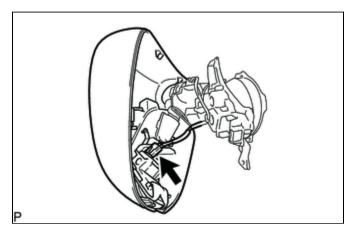

(d) Disconnect the connector and remove the No. 2 outer mirror cover with the side turn signal light assembly as a unit.

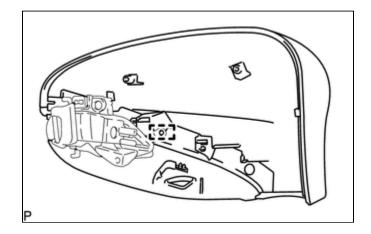

(e) Disengage the guide and remove the No. 2 outer mirror cover from the side turn signal light assembly.

.