



Cabin Air Filter: Service and Repair


REMOVE AIR REFINER FILTER

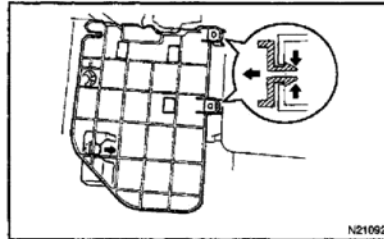


- a. Release the 3 claws and remove the heater protector

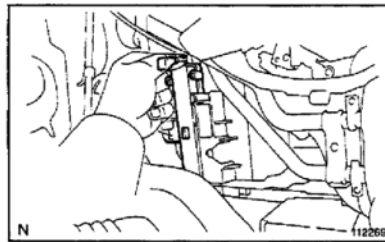

- b. Release the 2 claws and remove the filter cover.

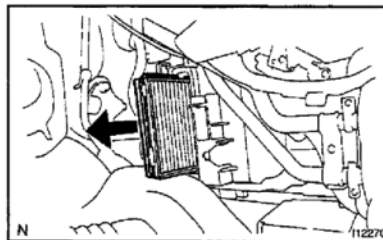

- c. Pull out the air refiner filter.

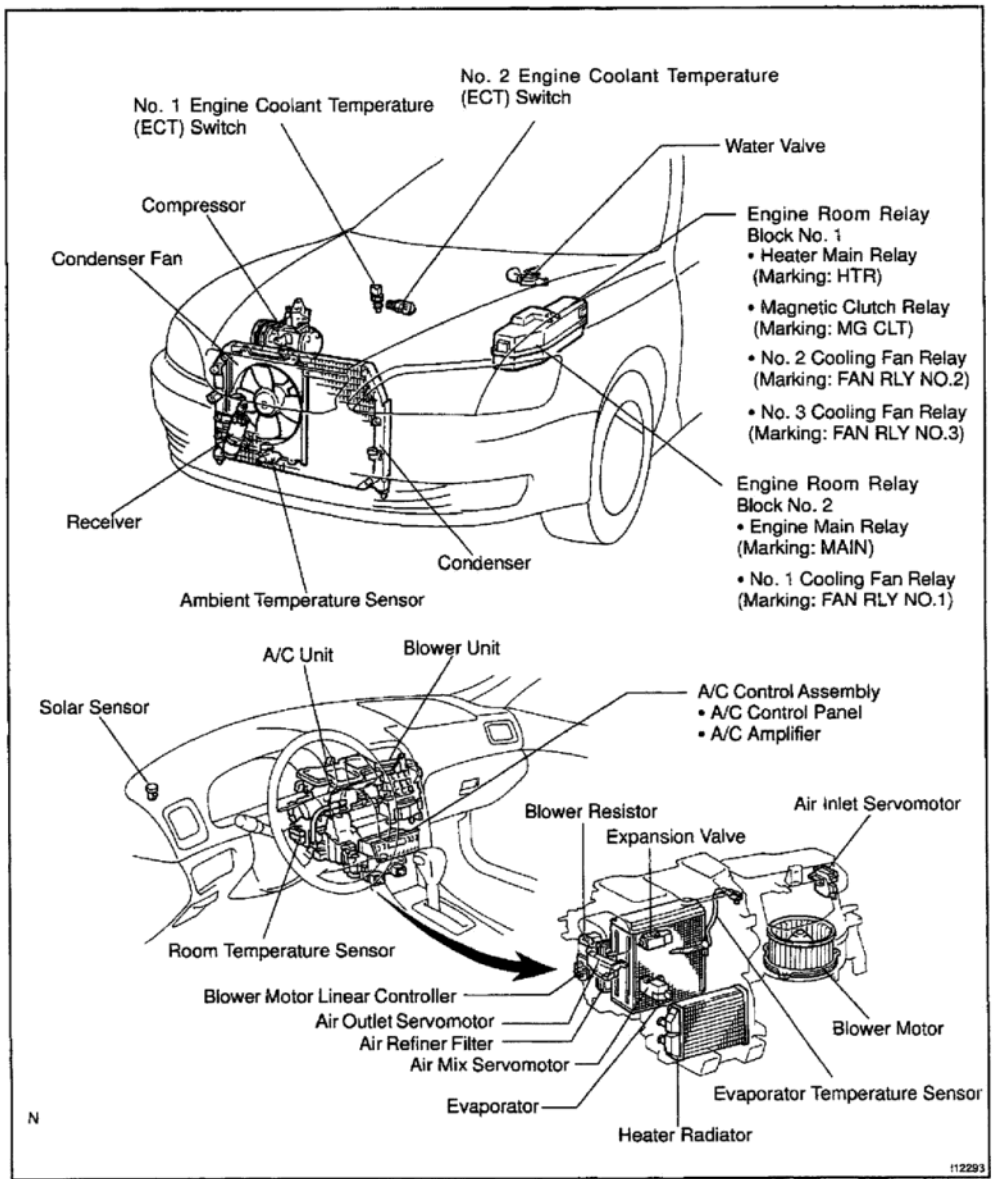

HVAC System

112293