


# AUTO ANTENNA

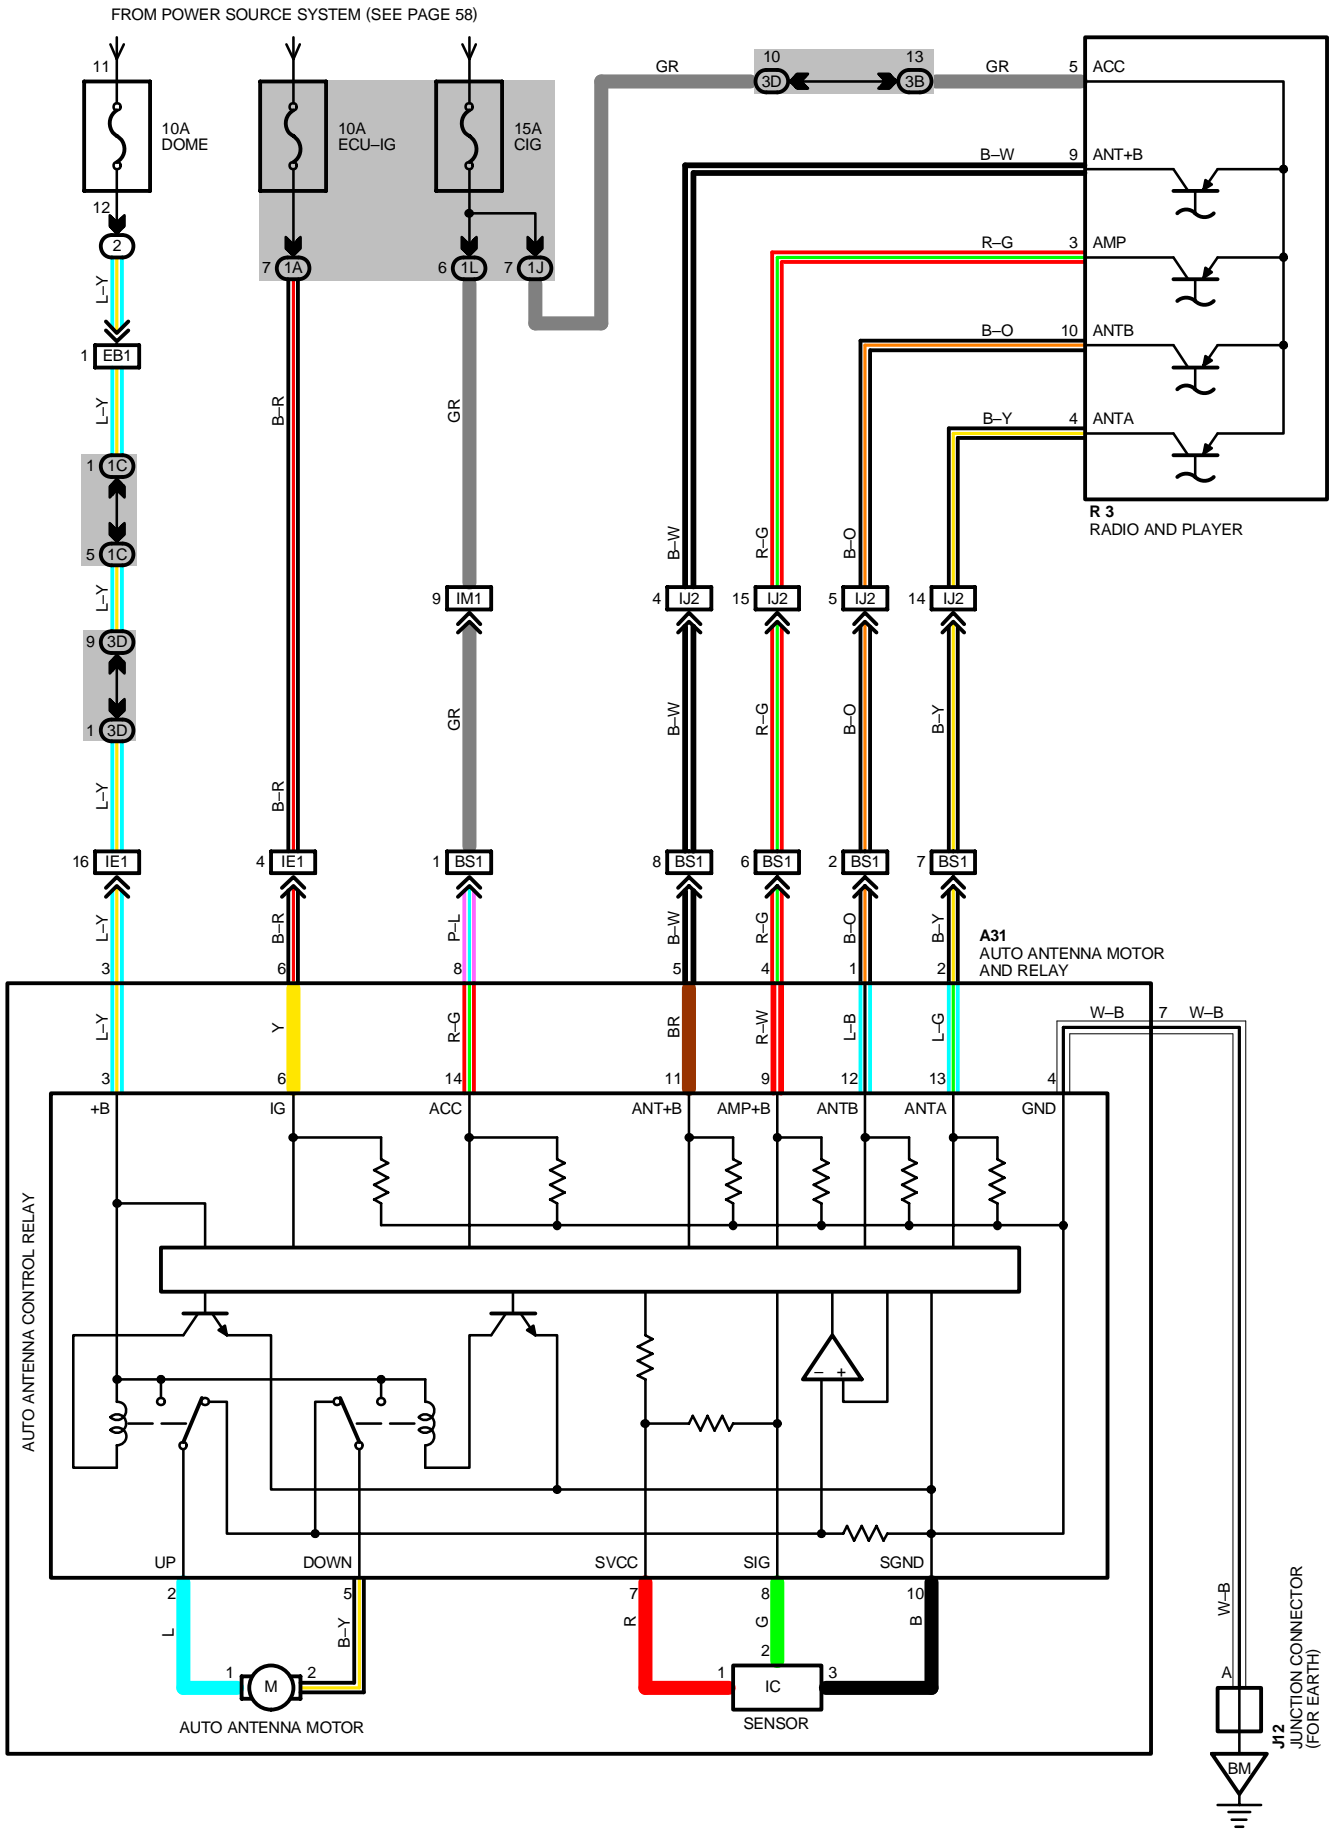

## SERVICE HINTS

### A31 AUTO ANTENNA MOTOR AND RELAY

- 3-GROUND : ALWAYS APPROX. 12 VOLTS
- 6-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
- 8-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 7-GROUND : ALWAYS CONTINUITY

### R 3 RADIO AND PLAYER

- 5-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A31	30	J12	30	R 3	29

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C		
1J		
1L		
3B	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D	22	COWL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)

 
### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	34	COWL WIRE AND R/B NO. 2 WIRE (INSIDE OF R/B NO. 2)
IE1	36	COWL WIRE AND FLOOR NO. 2 WIRE (LEFT KICK PANEL)
IJ2	36	INSTRUMENT PANEL WIRE AND FLOOR NO. 1 WIRE (UNDER THE INSTRUMENT PANEL BRACE LH)
IM1	38	COWL WIRE AND FLOOR NO. 1 WIRE (RIGHT KICK PANEL)
BS1	40	FLOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)


### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BM	40	LUGGAGE ROOM LEFT

A31



J12

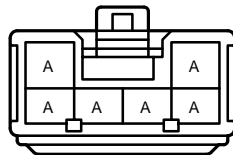

(HINT : SEE PAGE 7)

R 3 BLUE

