



2002 MY U.S.A. Maintenance Schedule Chassis & Body

No.	Service Intervals Items	x 1000 miles										Months	GS430	GS300	ES300	IS300	LS430	SC430	RX300	LX470
		1	7.5	15	23	30	38	45	53	60										
1	Brake linings & drums, pads & disks			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
2	Brake fluid	I				R				R	R: Every 24 Months	X	X	X	X	X	X	X	X	
3	Brake lines and hoses			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
4	Steering linkage & boots			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
5	Steering gear box/ Rack & Pinion Assy	I		I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
6	Ball joints & dust cover			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
7	Drive shaft boots			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
	Retorque flange			I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X		
8	Transmission Fluid					I				I	I: Every 24 Months				+				X	
	T-IV					I				I	I: Every 24 Months	X	X	X	X	X	X	X		
9	Transfer case oil	I				I				I	I: Every 24 Months								X	
		I		I		I		I		I	I: Every 12 Months							+		
10	Front differential with type T-IV	I				I				I	I: Every 24 Months			X					X	
11	Front differential – Others	I		I		I		I		I	I: Every 12 Months								X	
12	Rear differential oil			I		I		I		I	I: Every 12 Months	X	X		X	X	X	+	X	
	With LSD	I		I		I		I		R	I: Every 12 Mo. R: Every 48 Mo.				+			+		
13	Body Inspection	I		I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
14	Air conditioning filter		I	R	I	R	I	R	I	R										X
			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	+			X			
		Replace every 10,000 miles or when light is on														X				
				R				R			R: Every 18 Months				X			X		
15	Tire Rotation		R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X	
16	Road Test	I	I	I	I	I	I	I	I	I	I: Every 6 Months	X	X	X	X	X	X	X	X	
17	Wheel bearing & driveshaft bushing grease					R				R	R: Every 24 Months								X	
18	Active height control suspension fluid									R									X	
19	Active height control gas chamber					I		I		I	I: 24 Mo., then every 12 Mo.								X	
20	Propeller shaft grease			R		R		R		R	R: Every 12 Months								X	
21	Propeller shaft bolt torque			I		I		I		I	I: Every 12 Months								X	

I: Inspect and correct or replace as necessary **R:** Replace, change, tire rotation or lubricants

+ : If equipped

2002 MY U.S.A. Maintenance Schedule



Engine

No.	Items	Service Intervals										Months	GS430	ES300	GS300 IS300	LS430	SC430	RX300	LX470	
		x 1000 miles	1	7.5	15	22.5	30	37.5	45	52.5	60									
1	Timing Belt	Replace 90,000 miles										R: Every 72 Months	X	X	X	X	X	X	X	X
2	Valve Clearance										I	I: Every 48 Months	+	+	+	+	+	+	+	
3	Drive Belt	Inspect 60,000 miles and then every 15,000 miles										I: 48m after every 12 m	X	X	X	X	X	X	X	X
4	Engine Oil		R	R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X
5	Engine Oil Filter		R	R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X
6	Engine Coolant					R					R	R: Every 24 Months	X	X	X	X	X	X	X	
7	Exhaust Pipes & Mountings			I		I		I			I	I: Every 12 Months	X	X	X	X	X	X	X	
8	Engine Air Filter					R					R	R: Every 24 Months	X	X	X	X	X	X	X	
9	Fuel lines/connections, fuel tank vapor vent system hoses & fuel tank band					I					I	I: Every 24 Months	X	X	X	X	X	X	X	
10	Fuel tank cap gasket					I					I	I: Every 24 Months	X	X	X	X	X	X	X	
11	Spark Plugs – Iridium tip	Replace 120,000 miles										R: @ 120,000 Miles	X	X	X	X	X	X	X	
11	Spark Plugs – Iridium tip										R	R: @ 60,000 Miles			X					

I: Inspect and correct or replace as necessary
rotation or lubricants

R: Replace, change, tire

+ : Audible