

POWER STEERING FLUID BLEEDING

SR0DG-04

1. **CHECK FLUID LEVEL** (See page [SR-4](#))
2. **JACK UP FRONT OF VEHICLE AND SUPPORT IT WITH STANDS**

3. **TURN STEERING WHEEL**

With the engine stopped, turn the wheel slowly from lock to lock several times.

4. **LOWER VEHICLE**

5. **START ENGINE**

Run the engine at idle for a few minutes.

6. **TURN STEERING WHEEL**

- (a) With the engine at idling, turn the wheel to left or right full lock position and keep it there for 2 - 3 seconds, then turn the wheel to the opposite full lock position and keep it there for 2 - 3 seconds.


- (b) Repeat (a) several times.

7. **STOP ENGINE**

8. **CHECK FOR FOAMING OR EMULSIFICATION**

If the system has to be bled twice specifically because of foaming or emulsification, check for fluid leaks in the system.

9. **CHECK FLUID LEVEL** (See page [SR-4](#))

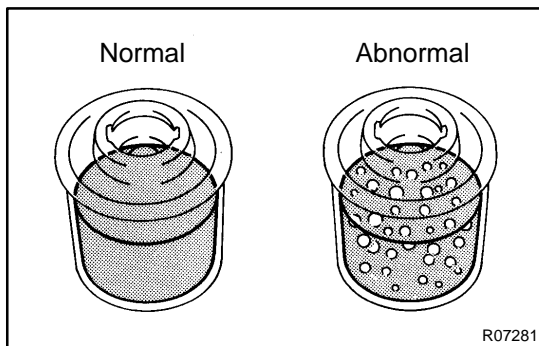

R07281