


252-6TE

Connector Joining Wire Harness and Wire Harness

- 1 BL/w AC Relay
- 2 R/w PL neutral Start
- 3 X
- 4 X
- 5 X
- 6 B/w ground to coil + pin
- 7 B/w Ignition to inject
- 8 B/w Starter relay to solenoid
- 9 B/R Switch S4
- 10 X

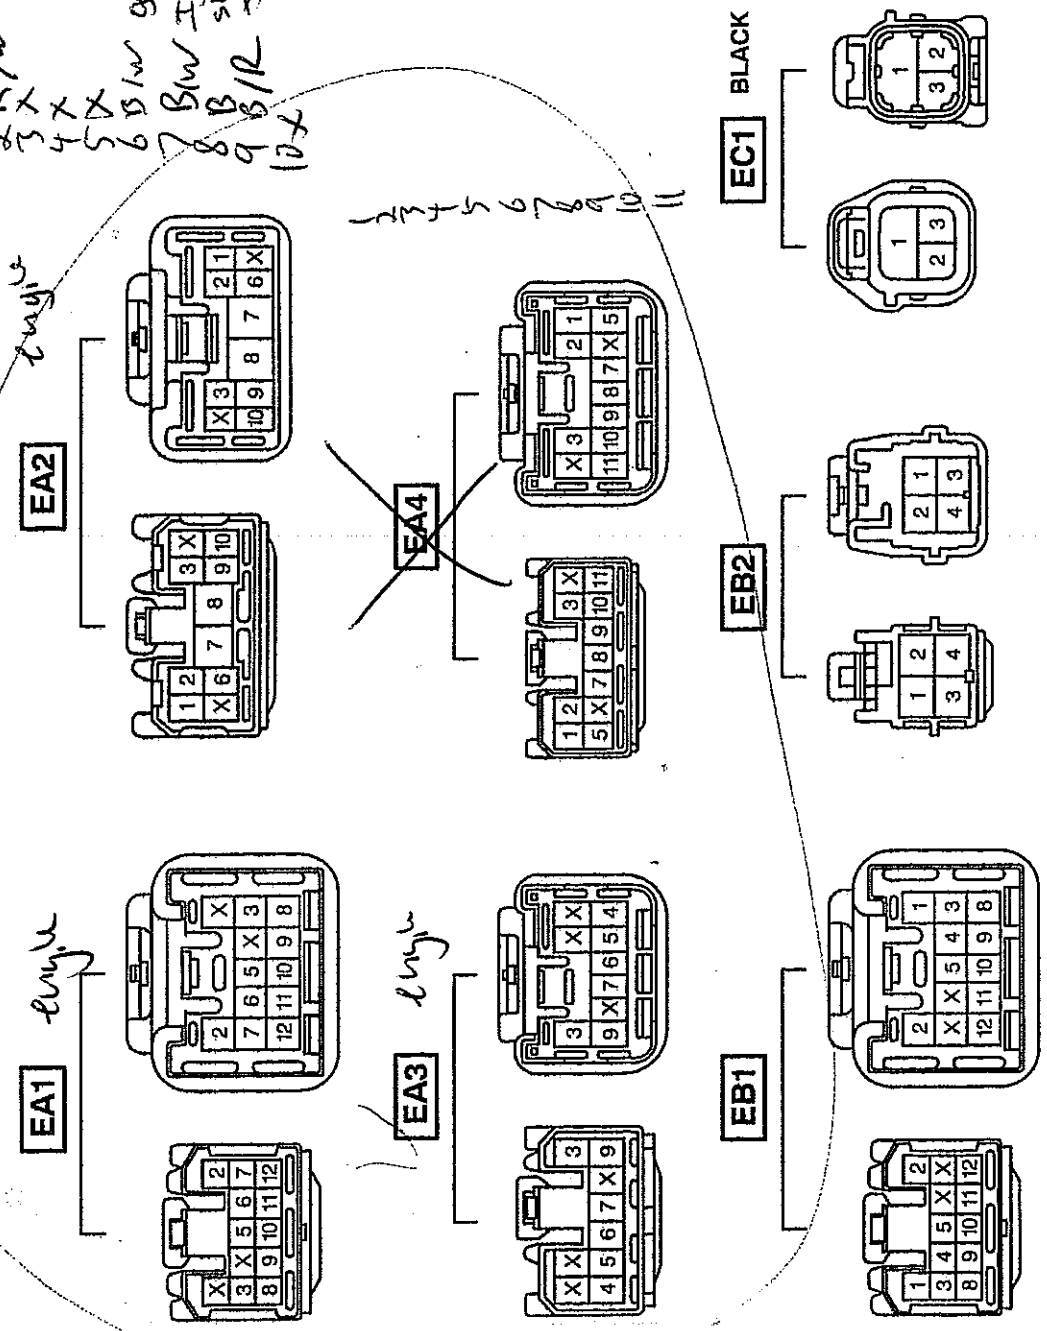

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA4	Engine Wire and Cowl Wire (Inside of the ECU Box)
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No. 3 R/B)
EB2	Cowl Wire and Relay Block Wire (Inside of the Engine Room No. 3 R/B)
EC1	Engine No. 2 Wire and Engine Wire (Near the Starter)

EA1

1 BL ECU - AC + +
 2 LG AB dme line DI-ECU
 3 R/w TS DI to TS ECU
 4 B/w RL neutral - S3
 5 B/BL ALH Fuse
 6 B/R SOLT PPS ECU
 7 B/R SOL - PPS ECU
 8 B/R WAD1 + WFEW
 9 B/R WBD1 - ABS Relay
 10 Pink other P/B

EA3

1 X B/R Ignition to back + ECU Ignition
 2 R/B DL neutral ECU Ignition
 3 B neutral switch to back
 4 B/BL neutral switch to starter
 5 X B/R S4 - ground A, 03's
 6 X
 7 R/BL neutral pin