


<b>DTC</b>	<b>B2798/99</b>	<b>Communication malfunction No.2</b>
------------	-----------------	---------------------------------------

**CIRCUIT DESCRIPTION**

DTC No.	DTC Detecting Condition	Trouble Area
B2798/99	Communication error	<ul style="list-style-type: none"> <li>• Key</li> <li>• Transponder Key Coil</li> <li>• Transponder Key Amplifier</li> <li>• Wire harness</li> <li>• Engine and ECT ECU</li> </ul>

**WIRING DIAGRAM**

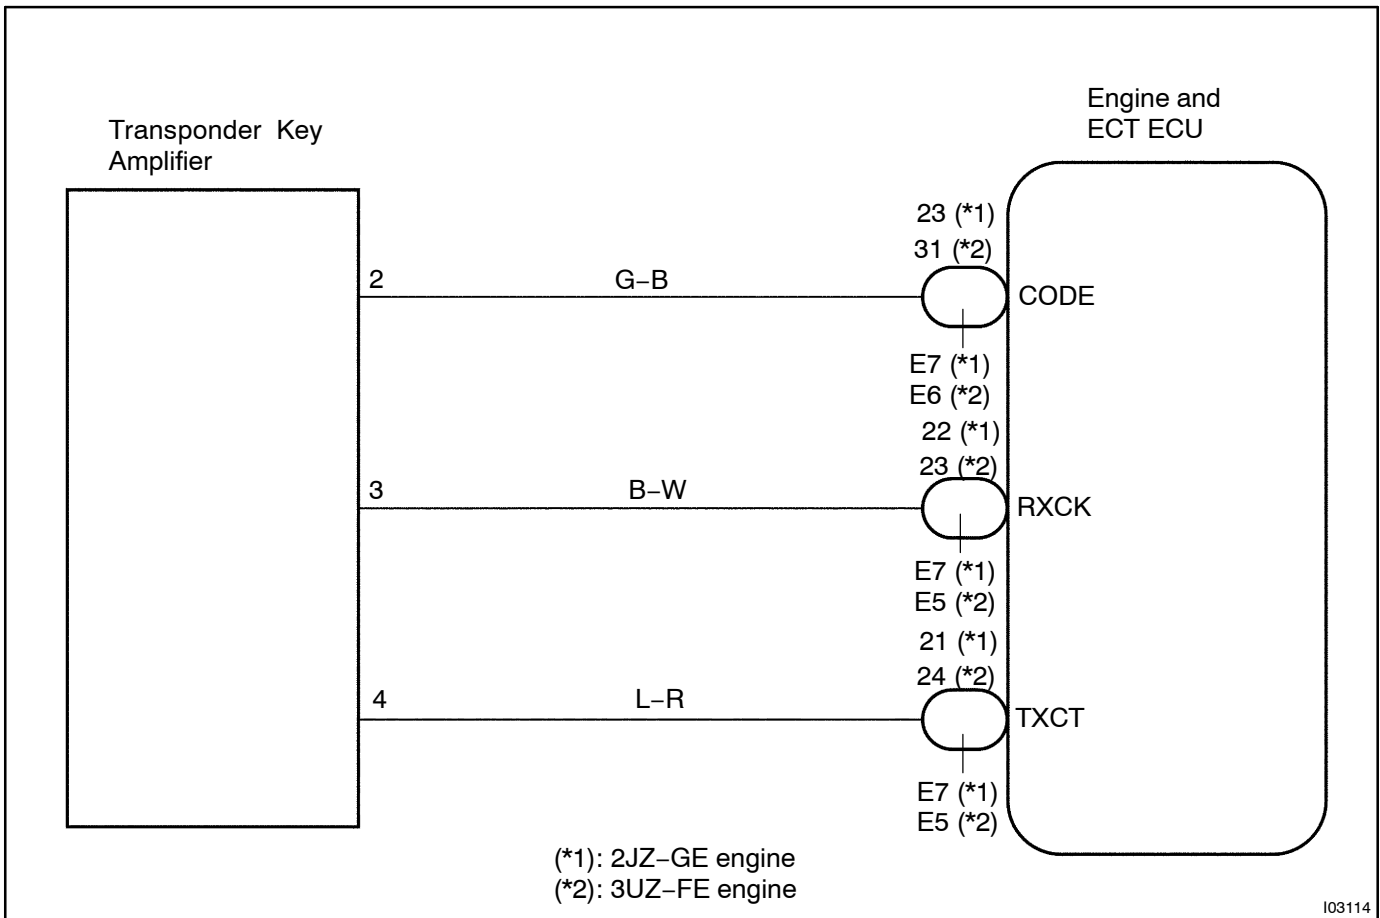

**INSPECTION PROCEDURE**

**1** Check transponder key coil (See Pub. No. RM588E on page BE-253).

**NG**

Replace transponder key coil.

**OK**

**2** Check harness and connector between transponder key amplifier and ECU.

**NG**

Repair or replace harness and connector.

**OK**

**3** Does the system operate normally after replacement of transponder key amplifier?

**Yes**

Replace transponder key amplifier.

**No**

Replace ECU.