

2001 MY U.S.A. Maintenance Schedule

Chassis & Body

No.	Items	Service Intervals										Months	GS430	GS300	ES300	IS300	LS430	RX300	LX470	
		x 1000 miles	1	7.5	15	22.5	30	37.5	45	52.5	60									
1	Brake linings/drums & pads/disks			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
2	Brake fluid		I				R				R	R: Every 24 Months	X	X	X	X	X	X	X	
3	Brake lines and hoses			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
4	Steering linkage & Boots			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
5	Rack & Pinon Assembly/Steering gear box		I		I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
6	Ball joints & dust cover			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
7	Drive shaft boots			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
	Retorque flange			I			I		I		I	I: Every 12 Months	X	X	X	X	X	X		
8	Transmission Fluid	Other than T-IV					I				I	I: Every 24 Months							X	
		T-IV					I				I	I: Every 24 Months	X	X	X	X	X	X		
9	Transfer case oil		I				I				I	I: Every 24 Months							X	
			I		I		I		I		I	I: Every 12 Months							+	
10	Front differential with type T-IV		I		I		I		I		I	I: Every 12 Months			X			X		
11	Front differential - Others		I		I		I		I		I	I: Every 12 Months							X	
12	Rear differential oil	Other	I		I		I		I		I	I: Every 12 Months	X	X		X	X	+	X	
		With LSD	I		I		I		I		R	I: Every 12Mo. R: Every 48Mo.						+		
13	Body Inspection		I		I		I		I		I	I: Every 12 Months	X	X	X	X	X	X	X	
14	Air conditioning filter			I	R	I	R	I	R	I	R	I: Every 6 Months R: Every 12 Months			+				X	
				R	R	R	R	R	R	R	R	R: Every 6 Months	X	X						
						R			R				R: Every 18 Months				X		+	
				Replace every 10,000 miles or when light is on														X		
15	Tire Rotation			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	
16	Road Test		I	I	I	I	I	I	I	I	I	I: Every 6 Months	X	X	X	X	X	X	X	
17	Driveshaft bushing grease						R				R	R: Every 24 Months							X	
18	Active height control suspension fluid						I		I		R	R: Every 48 Months							X	
19	Active height control gas chamber						I		I		I	I: 24 Mo., then every 12 Mo.							X	
20	Propeller shaft grease				R		R		R		R	R: Every 12 Months							X	
21	Propeller shaft bolt torque				I		I		I		I	I: Every 12 Months							X	
22	Charcoal Canister		Required for vehicles in CA, MA & NY onl										I	I: Every 72 Months	X	X	X	X	X	X

I: Inspect and correct or replace as necessary **R:** Replace, change, tire rotation or lubricants

+: If Equipped

2001 MY U.S.A. Maintenance Schedule

Engine

No.	Service Intervals Items	x 1000 miles	Miles									Months	GS430	GS300	ES300	IS300	LS430	RX300	LX470		
			1	7.5	15	22.5	30	37.5	45	52.5	60										
1	Timing Belt		Replace 90,000 miles									R: Every 72 Months	X	X	X	X	X	X	X	X	
2	Valve Clearance									I	I: Every 48 Months	+	+	+	+	+	+	+	+		
3	Drive Belt		Inspect 60,000 miles and then every 15,000 miles									I: 48m after every 12 m	X	X	X	X	X	X	X	X	
4	Engine Oil			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X	
5	Engine Oil Filter			R	R	R	R	R	R	R	R	R: Every 6 Months	X	X	X	X	X	X	X	X	
6	Engine Coolant						R				R	R: Every 24 Months	X	X	X	X	X	X	X	X	
7	Exhaust Pipes & Mountings				I				I		I	I: Every 12 Months	X	X	X	X	X	X	X	X	
8	Air Cleaner Filter						R				R	R: Every 24 Months	X	X	X	X	X	X	X	X	
9	Fuel lines/connections, fuel tank vapor vent system hoses & fuel tank band							I			I	I: Every 24 Months	X	X	X	X	X	X	X	X	X
10	Fuel tank cap gasket							I			I	I: Every 24 Months	X	X	X	X	X	X	X	X	X
11	Spark Plugs – Iridium tip		Replace 120,000 miles									R: @ 120,000 Miles	X		X		X	X	X		
11	Spark Plugs – Iridium tip										R	R: @ 60,000 Miles		X		X					

I: Inspect and correct or replace as necessary **R:** Replace, change, tire rotation or lubricants

+ : Audible