




Sliding Roof

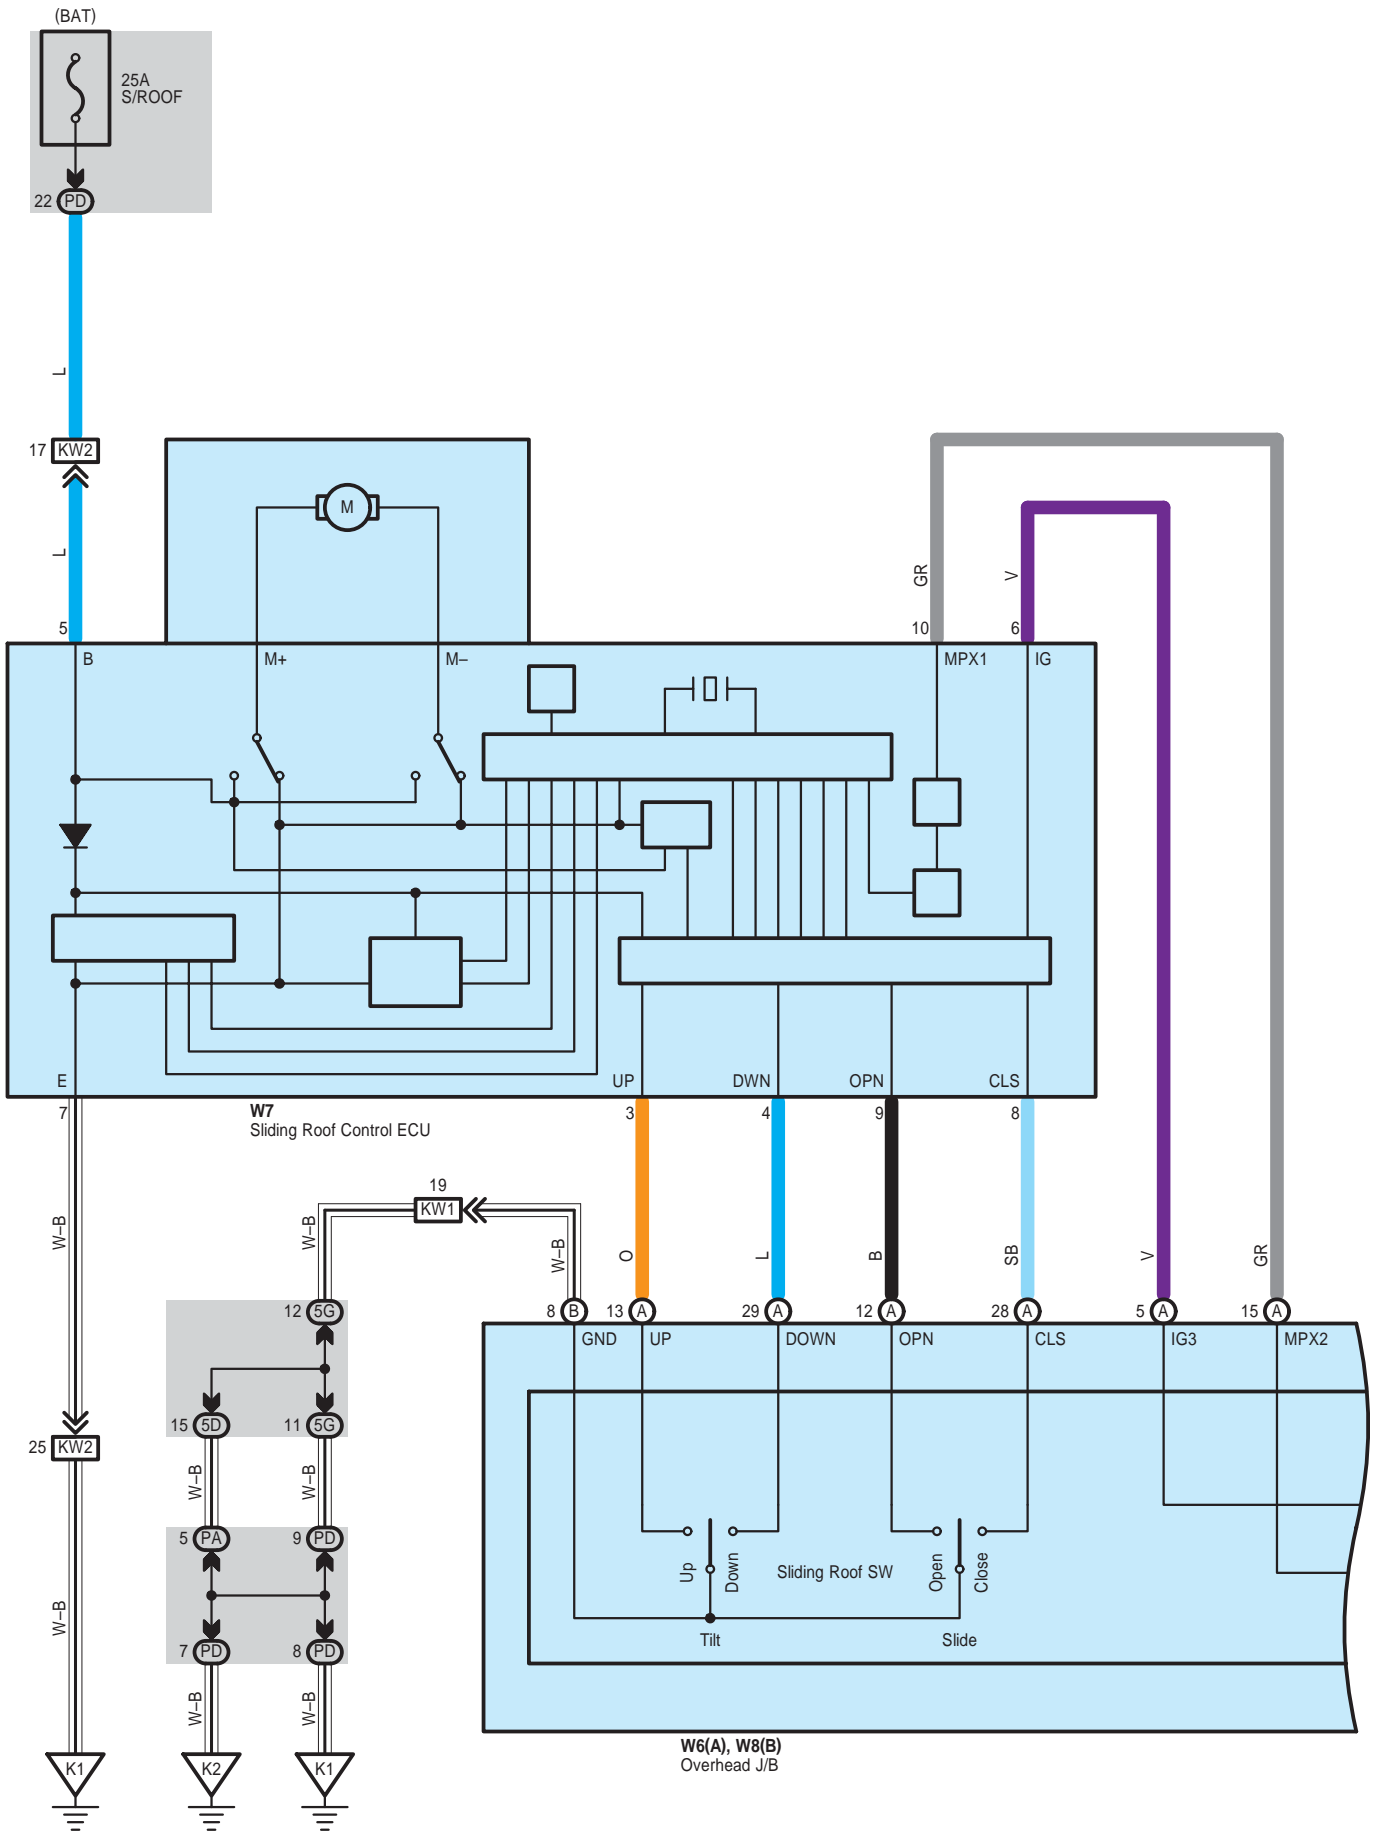


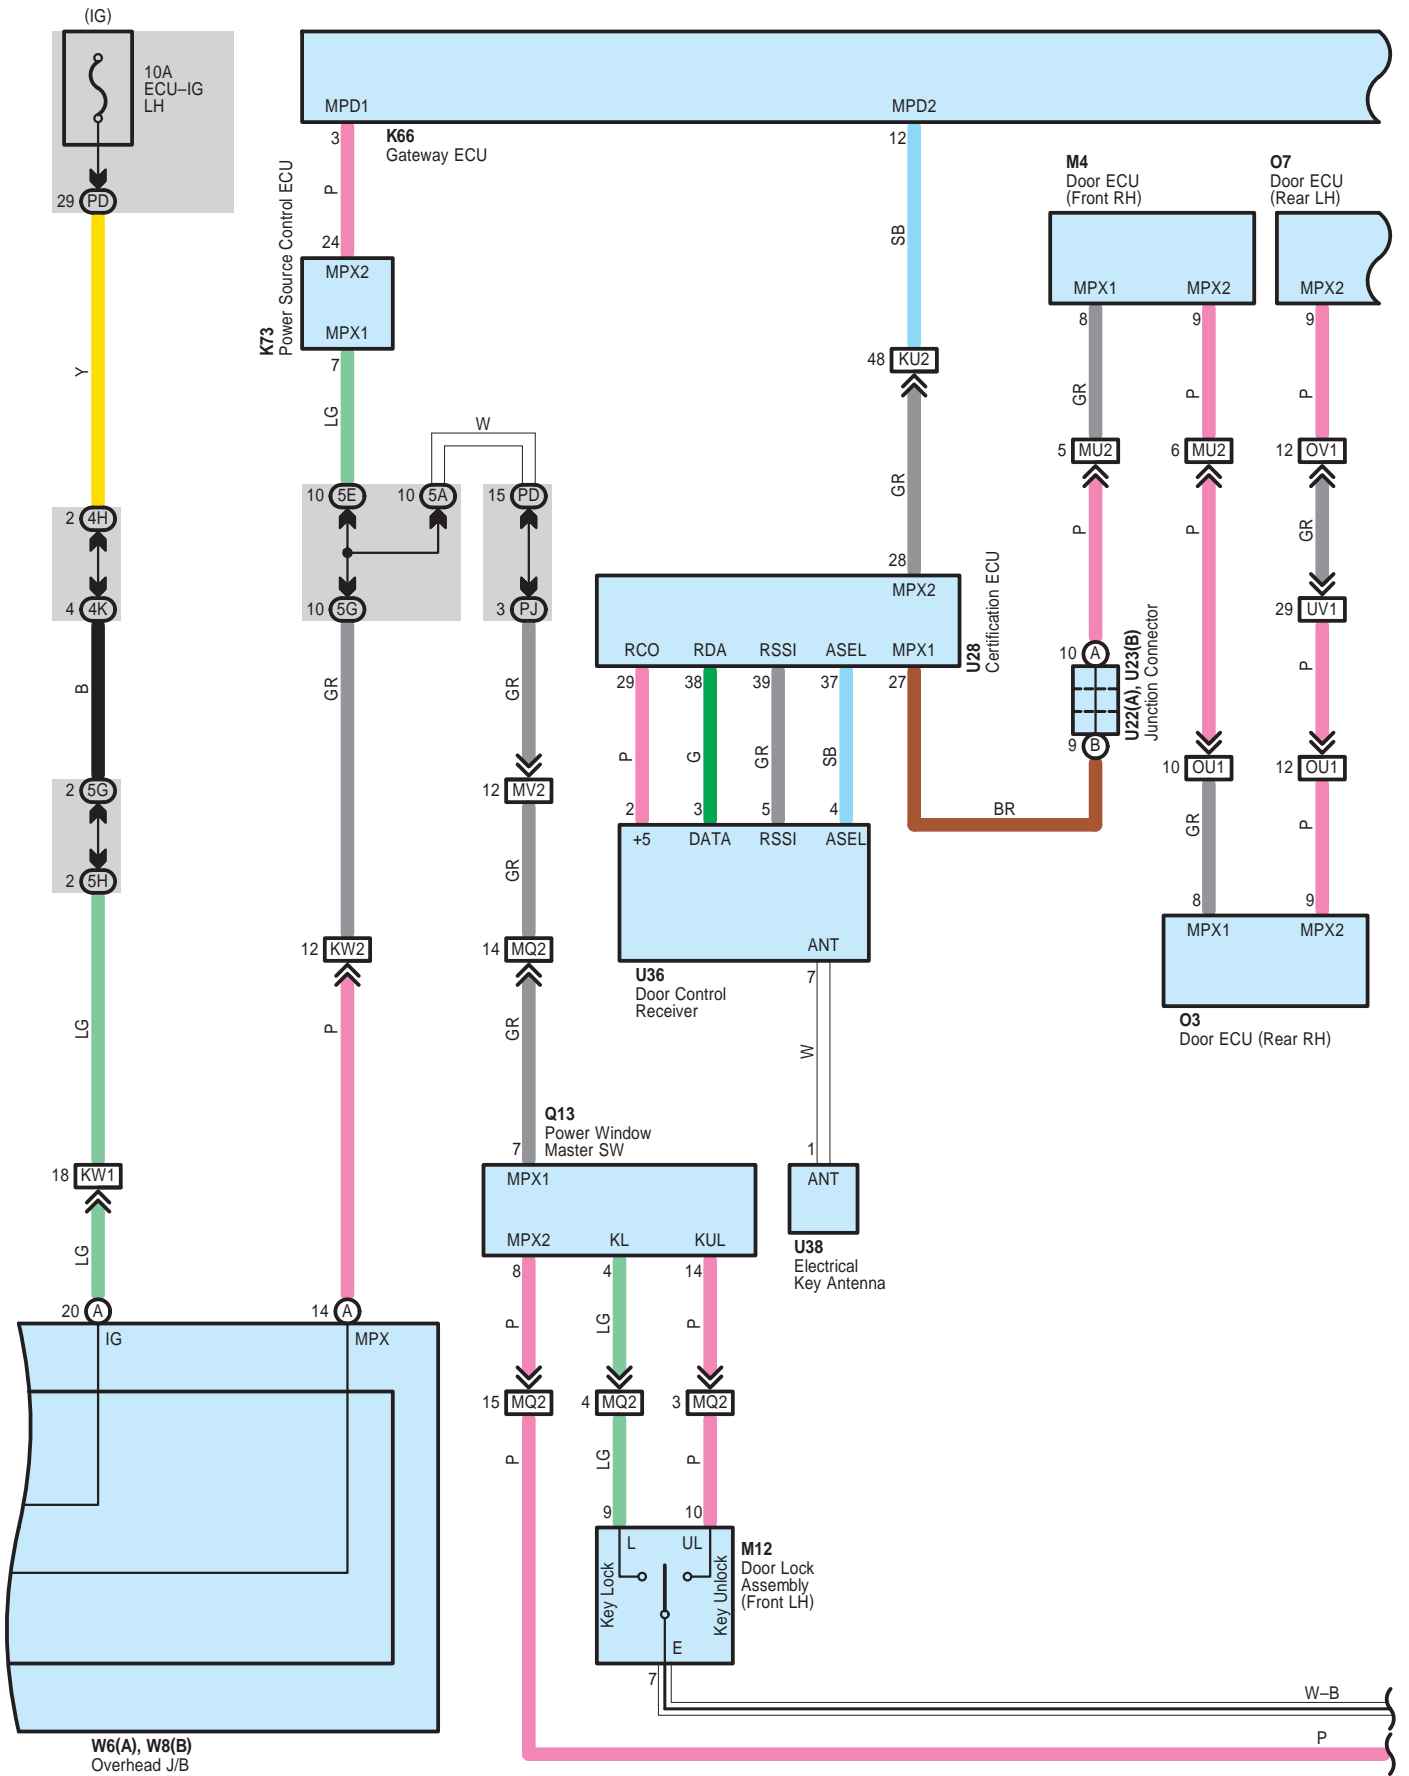

Sliding Roof

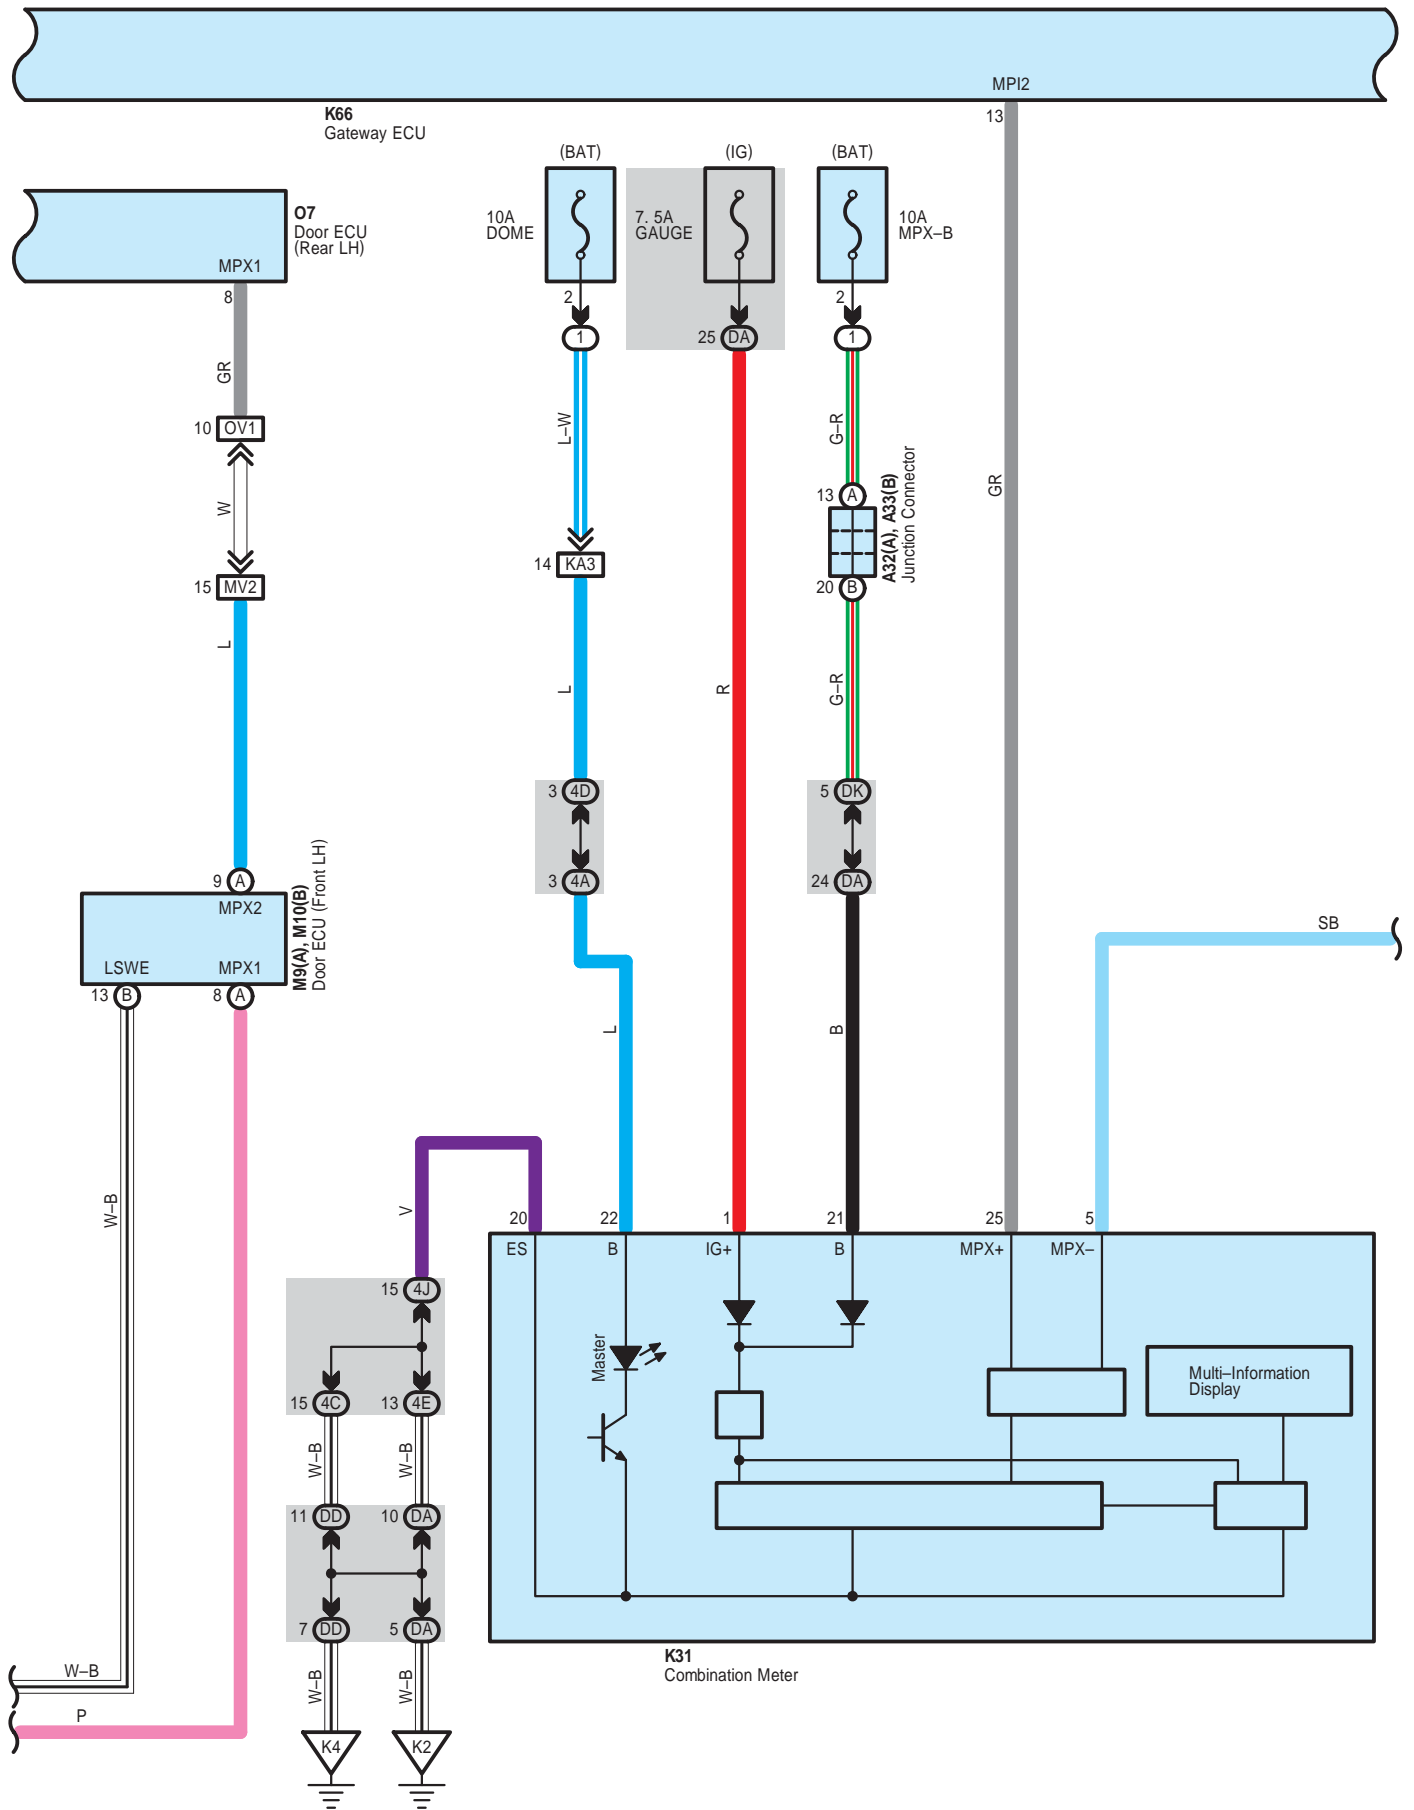

* 1 : w/ Adaptive Front-Lighting System
 * 2 : w/o Adaptive Front-Lighting System

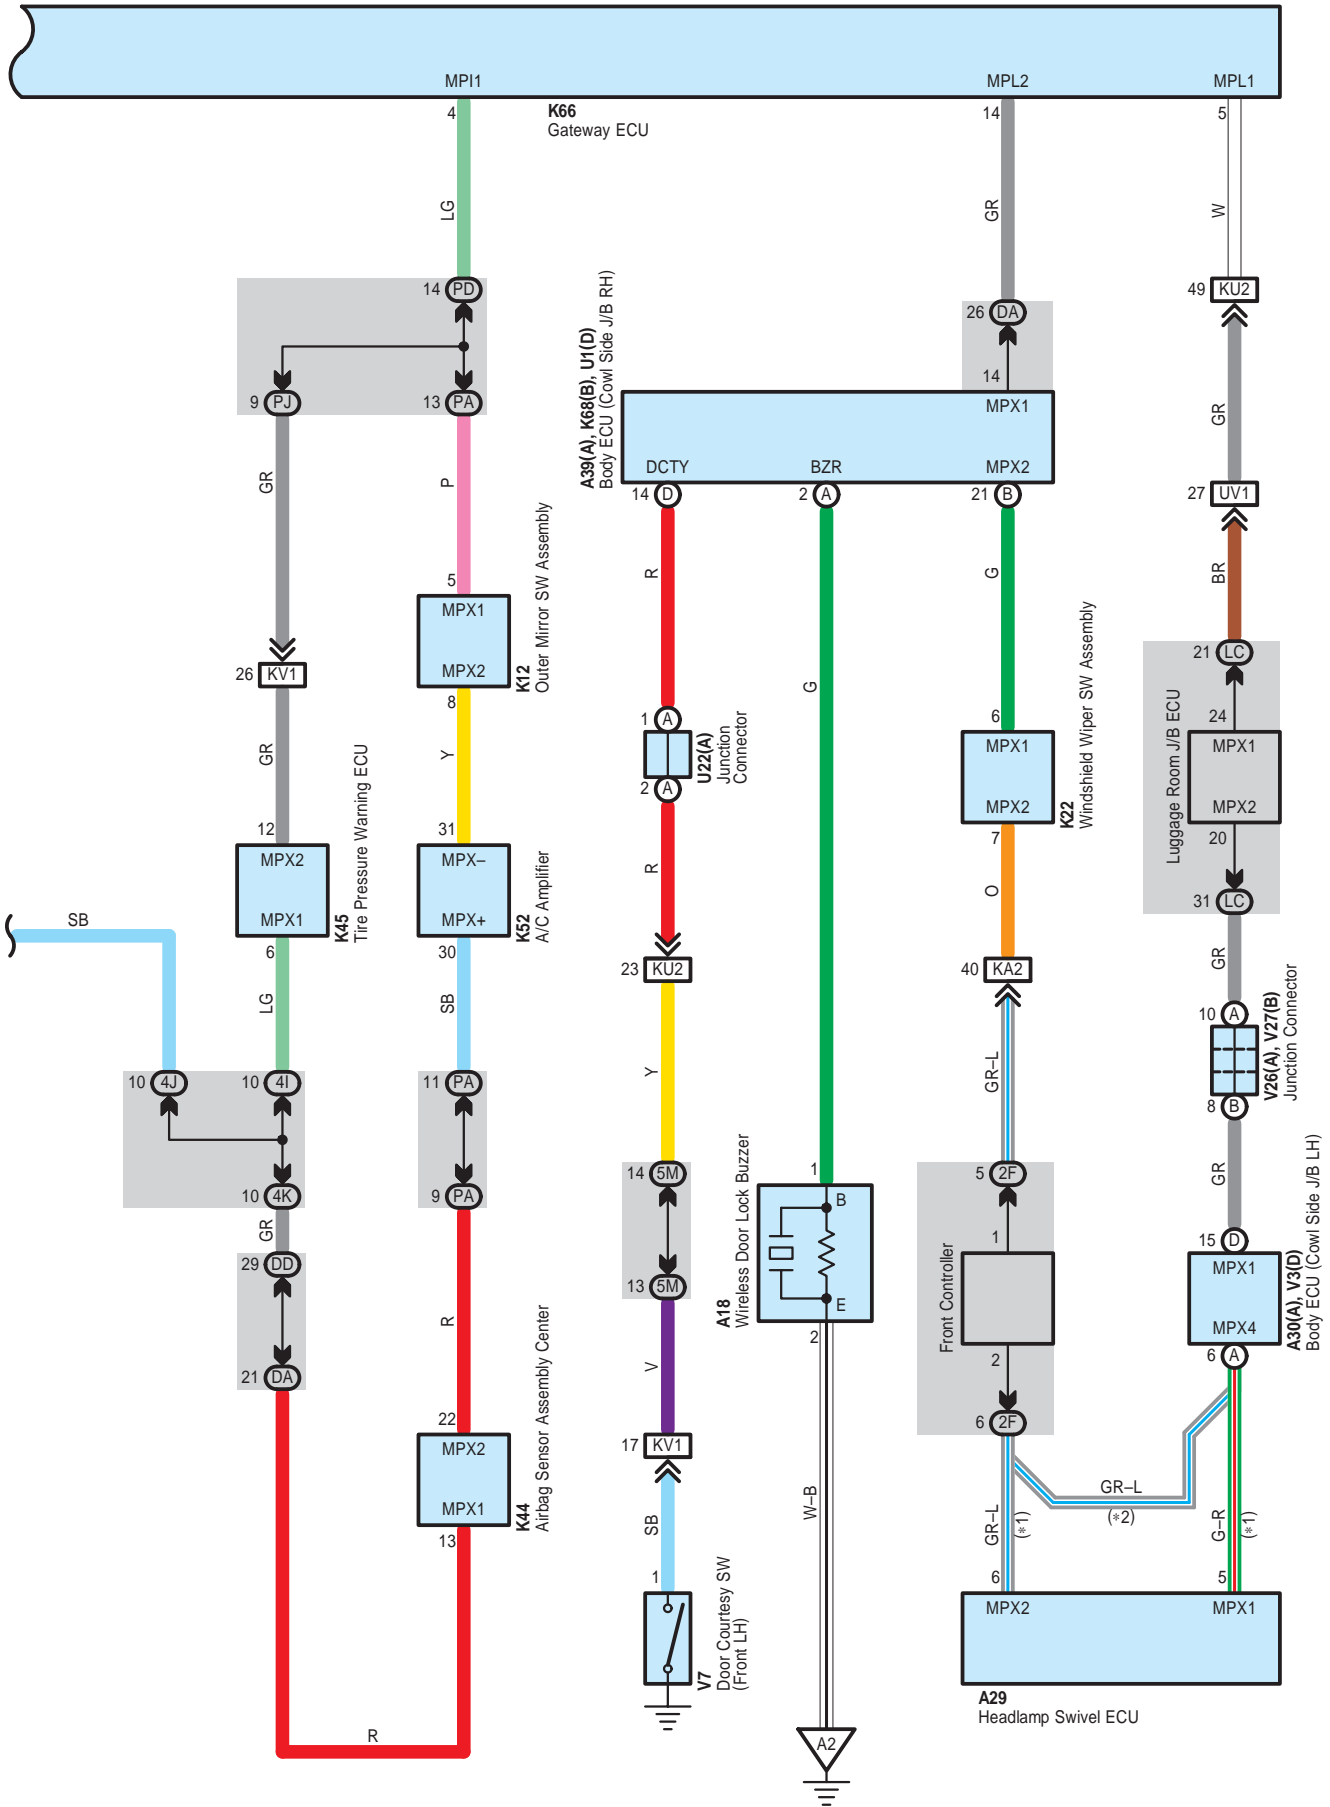

Sliding Roof

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A18	70(3UZ-FE)	K52	79	U22	A 84
	74(2GR-FSE)	K66	79	U23	B 84
A29	80	K68	B 79	U28	84
A30	A 80	K73	79	U36	84
A32	A 80	M4	82	U38	84
A33	B 80	M9	A 82	V3	D 81
A39	A 80	M10	B 82	V7	85
K12	78	M12	82	V26	A 85
K22	78	O3	82	V27	B 85
K31	78	O7	82	W6	A 86
K44	79	Q13	83	W7	86
K45	79	U1	D 81	W8	B 86

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B No.1 (Near the Battery)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2F	27	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
4A	52	Instrument Panel Wire and Center J/B RH (Upper the Glove Box)
4C		
4D		
4E		
4H		
4I		
4J		
4K	48	Instrument Panel Wire and Center J/B LH (Upper the Glove Box)
5A		
5D		
5E		
5G		
5H	43	Instrument Panel Wire and Cowl Side J/B RH (Cowl Side Right)
5M		
DA		
DD	44	Engine Room Main Wire and Cowl Side J/B RH (Cowl Side Right)
DK	59	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LC	37	Instrument Panel Wire and Cowl Side J/B LH (Cowl Side Left)
PA		
PD		
PJ	38	Floor No.2 Wire and Cowl Side J/B LH (Cowl Side Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	92	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KA3	92	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KU2	92	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	92	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
KW1	92	Instrument Panel Wire and Roof Wire (Left Side of the Instrument Panel)
KW2		
MQ2	93	Front Door LH Wire and Front Door LH No.2 Wire (Front Door Inner Panel LH)
MU2	92	Front Door RH Wire and Floor No.1 Wire (Right Kick Panel)
MV2	92	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
OU1	93	Rear Door No.1 Wire and Floor No.1 Wire (Right Center Pillar)
OV1	93	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
UV1	93	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

 : Ground Points

Code	See Page	Ground Points Location
A2	90 (3UZ-FE)	Front Left Fender Apron
	91 (2GR-FSE)	
K1	92	Left Kick Panel
K2	92	Left Side of the Shift Lever
K4	92	Right Kick Panel