


1. NAVIGATION OPERATION

1. Remote Touch

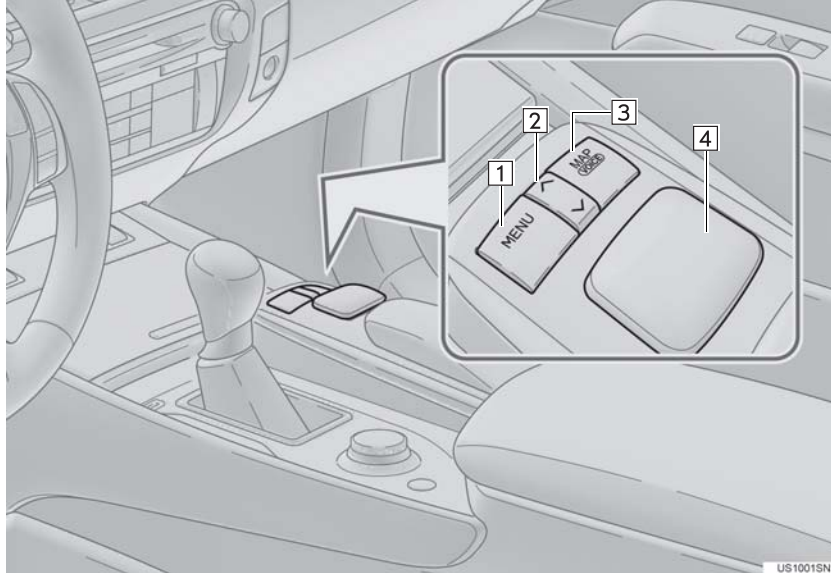

No.	Name	Function	Page
1	"MENU" button	Press to display the "Menu" screen.	22
2	"Λ·V" button	Press to change the scale of the map and to scroll the list screen.	33, 36, 47
3	"MAP/VOICE" button	Press to repeat a voice guidance, cancel the map scroll, start guidance or display the current position.	40
4	Remote Touch knob	Move in the desired direction to select a function, letter and map screen button. Press to enter the selected function, letter or map screen button.	33

1. NAVIGATION OPERATION

2. MAP SCREEN



US1020Lia

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Selecting this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	48
2	Scale indicator	This figure indicates the map scale.	47
3	Zoom out button	Select to reduce the map scale.	47
4	“◀◀ Off”	Select to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by selecting “On ▶▶”.	127
5	“Mark”	Select to register the current position or the cursor position as an address book entry.	41
6	“Route”	Select to change the route.	96, 98

No.	Name	Function	Page
7	"Show on Map"	Select to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, or to record the route.	103, 176, 201
8	Zoom in button	Select to magnify the map scale.	47
9	Foot print map button	Select to display the foot print map and the building information.	47
10	"Map Mode"	Select to display the "Map Mode" screen.	45
11	Distance and time to destination	Displays the distance, estimated travel and arrival time to the destination.	95
12	XM indicator	This mark is displayed when XM information is received.	174, 176
13	"GPS" mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	137

*: Press and hold the "PWR/VOL" knob for 3 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.


INFORMATION

- Remove dirt from the display and its surrounding area by lightly wiping with a soft, dry cloth, such as a cloth used for cleaning glasses with plastic lenses. Scrubbing too hard or using a hard cloth could scratch the display. Also, the display is treated with a coating, and could be damaged by coming into contact with benzine or alkaline solution.
- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.
- When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.
Information about the destination, current position and a compass is displayed on the compass mode screen.
Also the destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.

1. NAVIGATION OPERATION

3. REGISTERING HOME


- 1 Press the "MENU" button on the Remote Touch.

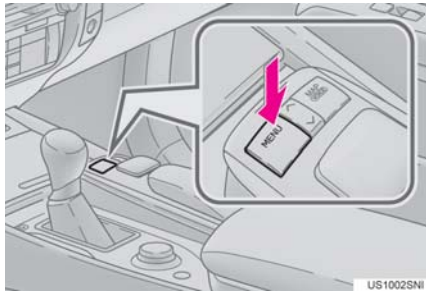

- 2 Select "Destination" and press the Remote Touch knob.



- 3 Select "Go Home" and press the Remote Touch knob.

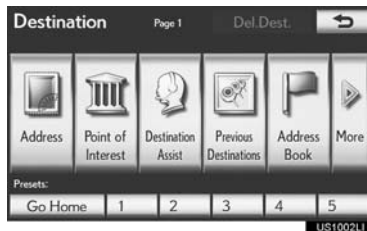

If a home address has not been registered, it can be registered by selecting "Go Home".

- 4 Select "Yes" and press the Remote Touch knob.



- 5 There are 4 different methods to search your home. (See "DESTINATION SEARCH" on page 66.)




- 6 Select "Enter" and press the Remote Touch knob.



The "Edit Home" screen is displayed.

- 7 Select "OK" and press the Remote Touch knob.

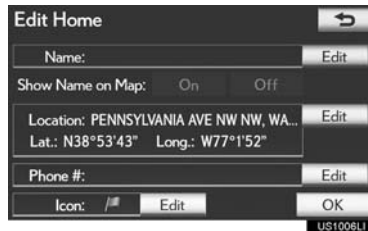

Registration of home is complete.

Home can also be registered by selecting **"Navigation"** on the "Setup" screen. (See "REGISTERING HOME" on page 108.)


The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 109.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 67.)

1. NAVIGATION OPERATION

4. REGISTERING PRESET DESTINATIONS


- 1 Press the "MENU" button on the Remote Touch.

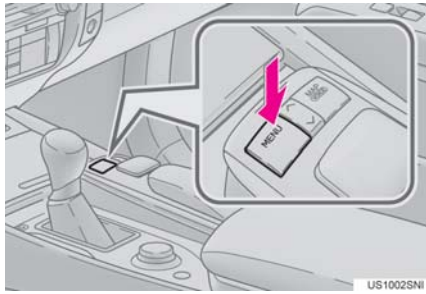

- 2 Select "Destination" and press the Remote Touch knob.



- 3 Select one of the preset destination buttons and press the Remote Touch knob.

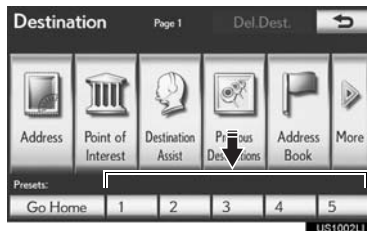


A preset destination can be set to any preset destination button that has not yet been set.

- 4 Select "Yes" and press the Remote Touch knob.



- 5 There are 4 different methods to search preset destinations. (See "DESTINATION SEARCH" on page 66.)

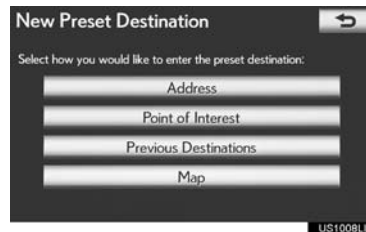


- 6 Select "Enter" and press the Remote Touch knob.



The "Edit Preset Destination" screen is displayed.

- 7 Select "OK" and press the Remote Touch knob.

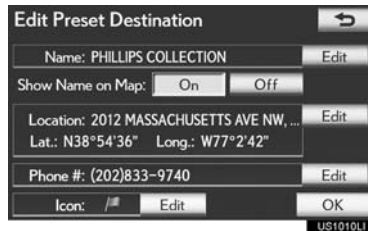

Registration of preset destinations is complete.

Preset destinations can also be registered by selecting "Navigation" on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 110.)


The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 111.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 67.)

1. NAVIGATION OPERATION

5. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the "MENU" button on the Remote Touch.

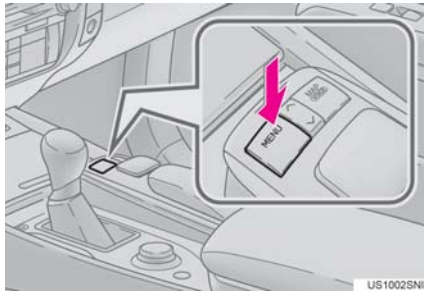

- 2 Select "Destination" and press the Remote Touch knob.



- 3 There are 11 different methods to search destinations. (See "DESTINATION SEARCH" on page 66.)

► Page 1



► Page 2



- 4 Select "Go to" and press the Remote Touch knob.



The navigation system performs a search for the route.

- 5 Select "OK" and press the Remote Touch knob, and start driving.




Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 85.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1. NAVIGATION OPERATION

6. SETTING HOME AS THE DESTINATION


- 1 Press the "MENU" button on the Remote Touch.

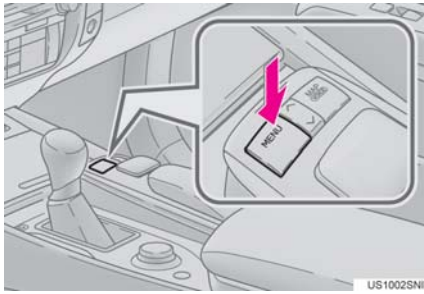

- 2 Select "Destination" and press the Remote Touch knob.



- 3 Select "Go Home" and press the Remote Touch knob.

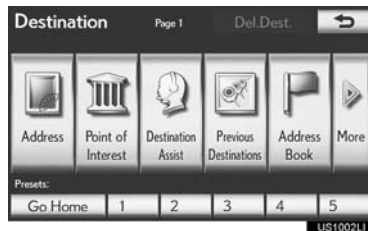

"Go Home" can be used if your home address has been registered. (To register home, see "REGISTERING HOME" on page 108.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 4 Select "OK" and press the Remote Touch knob, and start driving.



Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 85.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

2. FUNCTION INDEX

1. NAVIGATION SYSTEM FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	12
Displaying the current position	40
Viewing the current position vicinity map	40
Changing the scale	47
Changing the map orientation	48
Displaying Points of Interest	103
Displaying the estimated travel/arrival time to the destination	95
Selecting the map mode	45
Deleting map screen buttons	127
Displaying traffic information	175

Searching destinations	Page
Searching the destination	66
Changing the selected search area	66
Operating the map location of the selected destination	85

► Route guidance

Before starting route guidance	Page
Setting the destination	85
Viewing alternative routes	87
Starting route guidance	85

Before starting or during route guidance	Page
Viewing the route	85
Adding destinations	96
Changing the route	98
Displaying the estimated travel/arrival time to the destination	95

During route guidance	Page
Pausing route guidance	102
Adjusting route guidance volume	62
Deleting the destination	97
Displaying the entire route map	99

► Useful functions

Address book	Page
Registering address book entries	113
Marking icons on the map	115


Information	Page
Displaying vehicle maintenance	131

Voice command system	Page
Operating the system with your voice	142

3. QUICK REFERENCE

1. "Menu" SCREEN

Press the "MENU" button on the Remote Touch to display the "Menu" screen.

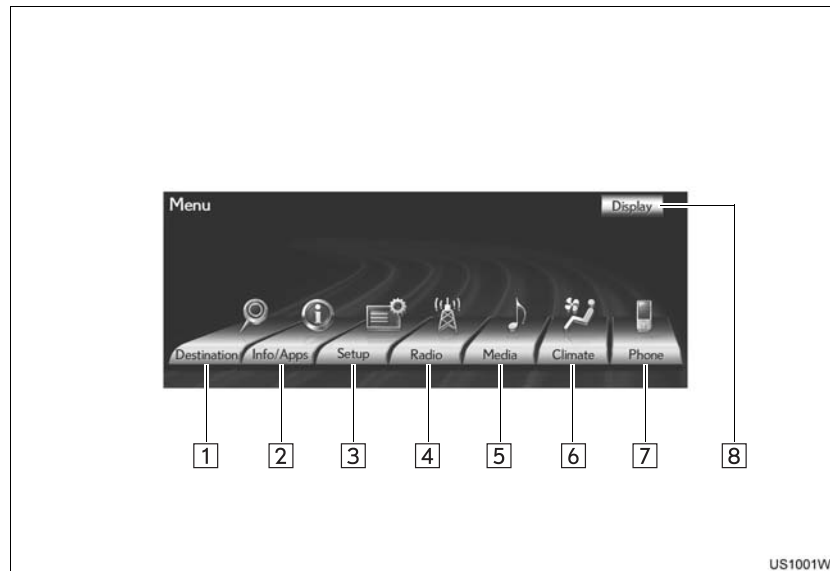

No.	Name	Function	Page
1	"Destination"	Select to display the "Destination" screen.	14, 16, 18, 19, 24, 66, 197, 199
2	"Info/Apps" ("Info")	Select to display the "Information" screen. For vehicles sold in Canada, "Info" is used instead of "Info/Apps".	28, 156, 161, 164, 167, 171, 175, 190, 193, 202
3	"Setup"	Select to display the "Setup" screen.	26, 50, 61, 107, 123, 131, 178, 205
4	"Radio"	Select to display the radio control screen.	Owner's Manual
5	"Media"	Select to display the media control screen.	Owner's Manual
6	"Climate"	Select to display the air conditioning control screen.	Owner's Manual
7	"Phone"	Select to display the hands-free operation screen.	Owner's Manual
8	"Display"	Select to adjust the contrast and brightness of the screens, turn the display off, etc.	38


INFORMATION

- When an interruption screen is being displayed on the "Side Display", the "Menu" screen will be shown on the "Main Display". (See page 208.)

3. QUICK REFERENCE

2. "Destination" SCREEN

The "Destination" screen enables a destination search. Press the "MENU" button on the Remote Touch, then select "Destination" to display the "Destination" screen.

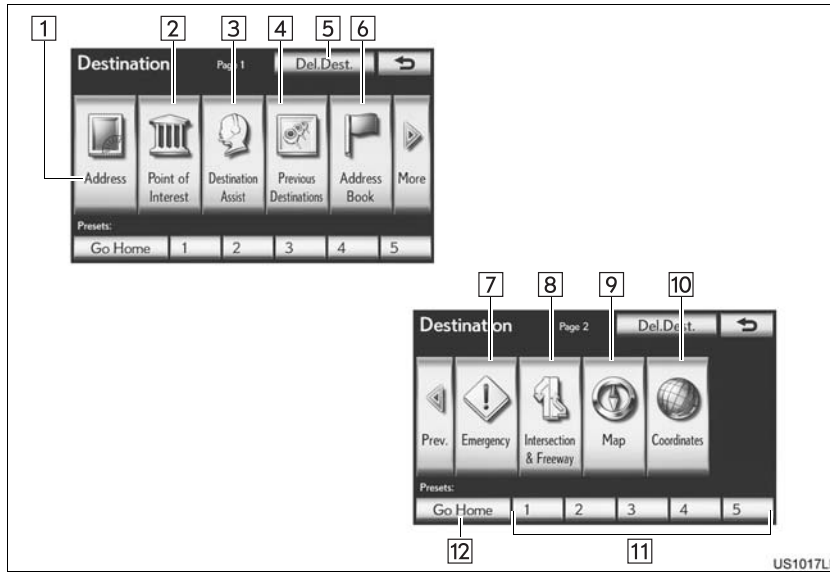


No.	Name	Function	Page
1	"Address"	Select to input a house number and the street address using the input keys.	68
2	"Point of Interest"	To select one of the POIs that have already been stored in the system's database.	71,199
3	"Destination Assist"	Select to provide you with live assistance finding destinations via the Lexus Enform with Safety Connect response center.	78,197
4	"Previous Destinations"	To select a destination from any of the last 100 previously set destinations and from the previous starting point.	78
5	"Del.Dest."	Select to delete set destinations.	84

No.	Name	Function	Page
6	"Address Book"	To select the desired location from a registered entry in "Address book". (To register address book entries, see "REGISTERING ADDRESS BOOK ENTRIES" on page 113.)	79
7	"Emergency"	To select one of the 4 categories of emergency service points that have already been stored in the system's database.	79
8	"Intersection & Freeway"	Select to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	80
9	"Map"	Select to enable setting a destination by selecting a location on the map screen.	83
10	"Coordinates"	Select to enter latitude and longitude coordinates.	83
11	Preset destination buttons	To select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 110.)	67
12	"Go Home"	To select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 108.)	67

3. QUICK REFERENCE

3. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "MENU" button on the Remote Touch, then select "Setup" to display the "Setup" screen.

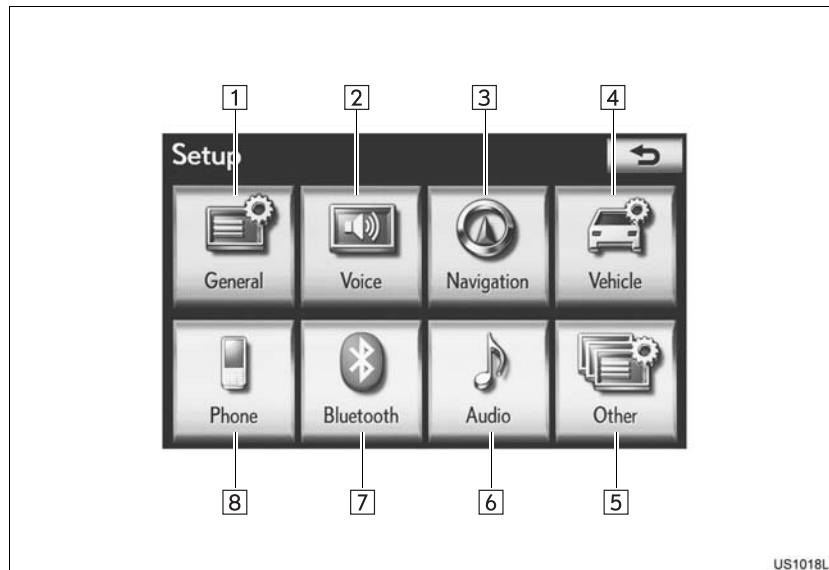


No.	Name	Function	Page
1	"General"	Select to change the selected language, operation sound settings, automatic screen change, etc.	50
2	"Voice"	Select to set the voice guidance settings.	61
3	"Navigation"	Select to access the page which enables the setting of the average cruising speed, displayed screen contents, POI categories, etc.	107
4	"Vehicle"	Select to set vehicle information such as maintenance information.	131
5	"Other"	Select to set Lexus Insider, XM Sports, XM Stocks and XM Fuel Prices.	178, 205
6	"Audio"	Select to set iPod and HD Radio™ channel settings.	Owner's Manual
7	"Bluetooth*"	Select to set Bluetooth® phones and Bluetooth® audio devices.	Owner's Manual
8	"Phone"	Select to set the phone sound, phonebook and message settings.	Owner's Manual

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. QUICK REFERENCE

4. "Information" SCREEN

This screen can be used to display the XM satellite system, fuel consumption, etc. Press the "MENU" button on the Remote Touch, then select "Info/Apps" to display the "Information" screen.

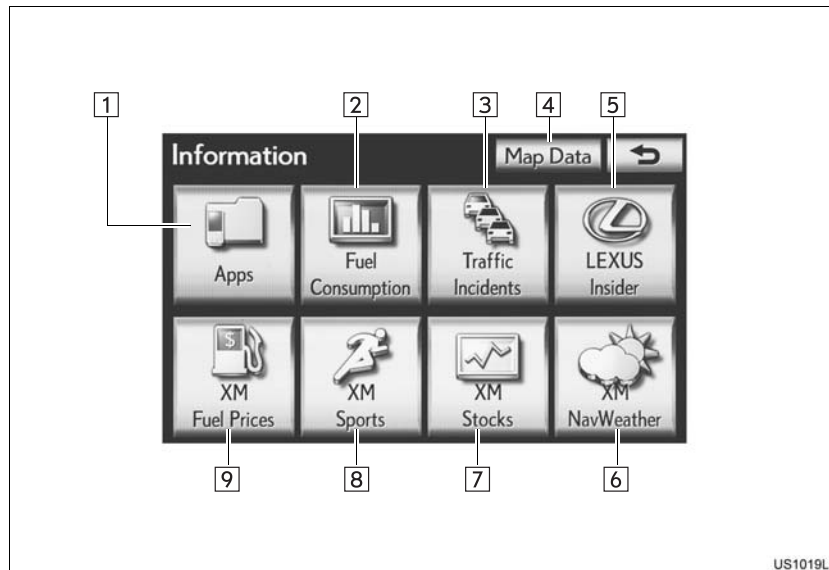

No.	Name	Function	Page
1	"Apps"	Select to display the "Apps" screen.	190,193
2	"Fuel Consumption"	Select to display the fuel consumption screen.	Owner's Manual
3	"Traffic Incidents"	Select to display traffic incidents.	175
4	"Map Data"	Select to display mapdata information.	156
5	"LEXUS Insider"	Select to display the "LEXUS Insider" screen.	202
6	"XM NavWeather"	Select to display weather information.	171
7	"XM Stocks"	Select to display personally selected stocks information.	164
8	"XM Sports"	Select to display personally selected sports teams information.	161
9	"XM Fuel Prices"	Select to display current fuel prices and gas station locations information.	167

