


REMOVAL

PROCEDURE

1. REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL

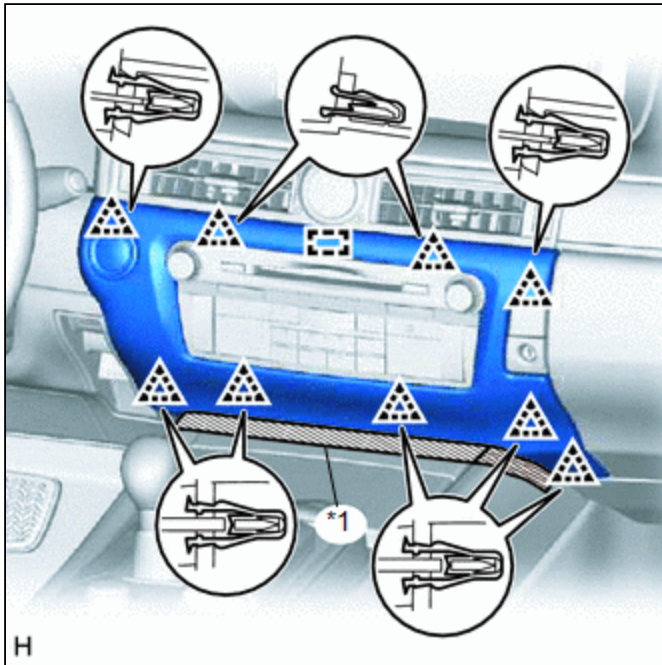

(a) Put protective tape around the center instrument cluster finish panel.


Text in Illustration

*1	Protective Tape
----	-----------------

(b) Detach the 9 clips and guide.

(c) Disconnect the connector and remove the center instrument cluster finish panel.

2. REMOVE INSTRUMENT PANEL FINISH PANEL END LH

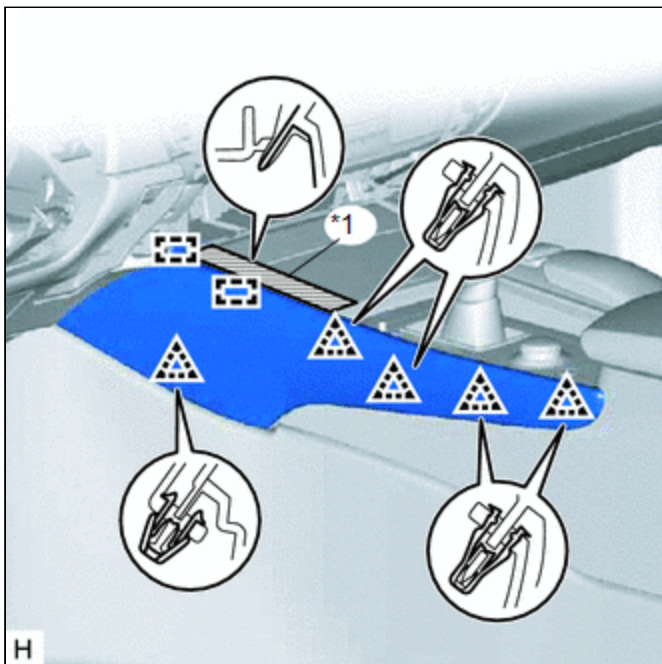


(a) Put protective tape around the instrument panel finish panel end LH.

Text in Illustration

*1	Protective Tape
----	-----------------

(b) Detach the 5 clips and 2 guides and remove the instrument panel finish panel end LH.

3. REMOVE INSTRUMENT PANEL FINISH PANEL END RH

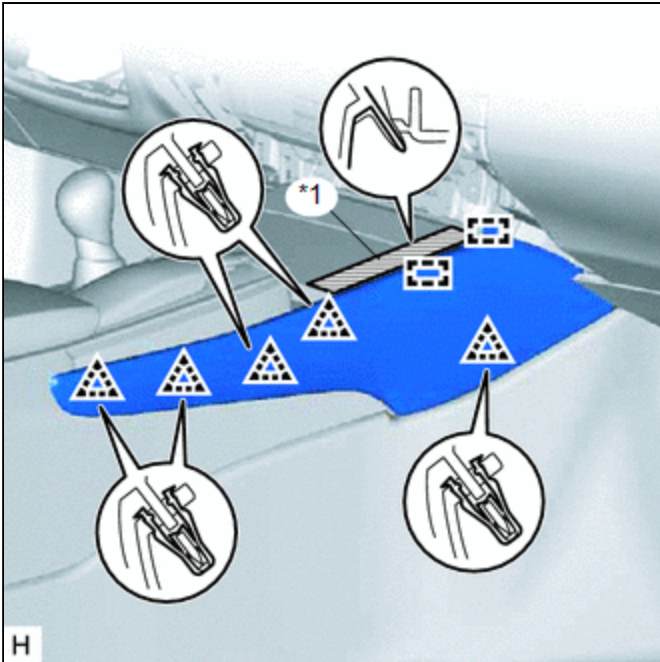

(a) Put protective tape around the instrument panel finish panel end RH.

Text in Illustration


*1	Protective Tape
----	-----------------

(b) Detach the 5 clips and 2 guides and remove the instrument panel finish panel end RH.

4. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY

(a) Detach the claw and slide the shifting hole cover downwards.


(b) Twist the shift lever knob sub-assembly in the direction indicated by the arrow and remove it.

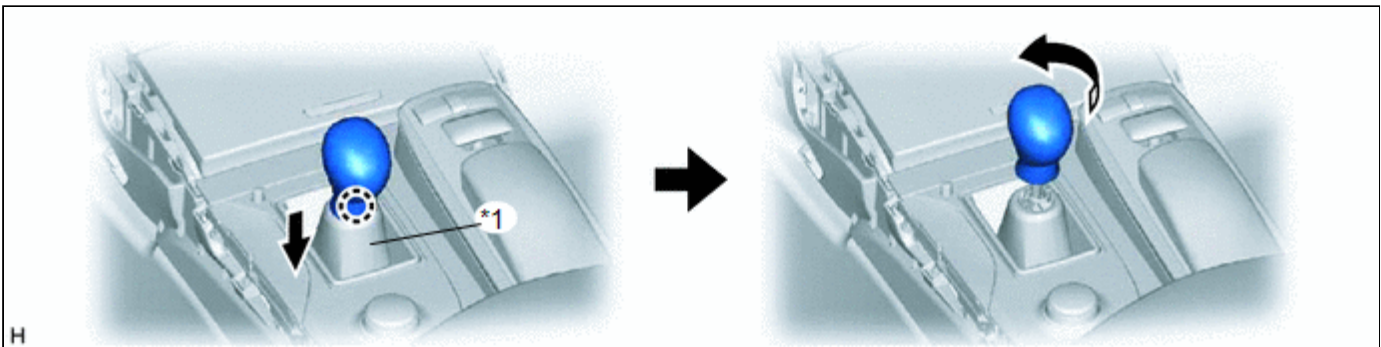

Text in Illustration

*1	Shifting Hole Cover	-	-
----	---------------------	---	---

5. REMOVE UPPER CONSOLE PANEL

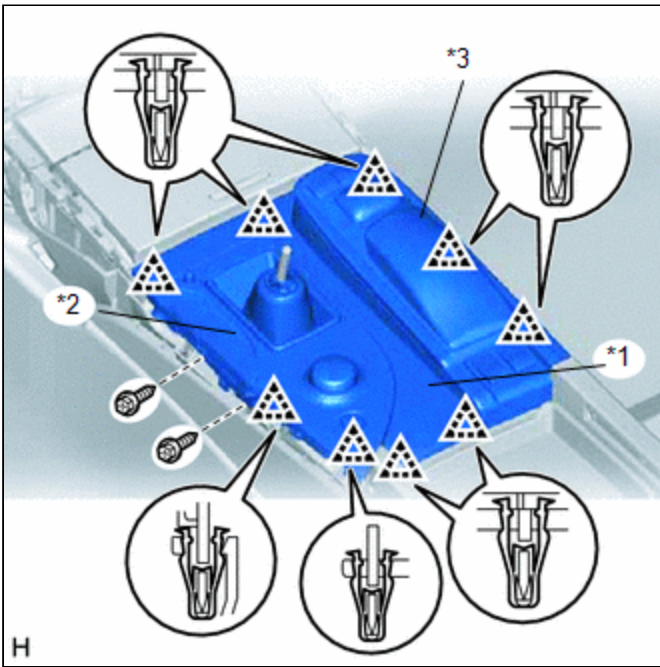

- (a) Remove the 2 screws.
- (b) Detach the 9 clips.
- (c) Disconnect the connectors, detach the clamps, and remove the upper console panel together with the upper rear console panel sub-assembly and remote touch assembly.

Text in Illustration

*1	Upper Console Panel
*2	Upper Rear Console Panel Sub-assembly
*3	Remote Touch Assembly