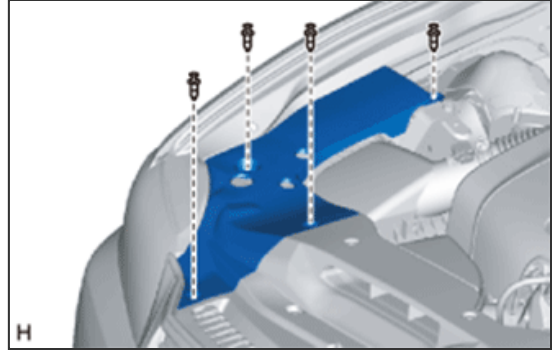


## FRONT BUMPER (for Sport Package) &gt; REMOVAL

for Preparation [Click here](#)

**1. REMOVE ENGINE ROOM SIDE COVER**

- a. Remove the 4 clips and engine room side cover.

**2. REMOVE COOL AIR INTAKE DUCT SEAL**

- a. Remove the 7 clips and cool air intake duct seal.

**3. REMOVE FRONT BUMPER COVER**


- a. Remove the 8 screws.




- b. Using a screwdriver, turn the 2 pin hold clips 90° and remove the pin hold clips and screw.

**HINT:**

Use the same procedure for the pin hold clips and screw on the other side.

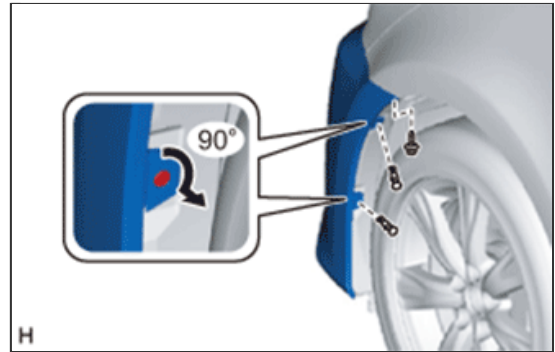

- c. Remove the 5 clips.

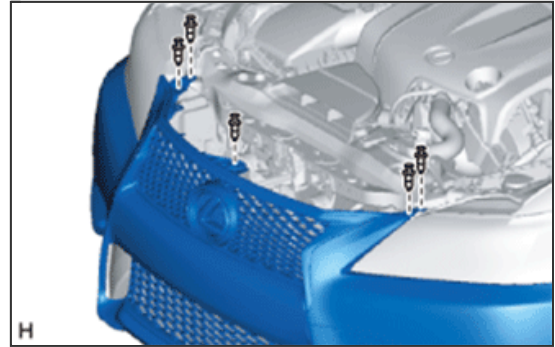


- d. Put protective tape around the front bumper cover.

**Text in Illustration**

*1	Protective Tape
----	-----------------

- e. Detach the 10 claws and remove the front bumper cover.

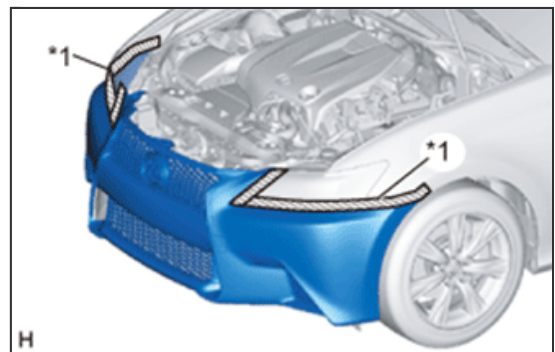

- f. w/ Headlight Cleaner System:


- i. Disconnect the 2 headlight washer hoses and then drain the washer fluid.

**HINT:**

Use a container to collect the washer fluid.


- g. w/ LEXUS Parking Assist-sensor System:

- i. Disconnect the No. 4 engine room wire.

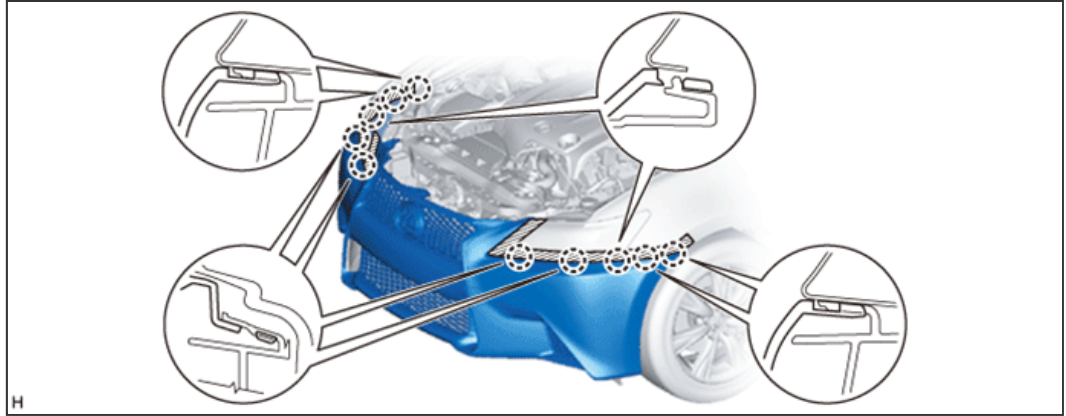

**4. REMOVE FRONT BUMPER ENERGY ABSORBER**

- a. Remove the front bumper energy absorber.

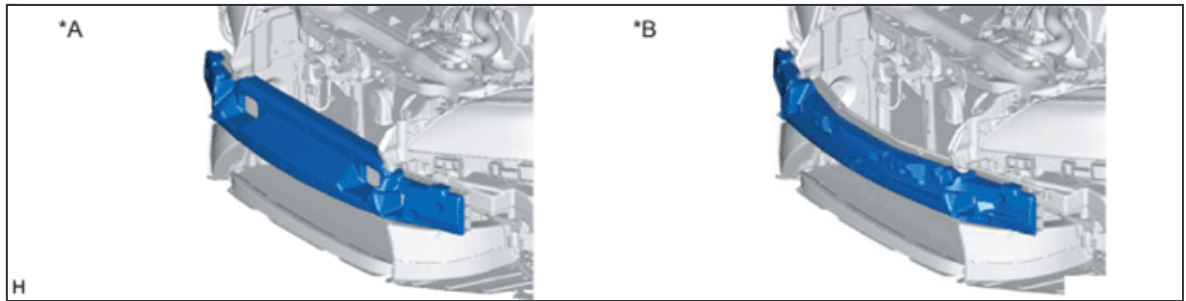


**Text in Illustration**

*A	for Type A	*B	for Type B
----	------------	----	------------

**5. REMOVE HEADLIGHT WASHER HOSE (w/ Headlight Cleaner System)**

- a. Disconnect the headlight washer hose from the headlight washer tank.
- b. Detach the 4 clamps and remove the headlight washer hose.

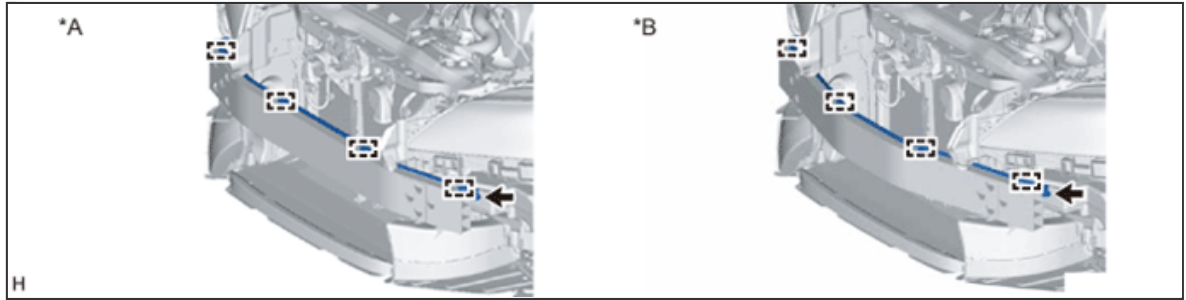


Text in Illustration

*A	for Type A	*B	for Type B
----	------------	----	------------

6. REMOVE FRONT BUMPER REINFORCEMENT


- a. Using a clip remover, detach the clamp and remove the thermistor.
- b. Remove the 2 clips.

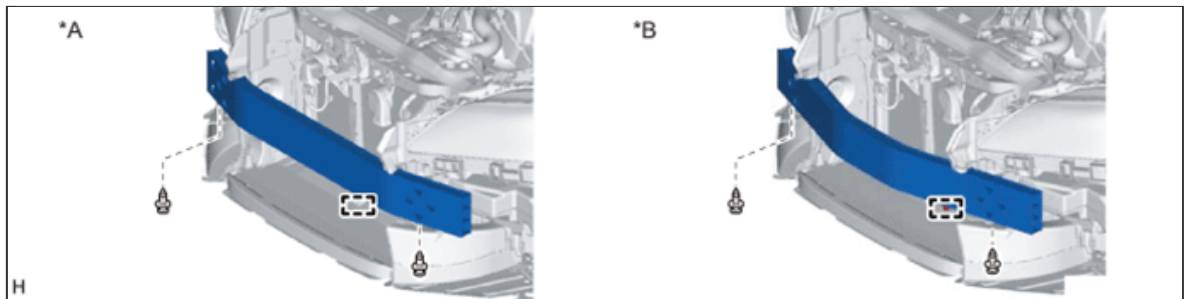

Text in Illustration

*A	for Type A	*B	for Type B
----	------------	----	------------

- c. Remove the 6 bolts and front bumper reinforcement.

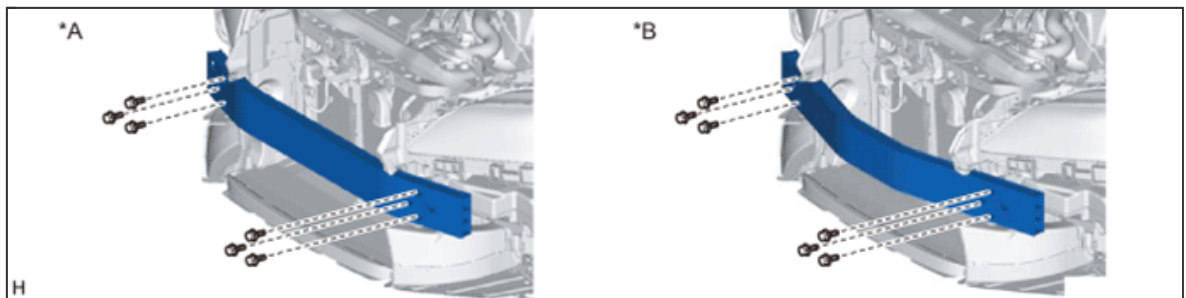

## Text in Illustration

*A	for Type A	*B	for Type B
----	------------	----	------------

## 7. REMOVE FRONT BUMPER SIDE RETAINER LH

- a. Remove the screw.
- b. Detach the claw and remove the front bumper side retainer.



## 8. REMOVE FRONT BUMPER SIDE RETAINER RH

**HINT:**

Use the same procedure described for the LH side.

## 9. REMOVE FRONT WHEEL OPENING EXTENSION PAD LH

- a. Remove the 4 screws and front wheel extension pad.



## 10. REMOVE FRONT WHEEL OPENING EXTENSION PAD RH

**HINT:**

Use the same procedure described for the LH side.

