

- c. Attach the clamp.

8. INSTALL STEERING PAD SWITCH ASSEMBLY

- a. Attach the 2 claws and 2 pins to install the pad switch assembly.
- b. Install the 2 screws.
- c. Connect the connector and clamp.
- d. Connect the connector to the spiral cable.

9. ADJUST SPIRAL WITH SENSOR CABLE SUB-ASSEMBLY

NOTICE:


Do not adjust the spiral cable with the battery connected and the engine switch on (IG).

- a. Check that the engine switch is off.
- b. Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

- c. Check if the spiral cable sub-assembly is centered.

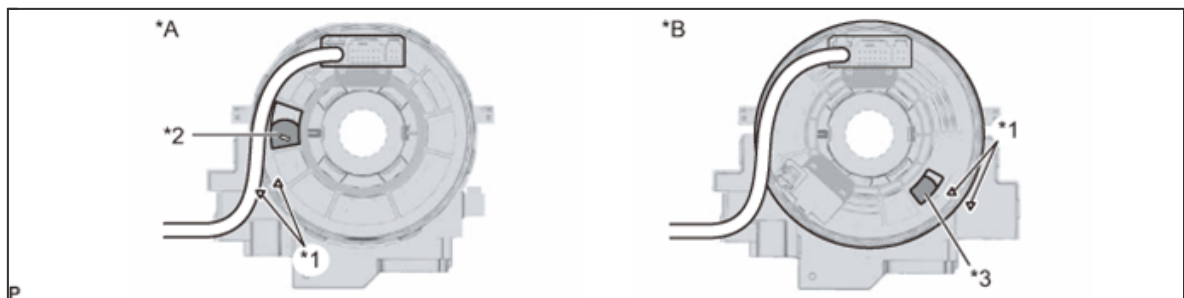

Text in Illustration



*A	w/o Steering Heater	*B	w/ Steering Heater
*1	Alignment Mark	*2	Colored Roller (Yellow)
*3	Flat Cable	-	-

HINT:

When the spiral cable sub-assembly is centered, the alignment marks are aligned and the colored roller (yellow) or flat cable shown in the illustration is visible.

- d. If the spiral cable sub-assembly is not centered, center it.
- e. While pushing on the interlock indicated in the illustration, rotate the spiral cable sub-assembly counterclockwise slowly by hand until it stops.

Text in Illustration

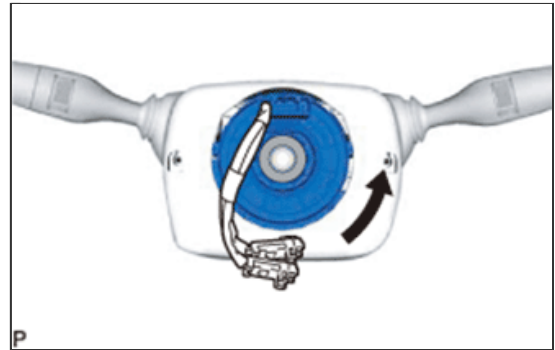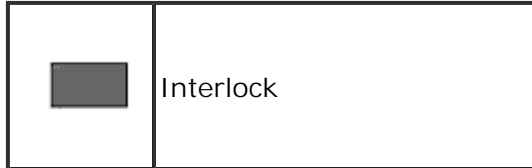


NOTICE:

- When rotating the spiral cable sub-assembly, make sure to push on the interlock indicated in the illustration to release the interlock mechanism.
- Do not turn the spiral cable sub-assembly using the airbag wire harness.

- f. While pushing on the interlock indicated, rotate the spiral cable sub-assembly clockwise approximately 2.5 turns to the position where the colored roller (yellow) or flat cable is visible.

Text in Illustration

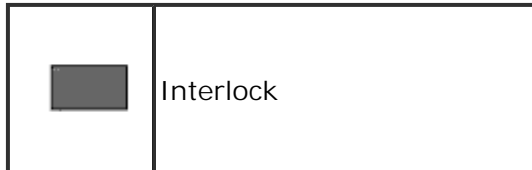

NOTICE:

- When rotating the spiral cable sub-assembly, make sure to push on the interlock indicated in the illustration to release the interlock mechanism.
- Do not turn the spiral cable sub-assembly using the airbag wire harness.

HINT:

The spiral cable will rotate approximately 2.5 turns to both the left and right from the center.

10. INSTALL STEERING WHEEL ASSEMBLY

- a. Align the matchmarks on the steering wheel assembly and steering main shaft assembly.
- b. Install the steering wheel assembly set nut.