

REAR PACKAGE TRAY SPEAKER > REMOVAL

for Preparation [Click here](#)

1. PRECAUTION

NOTICE:

After turning the engine switch off, waiting time may be required before disconnecting the cable from the battery terminal. Therefore, make sure to read the disconnecting the cable from the battery terminal notice before proceeding with work ([Click here](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected ([Click here](#)).

3. REMOVE BENCH TYPE REAR SEAT CUSHION ASSEMBLY

- a. Quickly lift up the front of the rear seat cushion assembly as shown in the illustration to detach the 2 rear seat cushion lock hooks.


Standard Measurement

a	100 mm (3.94 in.) or less
---	---------------------------

NOTICE:

If the cushion is not lifted up quickly, the cushion frame will be damaged.


- i. Choose a hook to detach first. Place your hands near the hook as shown in the illustration. Then quickly lift the bench type seat cushion assembly to detach the hook.
- ii. Repeat the step above for the other hook.
- b. Detach the 2 rear hooks of the bench type rear seat cushion assembly from the bench type rear seatback assembly.
- c. w/ Seat Heater System:
Disconnect the 2 seat cushion heater connectors.

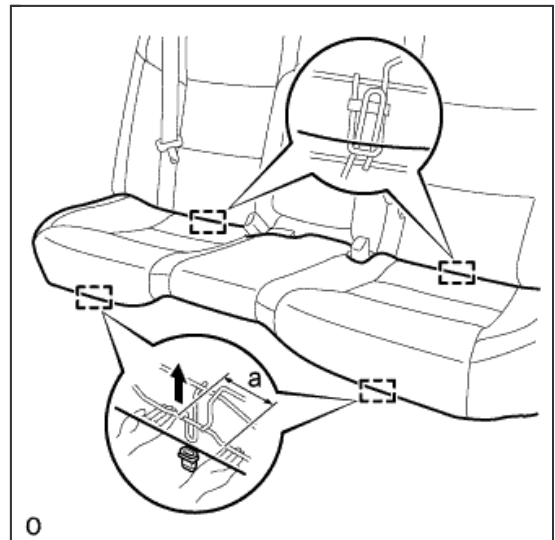

- d. Remove the bench type rear seat cushion assembly.

NOTICE:

Be careful not to damage the vehicle body.

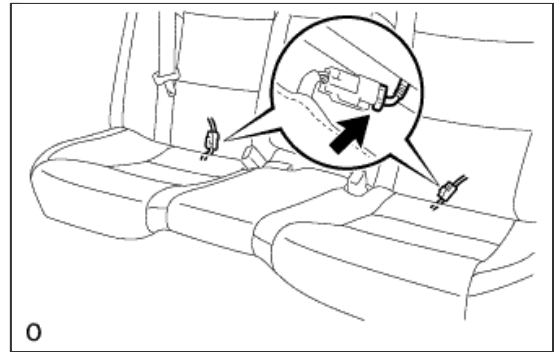

4. REMOVE REAR SEAT HEADREST ASSEMBLY


- a. Remove the 2 rear seat headrest assemblies.

5. REMOVE REAR SEAT CENTER HEADREST ASSEMBLY

- a. Remove the rear seat center headrest assembly.

6. REMOVE BENCH TYPE REAR SEATBACK ASSEMBLY


- a. Remove the bolts and disconnect the anchor part of the rear seat 3 point type outer belt assembly RH.
- b. Remove the bolts and disconnect the anchor part of the rear seat 3 point type outer belt assembly LH.
- c. Disconnect the rear seat inner with center belt assembly LH connector.
- d. Remove the bolts and disconnect the anchor part of the rear seat inner with center belt assembly LH.

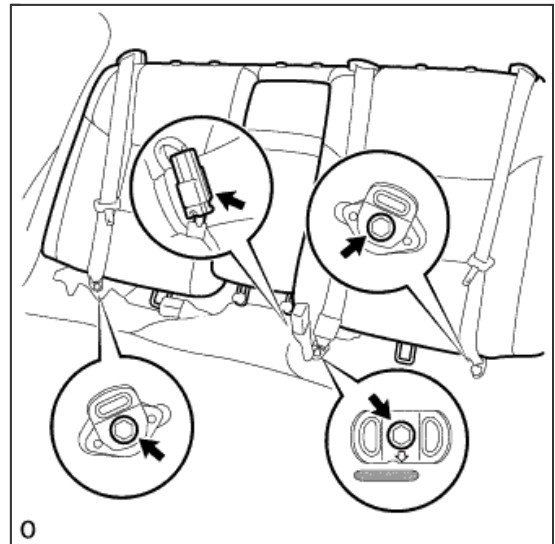

- e. Using a screwdriver, detach the 2 claws to open the 2 caps of the rear seat shoulder belt guide.

HINT:

- Tape the screwdriver tip before use.
- Use the same procedure to open the 2 caps on the other side.

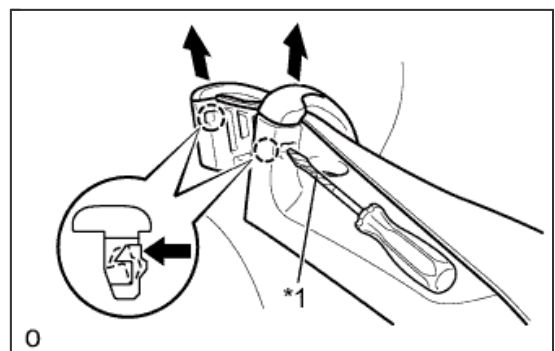

Text in Illustration

*1 Protective Tape

- f. Disconnect the rear seat 3 point type outer belt assembly from the shoulder belt guide.

HINT:

Use the same procedure to disconnect the rear seat 3 point type outer belt assembly on the other side.


- g. Using a screwdriver, detach the claw to open the cap of the rear center seat shoulder belt guide.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1 Protective Tape

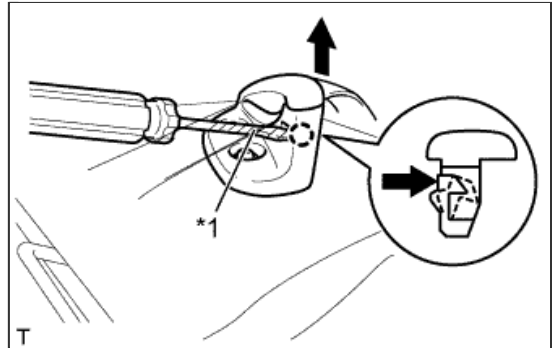


- h. Disconnect the rear seat inner with center belt assembly LH from the rear center seat shoulder belt guide.


- i. Disconnect the 2 rear seat airbag connectors.

NOTICE:

When disconnecting any airbag connector, take care not to damage the airbag wire harness.

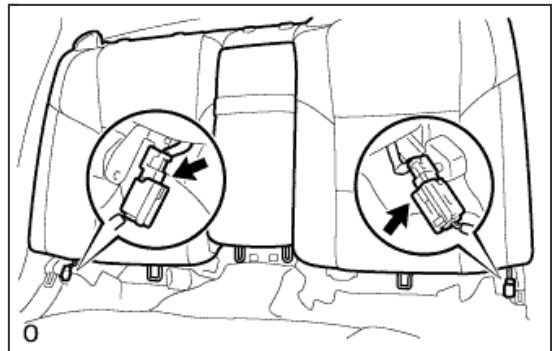

- i. Push down the white housing lock and slide the yellow CPA (at this time, the connector cannot be disconnected yet).

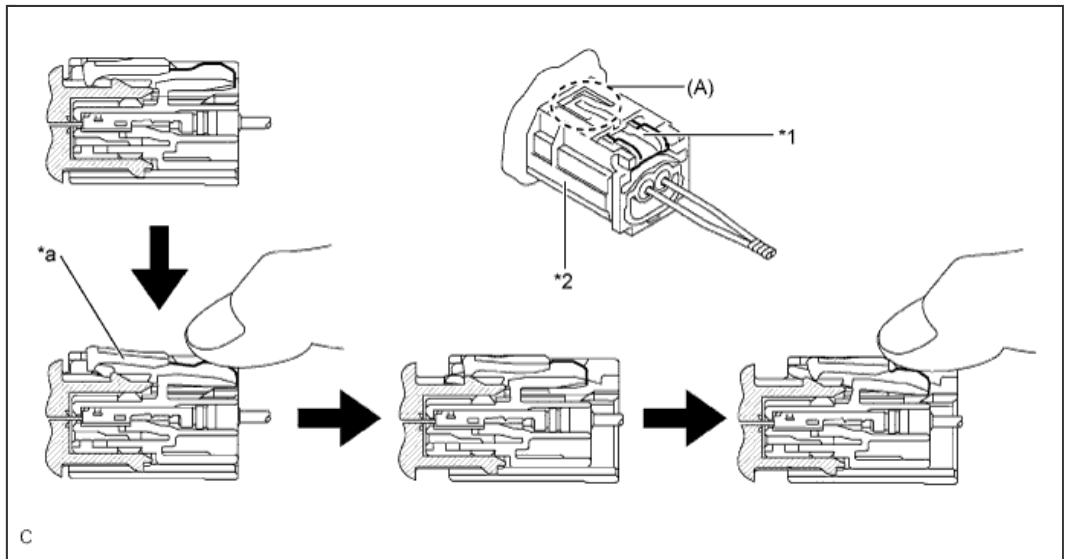

Text in Illustration


*1	Housing Lock	*2	CPA
*a	Connector Lock is Released	-	-

- ii. Push down the white housing lock again and disconnect the connector.

NOTICE:

Do not push down the part (A) shown in the illustration when disconnecting.


- iii. After disconnecting the connector, check that the position of the white housing lock is correct as shown in the illustration.

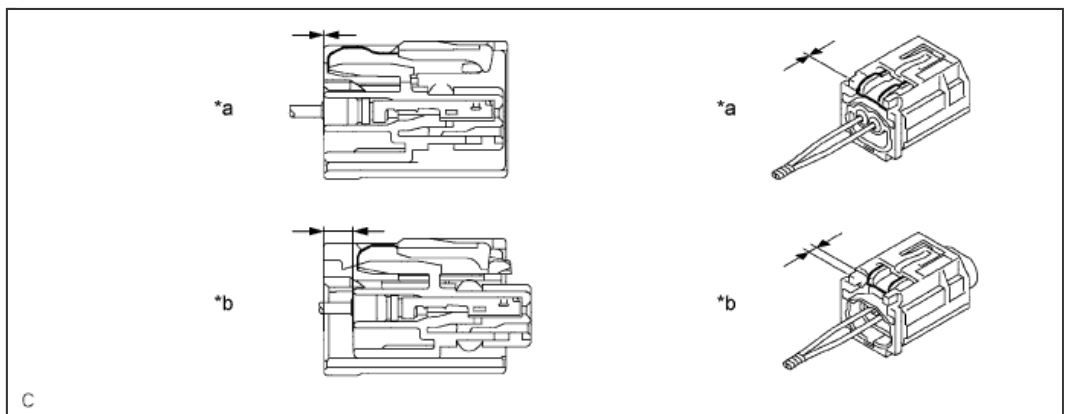

Text in Illustration

*a	Incorrect	*b	Correct
----	-----------	----	---------

- j. Disconnect the rear seat wire RH connector.

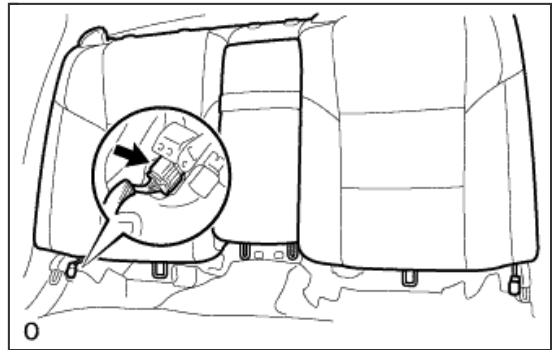


- k. Remove the 4 bolts.
- l. Lift the seatback assembly to detach the 2 hooks, and then remove the bench type rear seatback assembly.

NOTICE:

- 2 or more people are required when carrying the bench type rear seatback assembly out of the vehicle.
- Be careful not to damage the vehicle body.

HINT:

This procedure is easier to perform if the front luggage compartment trim cover is removed beforehand, as the rear seat center armrest box bezel will not get caught on it ([Click here](#)).

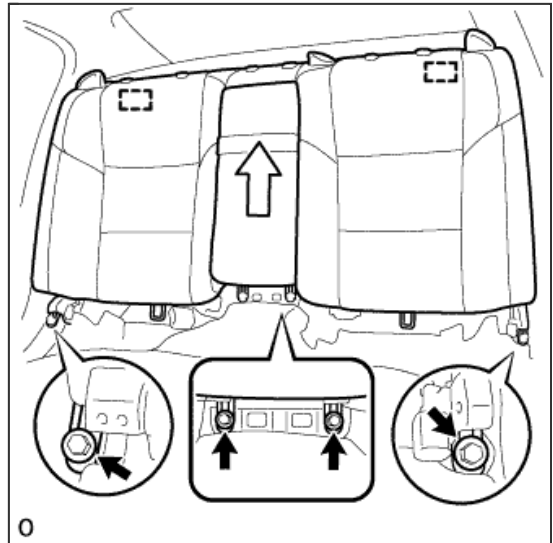

7. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.


8. REMOVE REAR DOOR SCUFF PLATE LH

- a. Put protective tape around the rear door scuff plate LH.

Text in Illustration

*1	Protective Tape
----	-----------------

- b. Using a moulding remover, detach the 10 claws and 3 clips and remove the rear door scuff plate LH.

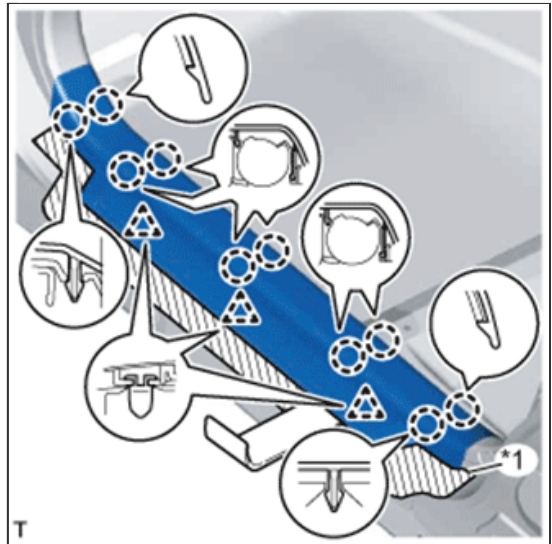


9. REMOVE REAR SEAT SIDE GARNISH RH

HINT:

Use the same procedure described for the LH side.

10. REMOVE REAR SEAT SIDE GARNISH LH

- a. Detach the 4 claws and guide and remove the rear seat side garnish LH.

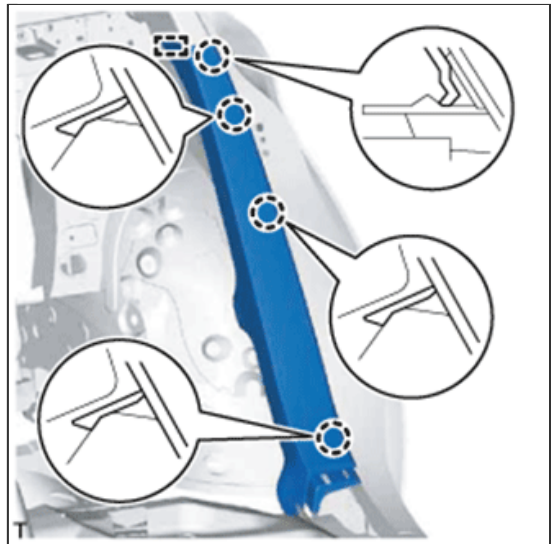

11. REMOVE INNER ROOF SIDE GARNISH RH

HINT:

Use the same procedure described for the LH side.


12. REMOVE INNER ROOF SIDE GARNISH LH

a. w/ Rear Sunshade:

- i.** Detach the 4 clips.
- ii.** Detach the 3 guides and the end of the rear window shade assembly, and then remove the inner roof side garnish LH.


Text in Illustration

*1	End Of The Rear Window Shade Assembly
*2	Guide

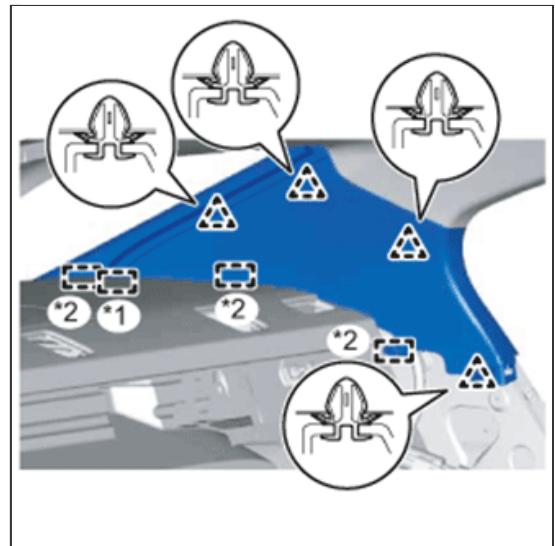


b. w/o Rear Sunshade:

- i.** Detach the 4 clips and 3 guides and remove the inner roof side garnish LH.

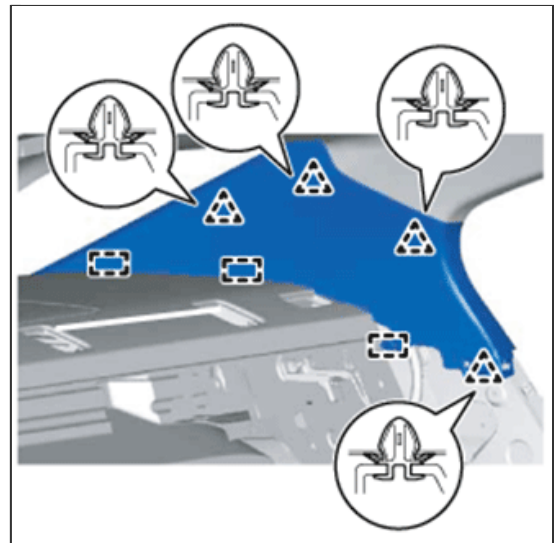


13. REMOVE CENTER STOP LIGHT COVER

- a.** Detach the 4 claws and remove the center stop light cover.
- b.** Disconnect the connector.

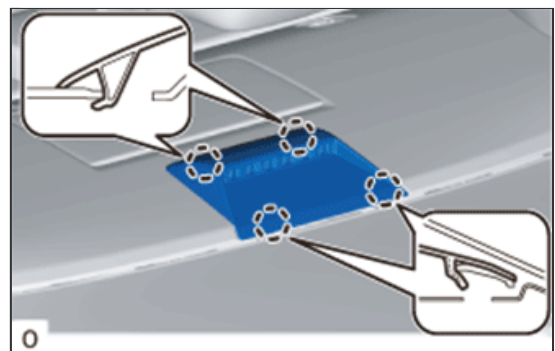


14. REMOVE PACKAGE TRAY TRIM PANEL ASSEMBLY


- a. Using a moulding remover, disengage the 4 claws and remove the 2 rear seat shoulder belt hole covers.

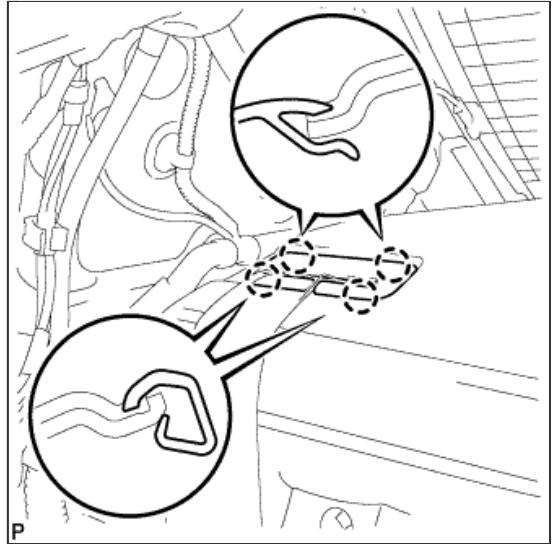

- b. Using a moulding remover, disengage the 4 claws and remove the belt guide of the rear seat inner with center belt assembly LH.

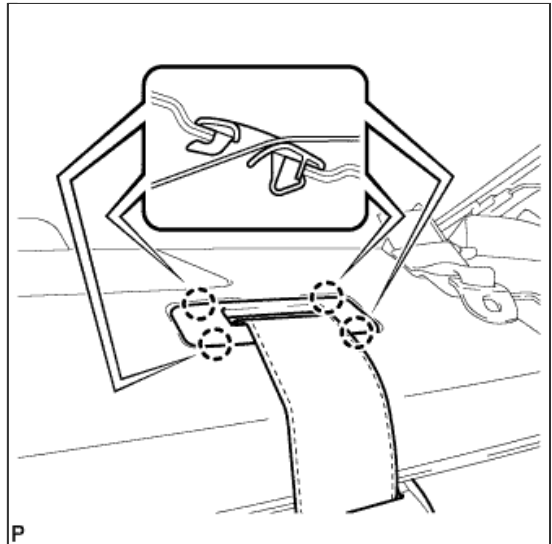


- c. Using a moulding remover, disengage the 4 claws and remove the 3 child restraint tether anchor covers.

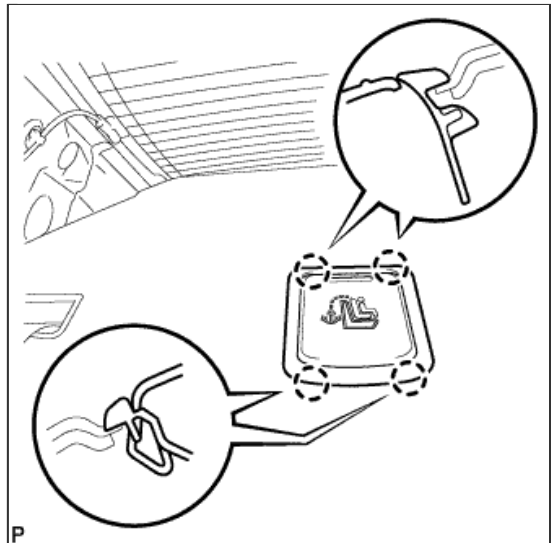


d. w/o Rear Sunshade:

- i. Disengage the 4 claws, disconnect the connector and remove the center stop light cover.

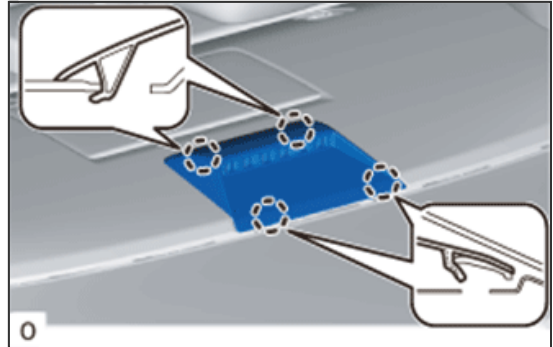


- ii. Detach the 4 clips, and then slide the package tray trim panel assembly towards the front of the vehicle to detach the 5 guides.
- iii. Pass the 3 rear seat belt floor anchors through the package tray trim panel assembly and remove the package tray trim panel assembly.

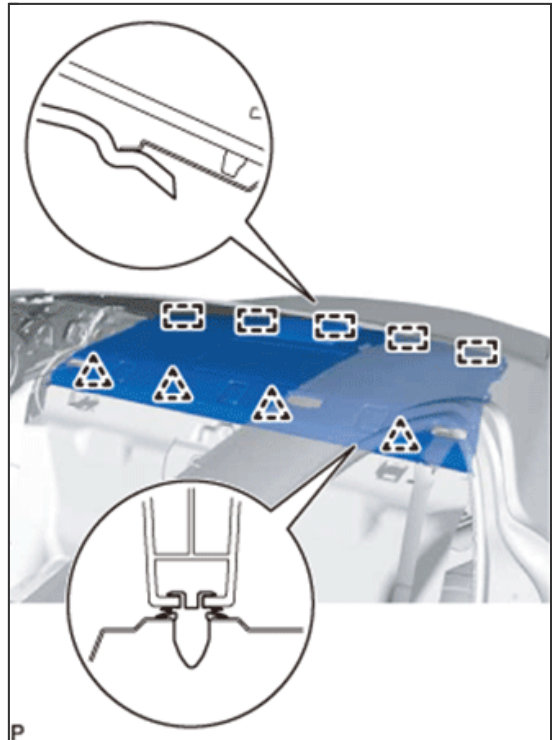

e. w/ Rear Sunshade:

- i. Detach the 4 clips, and then slide the package tray trim panel assembly towards the front of the vehicle to detach it from the rear window shade assembly.
- ii. Pass the 3 rear seat belt floor anchors through the package tray trim panel assembly and remove the package tray trim panel assembly.

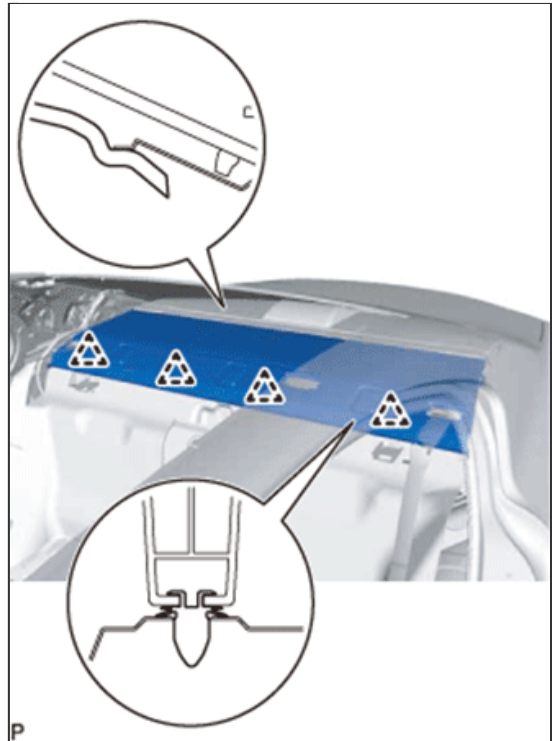


15. REMOVE REAR NO. 3 SPEAKER ASSEMBLY

- a. Disconnect the connector.
- b. Remove the 4 bolts and rear No. 3 speaker assembly.


NOTICE:

Do not touch the cone of the speaker.

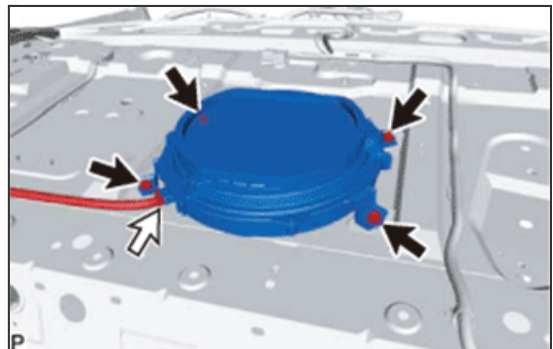

16. REMOVE NO. 2 PACKAGE TRAY TRIM PANEL ASSEMBLY

- a. Detach the 3 clips and 5 guides and remove the No. 2 package tray trim panel assembly.

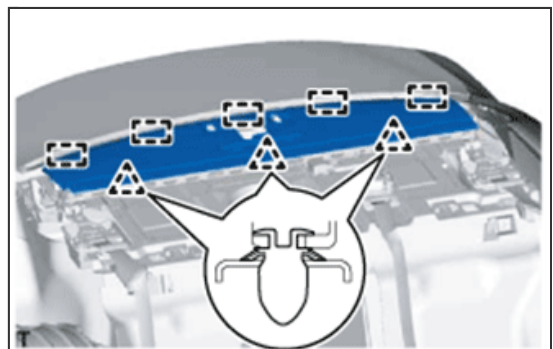

17. REMOVE REAR HEADER SPEAKER ASSEMBLY (w/ Mark Levinson Speaker System)

HINT:

Use the same procedure for both rear header speaker assemblies.

- a. Remove the bolt.
- b. Disconnect the connector.
- c. Detach the clip and remove the rear header speaker assembly.

NOTICE:

Do not touch the cone of the speaker.

