

REMOVAL

CAUTION:

- Always wear gloves because the sharp edges of the seatback frame and seat adjuster may cause injury.
- Work must be started 90 seconds after the ignition switch is turned to the LOCK position and the negative (-) terminal cable is disconnected from the battery.

(The SRS is equipped with a back-up power source. If work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may be deployed.)

HINT:

- Installation is in the reverse order of removal. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.
- A bolt without a torque specification is shown in the standard bolt chart (See page [SS-2](#)).
- COMPONENTS: See page [SE-15](#)

1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE SEAT TRACK BRACKET COVER OUTER FRONT LH

- (a) Using a screwdriver, remove the seat track bracket cover outer front LH.

HINT:

Tape the screwdriver tip before use.

3. REMOVE SEAT TRACK OUTER COVER RH

HINT:

Removal procedure of the seat track bracket cover inner front LH is the same as for the seat track bracket cover outer front LH.

4. REMOVE SEAT TRACK OUTER COVER LH

HINT:

Removal procedure of the seat track outer cover RH is the same as for the seat track bracket cover outer front LH.

5. REMOVE SEAT TRACK BRACKET COVER INNER LH

HINT:

Removal procedure of the seat track bracket cover inner LH is the same as for the seat track bracket cover outer front LH.

6. REMOVE FRONT SEAT ASSEMBLY LH

- (a) Disconnect the connectors under the front seat assembly LH.
- (b) Remove the 4 bolts and front seat assembly LH.

NOTICE:


Be careful not to damage the body.

DISASSEMBLY

1. **REMOVE FRONT SEAT HEADREST ASSEMBLY**
2. **REMOVE RECLINING POWER SEAT SWITCH KNOB**
 - (a) Using a screwdriver, remove the reclining power seat switch knob.

HINT:
Tape the screwdriver tip before use.
3. **REMOVE SLIDE & VERTICAL POWER SEAT SWITCH KNOB**
 - (a) Using a screwdriver, remove the slide & vertical power seat switch knob.

HINT:
Tape the screwdriver tip before use.

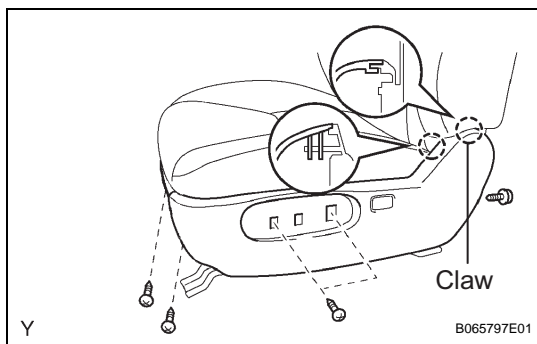

4. **REMOVE FRONT SEAT CUSHION SHIELD INNER NO. 1 LH**
 - (a) Remove the 5 screws.
 - (b) Driver seat only:
 - (1) Using a screwdriver, disengage the 2 claws and remove the front seat cushion shield inner No. 1 LH with the front seat cushion shield LH, and then disconnect the connector.


HINT:
Tape the screwdriver tip before use.
 - (c) Passenger seat only:
 - (1) Using a screwdriver, disengage the 2 claws and remove the front seat cushion shield inner No. 1 LH with the front seat cushion shield LH.

HINT:
Tape the screwdriver tip before use.
 - (d) Remove the screw and front seat cushion shield inner No. 1 LH.

SE

5. **REMOVE POWER SEAT SWITCH ASSEMBLY**
 - (a) Remove the 2 screws and power seat switch assembly.
6. **REMOVE FRONT SEAT INNER BELT ASSEMBLY LH**
7. **REMOVE FRONT SEAT CUSHION SHIELD INNER LH**
 - (a) Remove the screw.
 - (b) Using a screwdriver, disengage the 2 claws and clip, and remove the front seat cushion shield inner LH.

HINT:
Tape the screwdriver tip before use.

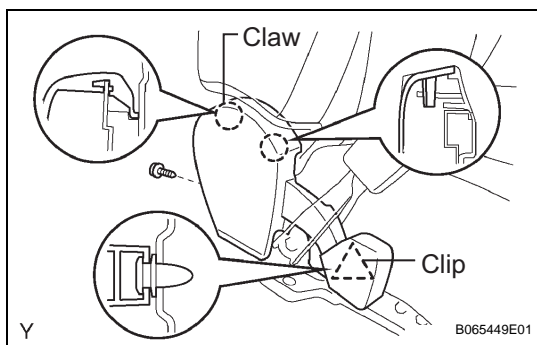

8. **REMOVE FRONT POWER SEAT SWITCH LH**
 - (a) Disconnect the connectors.
 - (b) Remove the 3 screws and front power seat switch LH.
9. **REMOVE SEPARATE TYPE FRONT SEAT CUSHION COVER WITH PAD**
 - (a) Disengage the hook and remove the seat cushion cover together with the pad.

10. REMOVE SEPARATE TYPE FRONT SEAT CUSHION COVER



- (a) Remove the hog rings and seat cushion cover.

11. REMOVE FRONT SEAT CUSHION HEATER ASSEMBLY LH**12. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY**

- (a) Remove the 2 screws and front seatback board.

13. REMOVE FRONT SEATBACK BOARD COVER SUB-ASSEMBLY**14. REMOVE FRONT SEAT HEADREST SUPPORT**

- (a) Remove the 2 front seat headrest supports.

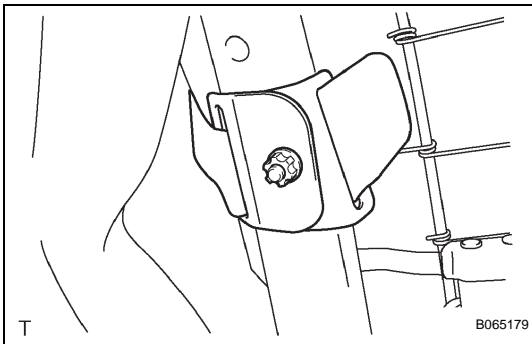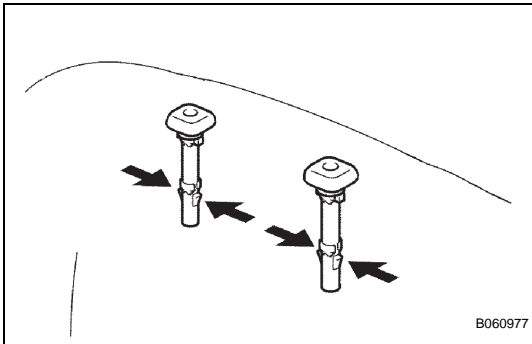**15. REMOVE SEPARATE TYPE SEATBACK COVER WITH PAD**

- (a) with Side airbag:
 - (1) Remove the hog rings, nut and seatback cover bracket.
- (b) Remove the hog rings and seatback cover together with the pad.

16. REMOVE SEPARATE TYPE FRONT SEATBACK COVER

- (a) Remove the hog rings and front seatback cover.

17. REMOVE FRONT SEATBACK HEATER ASSEMBLY LH**18. REMOVE RECLINING ADJUSTER INSIDE COVER LH**

- (a) Remove the 2 screws and reclining adjuster inside cover LH (lower).
- (b) Remove the screw and reclining adjuster inside cover LH (upper).

19. REMOVE RECLINING ADJUSTER INSIDE COVER RH

- (a) Remove the 2 screws and reclining adjuster inside cover RH (lower).
- (b) Remove the screw and reclining adjuster inside cover RH (upper).

20. REMOVE VERTICAL ADJUSTER BRACKET COVER OUTER

- (a) Remove the screw and vertical adjuster bracket cover outer.

-
- 21. REMOVE VERTICAL ADJUSTER BRACKET COVER INNER**
 - (a) Remove the screw and vertical adjuster bracket cover inner.
 - 22. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH**
 - (a) Remove the 2 screws and lumbar support adjuster assembly LH.
 - 23. REMOVE SEAT POSITION AIR BAG SENSOR**

HINT:
See page [RS-444](#)
 - 24. REMOVE FRONT SEAT CUSHION PROTECTOR**
 - 25. REMOVE SEAT WIRE NO. 2**
 - 26. REMOVE OCCUPANT DETECTION ECU**

HINT:
See page [RS-448](#)