

2004 GX 470

Mileage	Content
5000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
10000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
15000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace differential oil
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1, #2	
20000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
25000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
30000	Replace engine oil and oil filter
	Lubricate front drive shaft bushing
	Re- torque drive shaft flange bolts
	Measure brake pad thickness and rotor runout
	Replace air conditioner filter
	Replace differential oil
	Replace transfer case oil
	Replace engine air filter
	Lubricate propeller shaft, re- torque bolts
	Replace brake fluid
	Rotate tires
Road test vehicle	
Inspection #1, #2, & #3	
35000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
40000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
45000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace differential oil
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1, #2	
50000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
55000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
60000	Replace engine oil and oil filter
	Lubricate front drive shaft bushing
	Re- torque drive shaft flange bolts
	Measure brake pad thickness and rotor runout
	Replace air conditioner filter
	Replace differential oil
	Replace transfer case oil
	Replace transmission fluid
	Lubricate propeller shaft, re- torque bolts
	Replace brake fluid
	Replace engine air filter
Rotate tires	
Road test vehicle	
Inspect engine valves clearance (audible)	
Inspect drive belts	
Charcoal canister *	
Inspection #1, #2, & #3	
65000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
70000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
75000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace differential oil
	Re- Torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspect drive belts	
Inspection #1, #2	
80000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1	
85000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
90000	Replace engine oil and oil filter
	Lubricate front drive shaft bushing
	Re- torque drive shaft flange bolts
	Measure brake pad thickness and rotor runout
	Replace air conditioner filter
	Replace differential oil
	Replace transfer case oil
	Replace timing belt
	Lubricate propeller shaft, re- torque bolts
	Replace brake fluid
	Replace engine air filter
Rotate tires	
Road test vehicle	
Inspect drive belts	
Inspection #1, #2, & #3	
95000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Re- Torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1
100000	Replace engine oil and oil filter
	Lubricate propeller shaft, re- torque bolts
	Replace air conditioner filter
	Replace engine coolant
	Re- Torque drive shaft flange bolts
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1	

Inspection #1
 Ball joints and dust covers
 Drive shaft boots
 Engine Air Filter
 Nuts & Bolts on Chassis
 Steering linkage and boots

¹ Reset "Maint Req'd" light after replacing engine oil
² Required only if vehicle is operated primarily on dirt roads
 * Required only vehicles registered in CA, MA and NY

Inspection #2
 Body
 Brake lines and hoses
 Differential oil
 Exhaust pipes and mountings
 Rack and pinion assembly
 Engine Coolant

Inspection #3
 Fuel lines and connections, fuel tank band and
 fuel tank vapor vent system hoses
 Fuel tank cap gasket
 Transmission Fluid
 Transmission case oil