



SPEED SENSOR REPLACEMENT

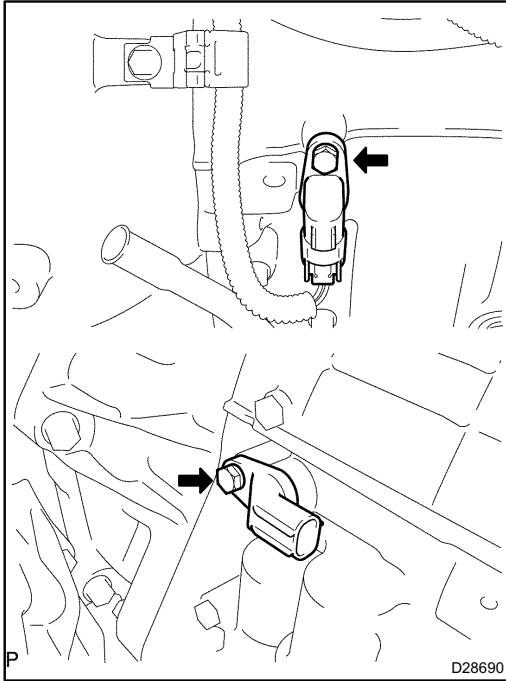

1. REMOVE SPEED SENSOR(SP2 and NT SENSOR)

- (a) Disconnect the connector.
- (b) Remove the bolt and speed sensor.

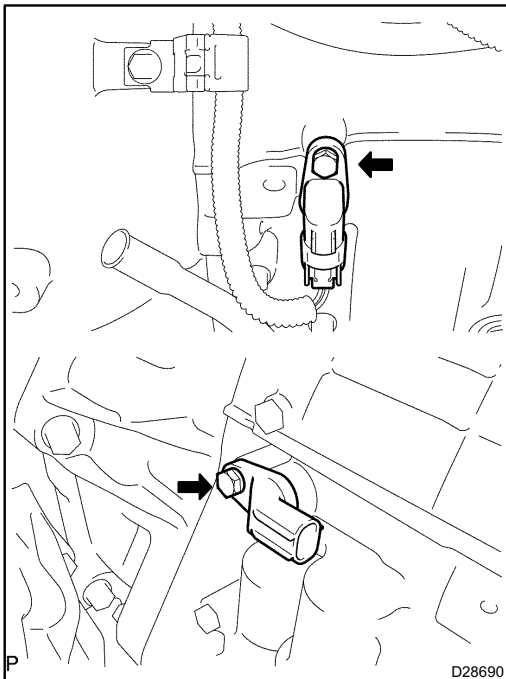

2. INSTALL SPEED SENSOR(SP2 and NT SENSOR)

- (a) Coat a new O-ring with ATF.
- (b) Install the speed sensor with the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- (c) Connect the connector.