


6.3 SELF-DIAGNOSTIC FUNCTION

A

1. To Service Check

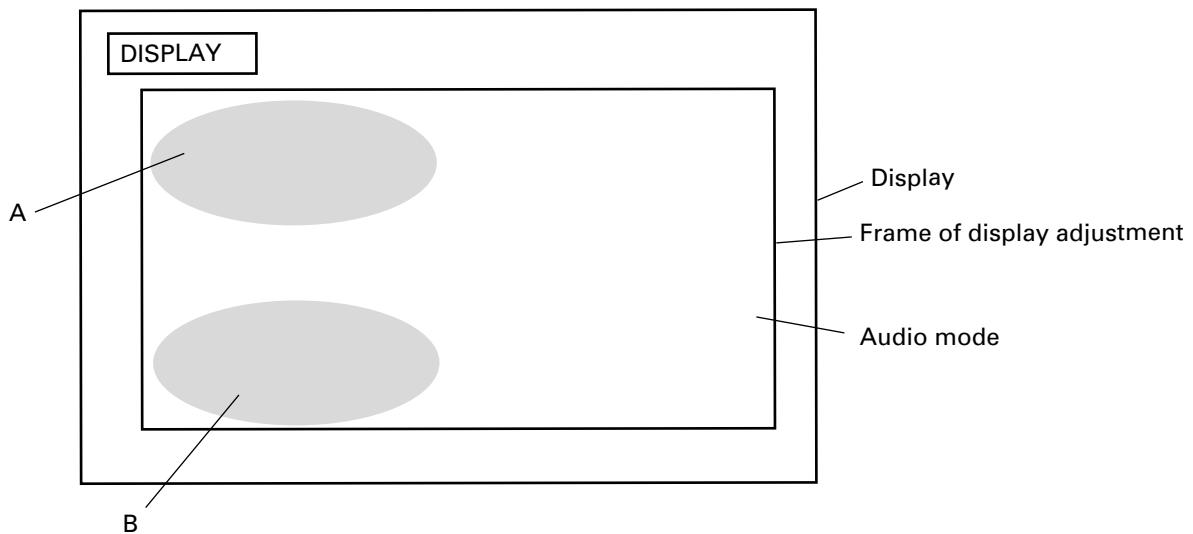


B

1. Press [AUDIO] key of EMV .
2. Press [DISPLAY] key of EMV .
3. The position of A and B is order of pushed 6 times in A,B,A,B,A and B.
->Service Check screen is displayed.

C

2. Service Check

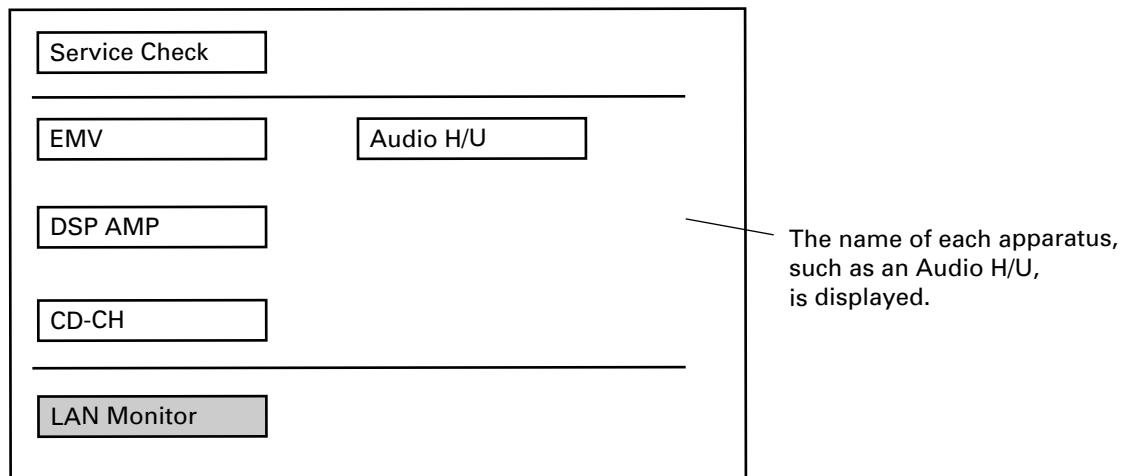


D

->As it is, it waits for a while.
(In general less than 1 minute)

E



A

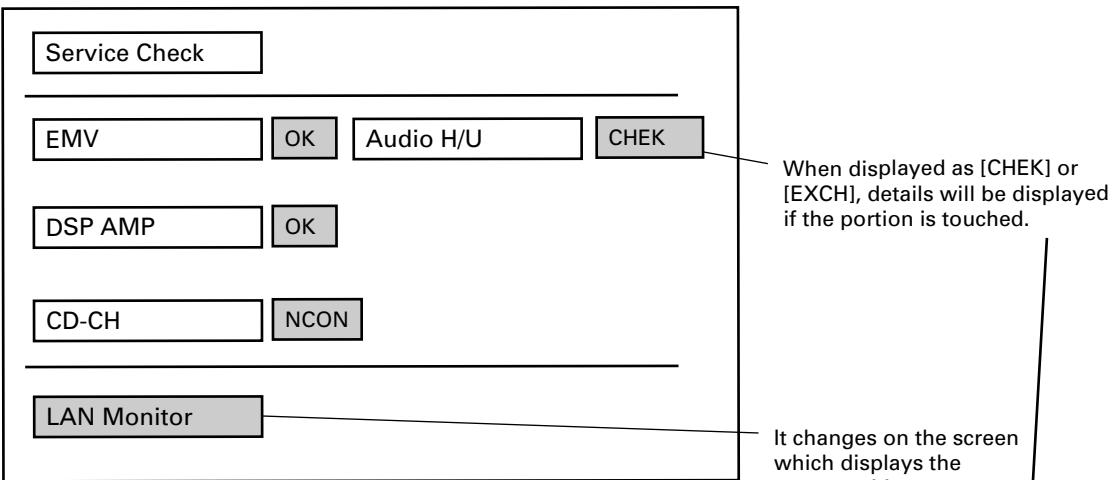

B

The diagnostic result of each model is displayed.

Results are [OK], [NCON],[CHEK], and [EXCH].

OK : No error code


NCON : EMV has judged it as the thing without connection.

(Disconnection being possible if there is actually connection)

CHEK : An error code indicating that diagnosis is judged to be necessary is entered.

EXCH : An error code indicating that exchange is judged to be necessary is entered.

C

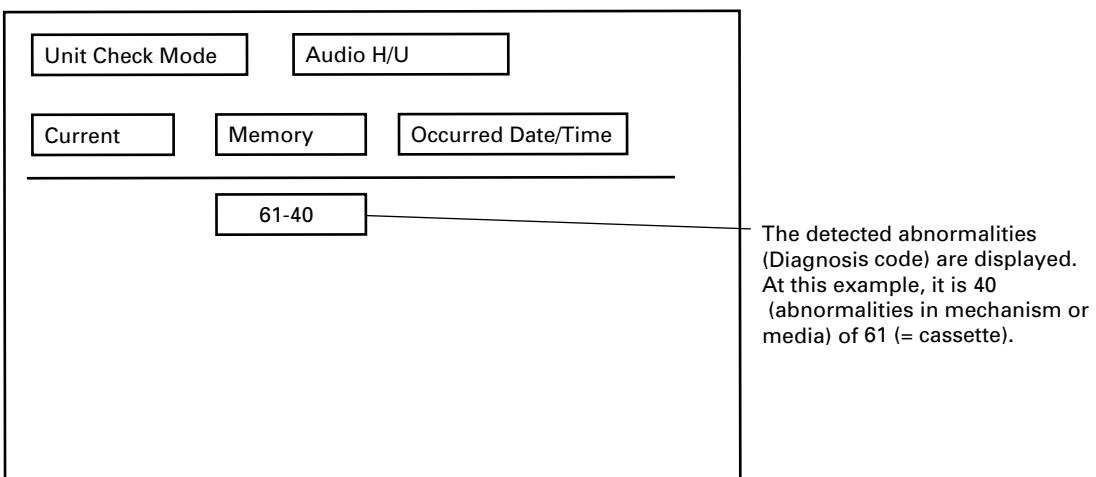

D

3.How to exit from the diagnostic test mode

ACC-OFF

