

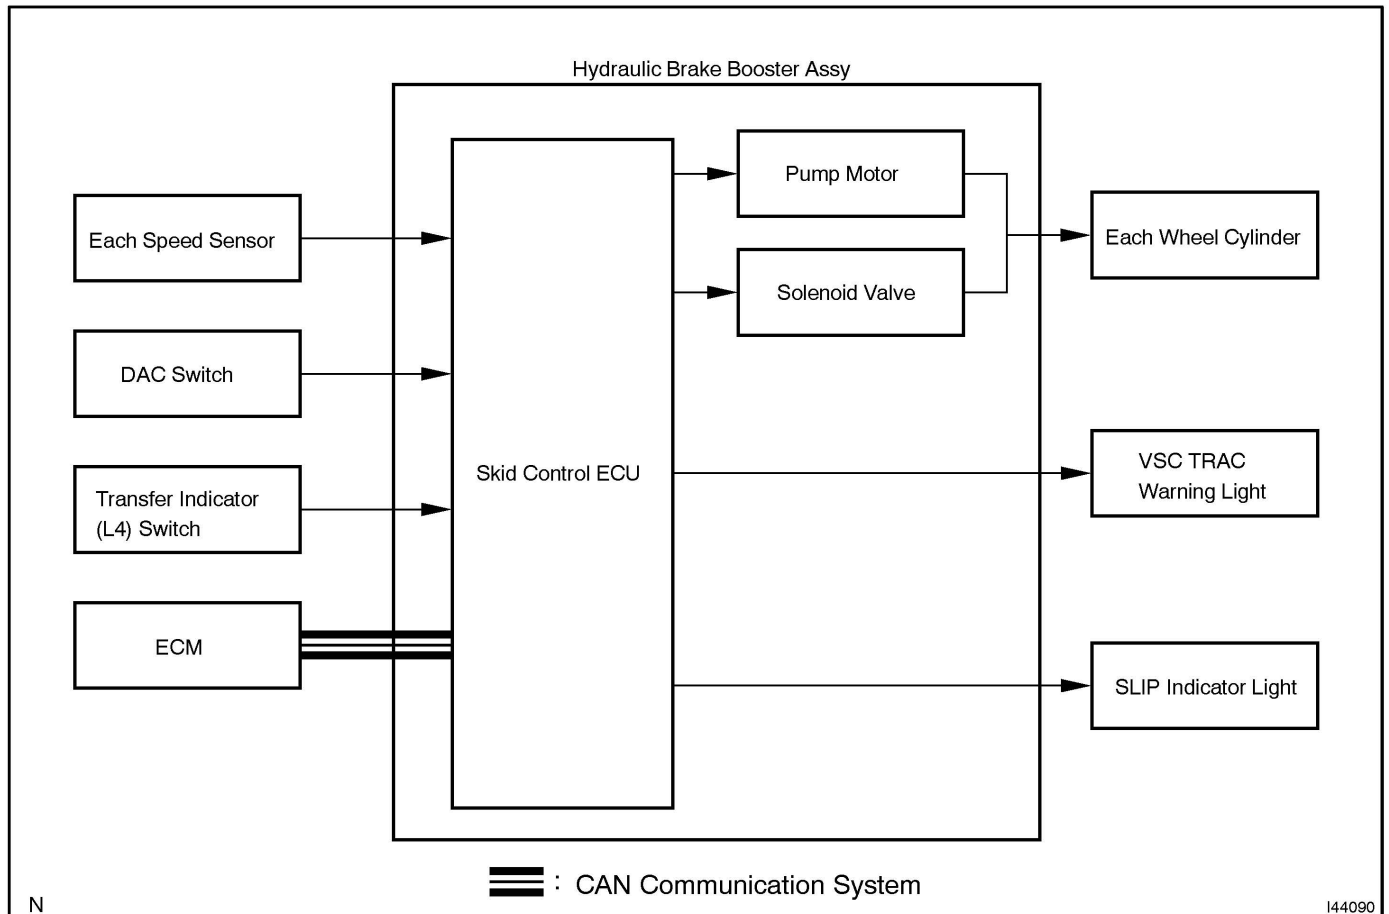
(c) DAC (Downhill Assist Control)

When the DAC switch is pressed with transfer in low (L4) range and without accelerator and brake pedals operation, DAC is activated to effect 4-wheel hydraulic pressure control, in order to maintain a constant low vehicle speed without causing the wheels to become locked. Thus, the vehicle can descend a steep hill in a stable manner.

HINT:

Depressing the accelerator and brake pedal cancels control of the DAC system.

Begins operating when driving down on a slope at a speed of 16 mph (25 km/h) or less with the engine brake applied.

**Operation description**

The slip indicator light blinks and the DAC indicator light and brake light come on when the system is in operation.

The VSC TRAC warning light comes on and the DAC indicator light blinks to indicate a malfunction in the DAC system.