

TELEVISION CAMERA ASSY REPLACEMENT

671G2-01

HINT:

COMPONENTS: See page [67-3](#).

1. REMOVE BACK DOOR GARNISH CENTER (SEE PAGE [75-39](#))
2. REMOVE BACK DOOR SIDE GARNISH RH (SEE PAGE [75-39](#))
3. REMOVE BACK DOOR SIDE GARNISH LH (SEE PAGE [75-39](#))
4. REMOVE TOOL BOX PANEL SUB-ASSY UPPER (SEE PAGE [75-39](#))
5. REMOVE DOOR PULL HANDLE SUB-ASSY (SEE PAGE [75-39](#))
6. REMOVE BACK DOOR TRIM BOARD (SEE PAGE [75-39](#))
7. REMOVE BACK DOOR SERVICE HOLE COVER (SEE PAGE [75-39](#))
8. REMOVE LICENSE REAR LAMP COVER (SEE PAGE [76-34](#))
9. REMOVE BACK DOOR OUTSIDE GARNISH (SEE PAGE [65-17](#))
10. REMOVE TELEVISION CAMERA ASSY