


ADJUSTMENT

1. REMOVE REAR WHEEL
2. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33-12)
3. INSTALL REAR WHEEL
Torque: 112 N·m (1,137 kgf·cm, 82 ft·lbf)
4. INSPECT PARKING BRAKE LEVER TRAVEL
 - (a) Pull the parking brake lever to the fully applied position, and count the number of clicks.
Parking brake lever travel at 196 N (20 kgf, 44 lbf): 5 – 7 clicks

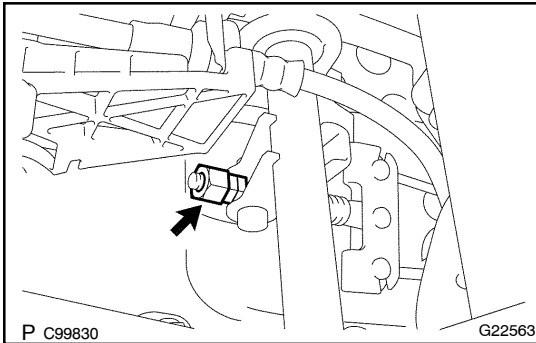

5. ADJUST PARKING BRAKE LEVER TRAVEL
 - (a) Remove the console panel upper assy.
 - (b) Turn the adjusting nut until the parking brake lever travel becomes correct.
 - (c) Check whether parking brake drags or not.
 - (d) When operating the parking brake lever, check that the parking brake lever indicator light lights up.
 - (e) Install the console panel upper rear.