



AUTOMATIC TRANSMISSION SYSTEM > PARTS LOCATION

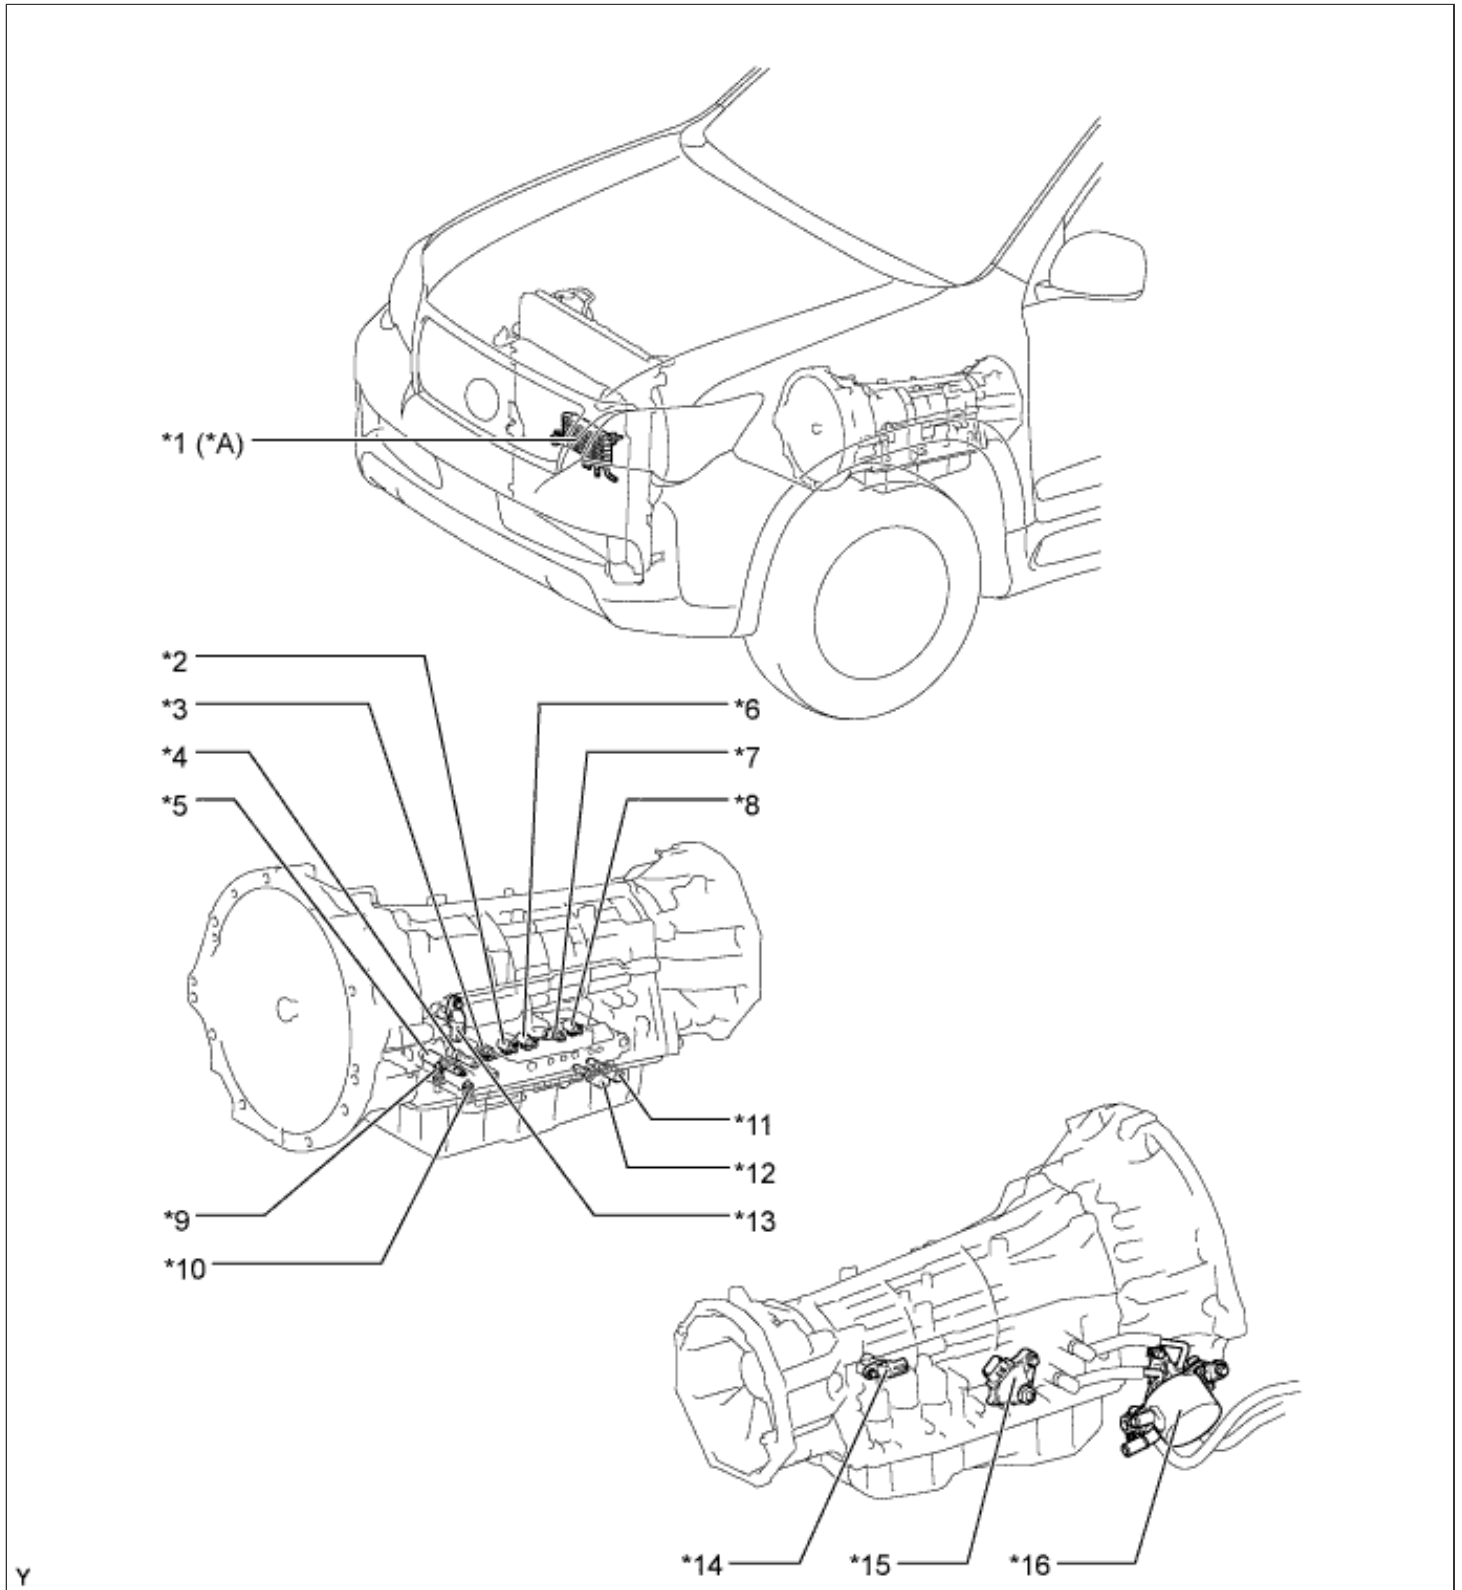

Text in Illustration

*A	Models with Air-cooled Type ATF Cooler	-	-
*1	Air-cooled Type ATF Cooler	*2	Shift Solenoid Valve (S1)

*3	Shift Solenoid Valve (SR)	*4	Shift Solenoid Valve (SL1)
*5	Line Pressure Control Solenoid Assembly (SLT)	*6	Shift Solenoid Valve (S4)
*7	Shift Solenoid Valve (S2)	*8	Shift Solenoid Valve (S3)
*9	No. 2 ATF Temperature Sensor	*10	No. 1 ATF Temperature Sensor
*11	Lock-up Control Solenoid Assembly (SLU)	*12	Shift Solenoid Valve (SL2)
*13	Transmission Revolution Sensor (NT)	*14	Transmission Revolution Sensor (SP2)
*15	Park/Neutral Position Switch Assembly	*16	ATF Warmer

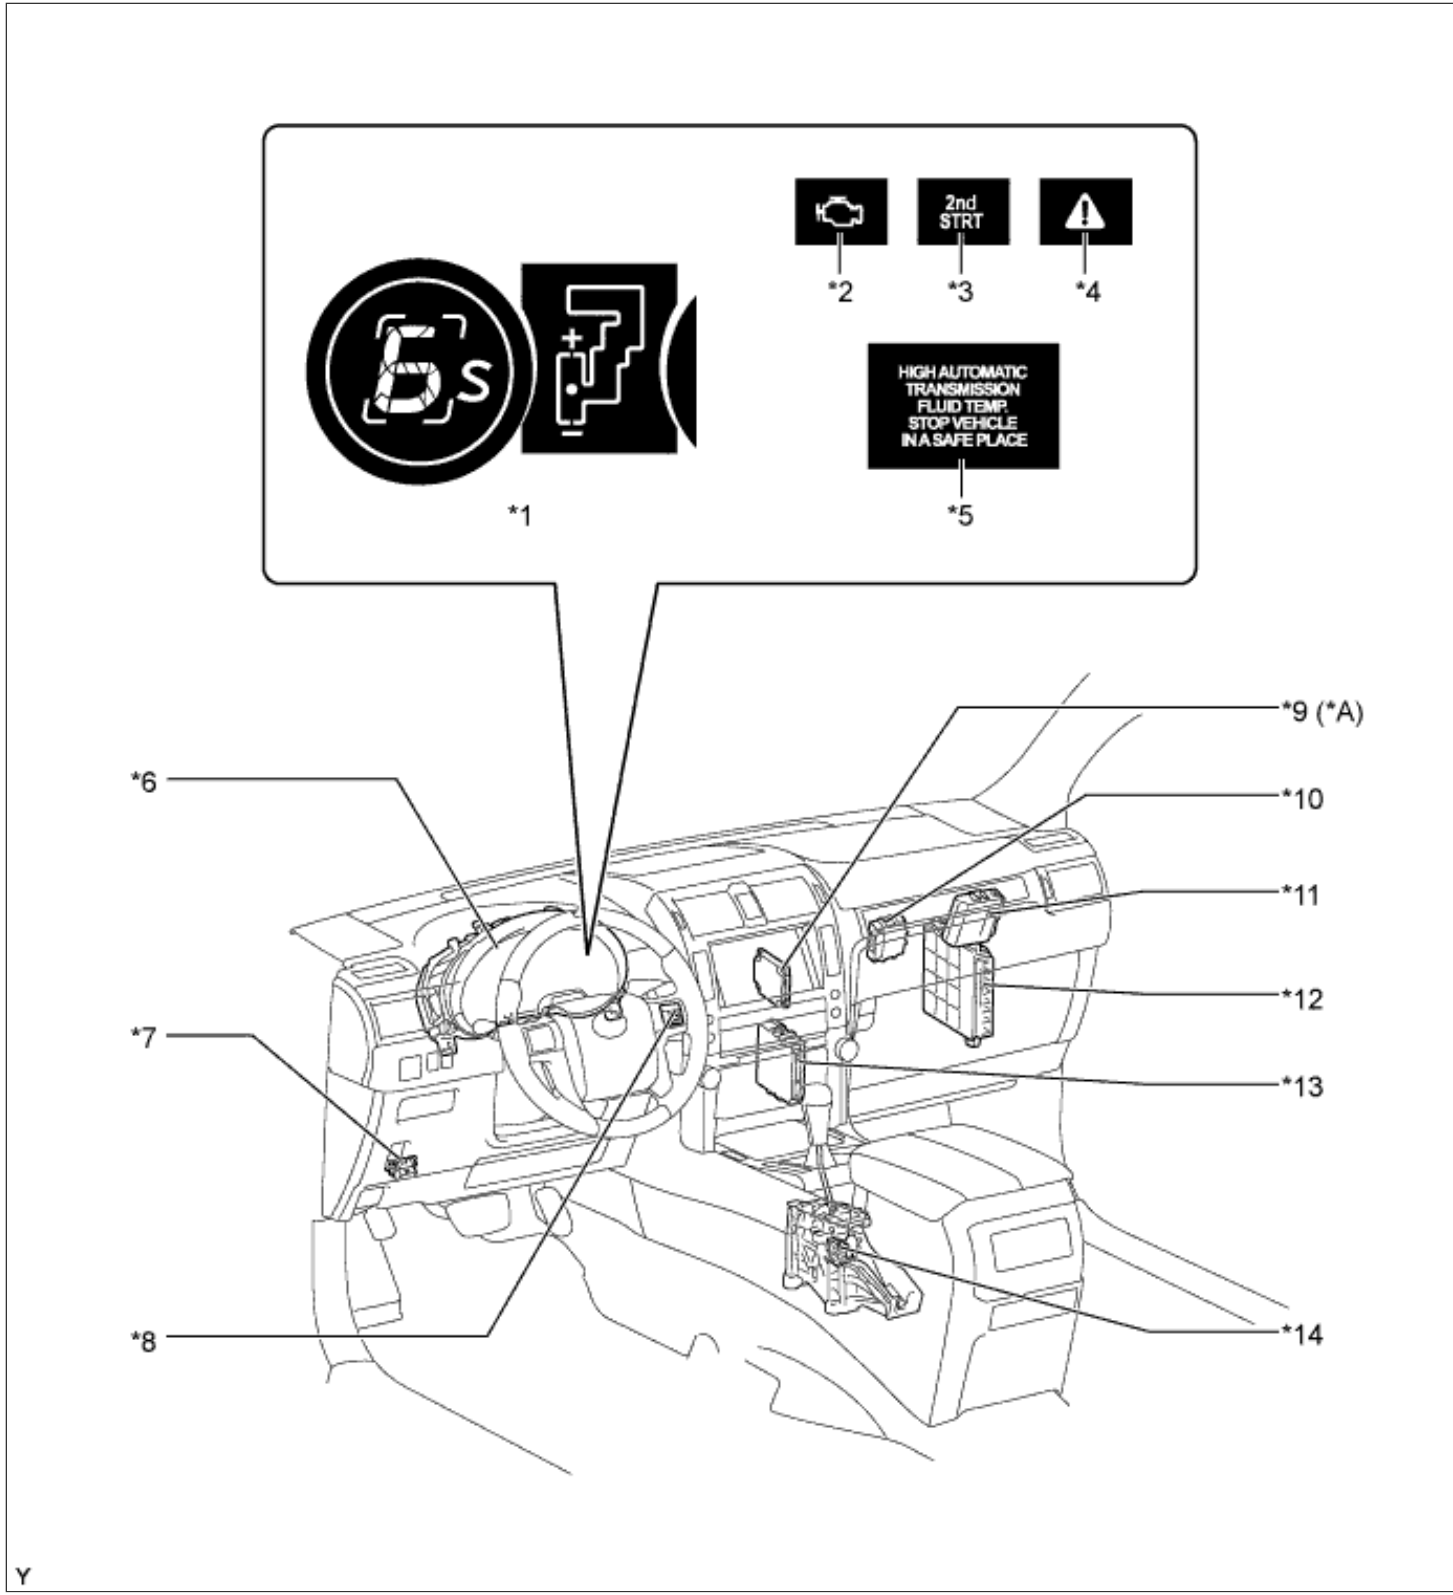

Text in Illustration

*A	Models with Dynamic Radar Cruise Control System	-	-
*1	Shift Display	*2	MIL
*3	2nd Start Indicator Light	*4	Master Warning Light

*5	Multi-information Display	*6	Combination Meter Assembly - Multi Buzzer
*7	DLC3	*8	Multi-information Switch
*9	Driving Support ECU Assembly	*10	Driving Support Switch Control ECU
*11	4WD Control ECU	*12	ECM
*13	Air Conditioning Amplifier Assembly	*14	Transmission Control Switch