

# REAR CENTER SEAT OUTER BELT ASSEMBLY (for 60/40 Split Slide Walk-in Seat Type LH Side) > REMOVAL

for Preparation [Click here](#)

## CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

### 1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

- a. Remove the rear No. 1 seat assembly LH ([Click here](#)).

### 2. REMOVE REAR SEAT UPPER RECLINING COVER LH


- a. Using a screwdriver, detach the 2 claws and remove the cover.

#### HINT:

Tape the screwdriver tip before use.


#### Text in Illustration

*1	Protective Tape
----	-----------------

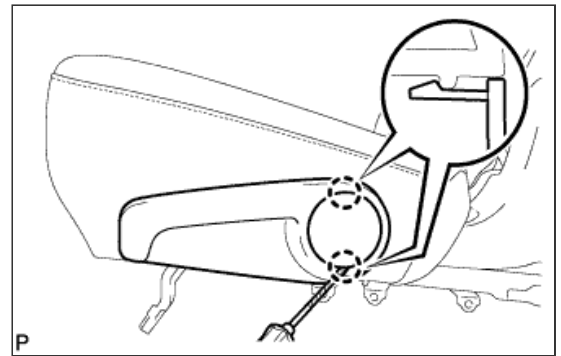


### 3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

- a. Remove the 3 screws and handle.

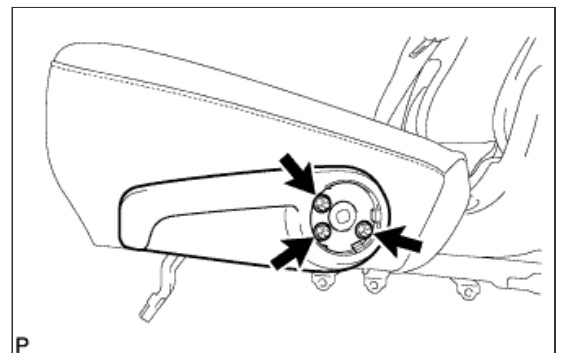


### 4. REMOVE CENTER SEAT HINGE COVER RH

- a. Using a clip remover, remove the clip.
- b. Detach the 2 guides and remove the cover.

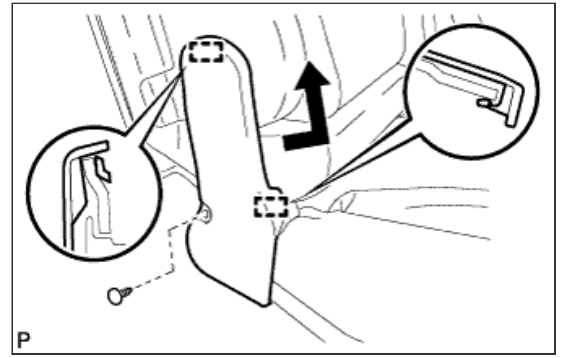


#### 5. REMOVE REAR SEAT CUSHION MOULDING LH

- a. Using a clip remover, detach the clip.
- b. Using a moulding remover, detach the 3 claws.
- c. Move the moulding in the direction of the arrow to detach the guide and remove the moulding.

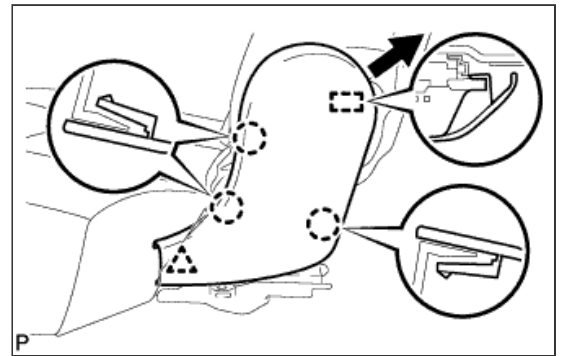


#### 6. REMOVE REAR SEATBACK LOCK STRIKER COVER LH

- a. Using a clip remover, detach the 3 clips and remove the cover.

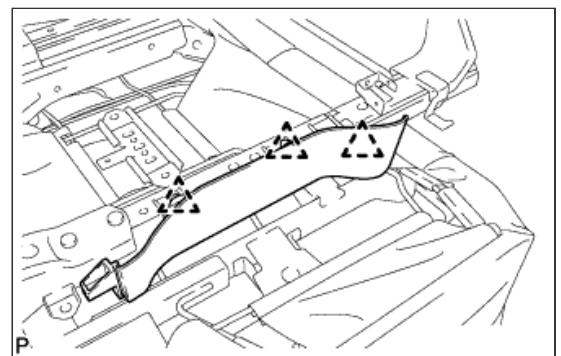


#### 7. REMOVE SEAT CUSHION COVER WITH PAD

- a. Detach the hooks.

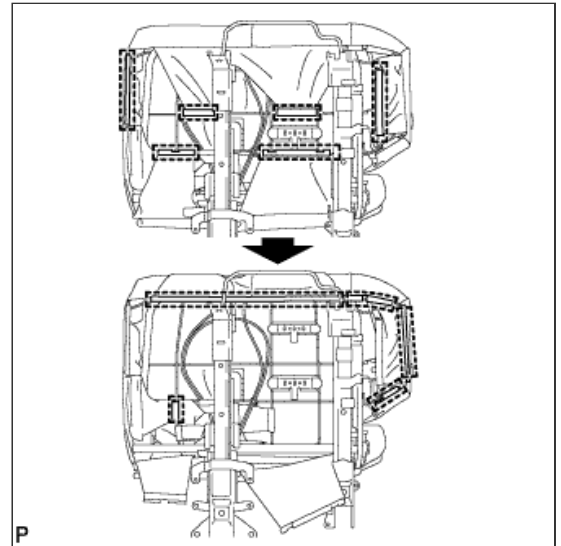

**b. w/ Seat Heater System:**

- i.** Disconnect the 2 seat heater connectors.
- ii.** Detach the 2 clamps and disconnect the seat heater wire harness.

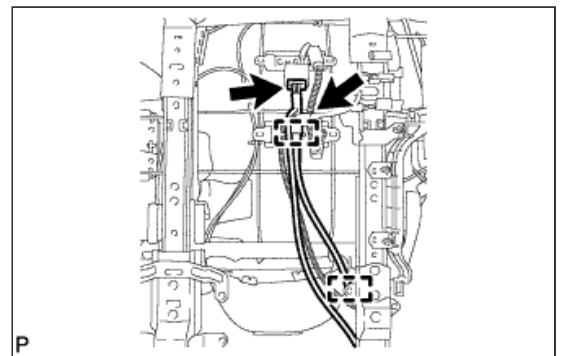


**c.** Detach the hook and remove the seat cushion cover with pad.




**8. REMOVE CENTER SEATBACK ASSEMBLY**

- a.** Remove the 2 bolts and center seatback.

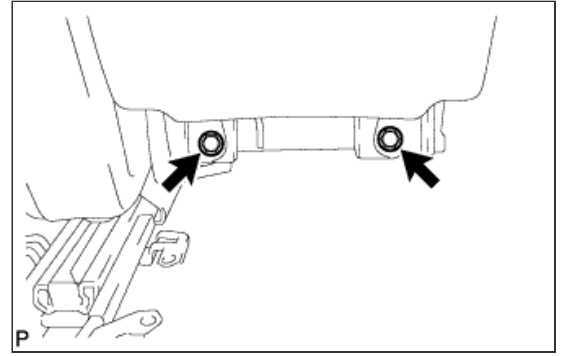

## 9. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

- a. Remove the bolt and inner belt and disconnect the 3 point type belt anchor.

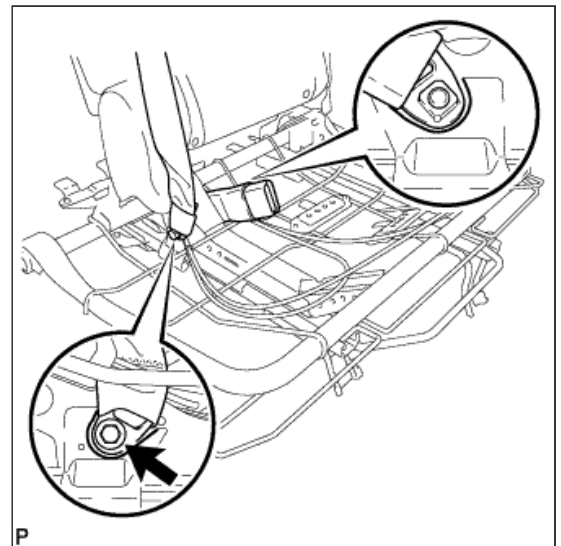

## 10. REMOVE RECLINING ADJUSTER KNOB CAP LH


- a. Using a screwdriver, detach the claw and guide, and then remove the cap.

### HINT:

Tape the screwdriver tip before use.


### Text in Illustration

*1	Protective Tape
----	-----------------

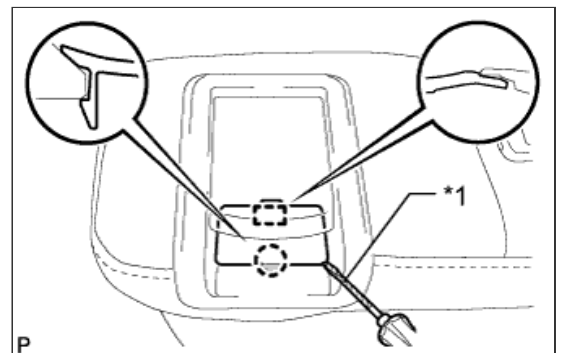


## 11. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH

- a. Remove the 2 screws.

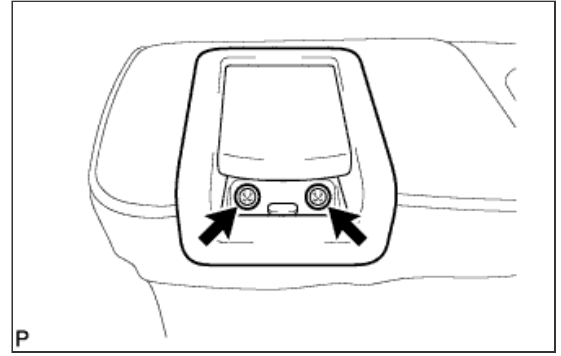

- b. Disconnect the cable in the order shown in the illustration and remove the lever.

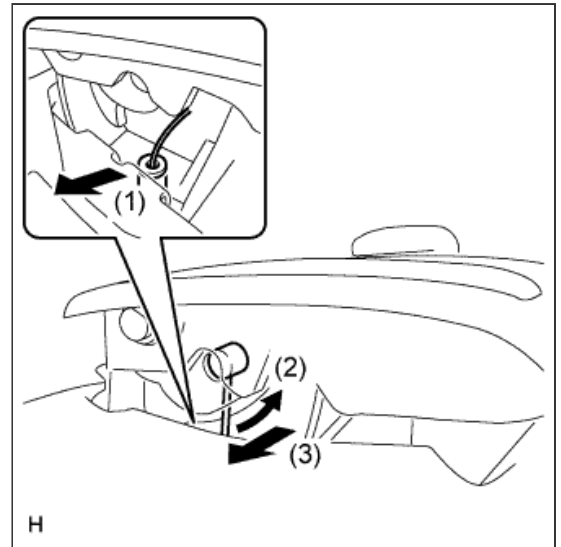

## 12. REMOVE SEAT BELT ANCHOR COVER CAP


- a. Using a screwdriver, detach the 2 claws and remove the cap.

**HINT:**

Tape the screwdriver tip before use.


**Text in Illustration**

*1	Protective Tape
----	-----------------

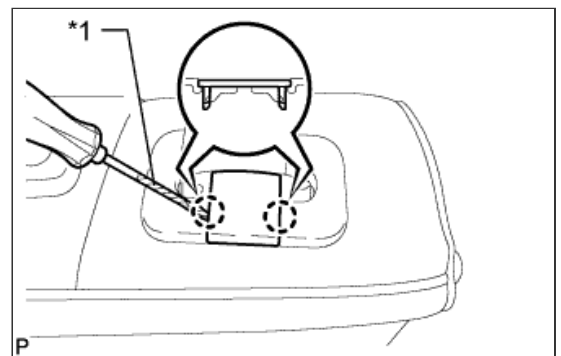

## 13. REMOVE REAR SEAT SHOULDER BELT COVER

- a. Detach the 2 claws and 2 guides, and then remove the cover.
- b. Disconnect the outer belt from the cover.

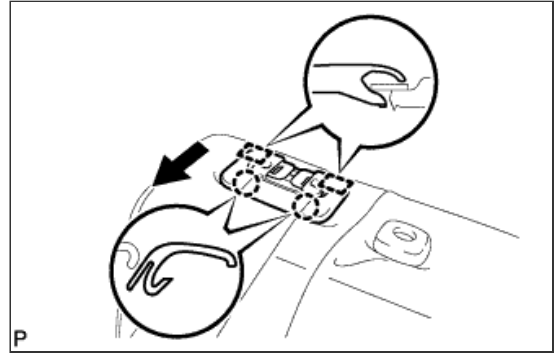


#### 14. REMOVE REAR SEATBACK COVER

- a. Using a screwdriver, detach the 4 claws and remove the cover.


**HINT:**

Tape the screwdriver tip before use.

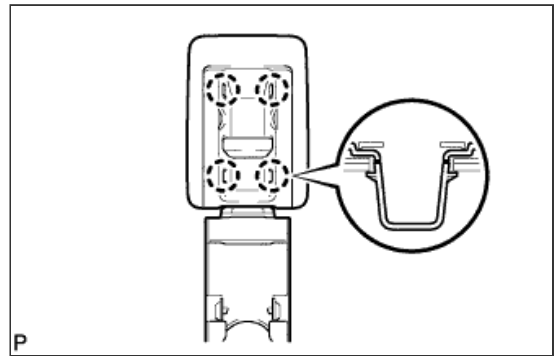


#### 15. REMOVE REAR SEATBACK BOARD CARPET ASSEMBLY LH

- a. Using a clip remover, detach the 7 clips and remove the carpet.

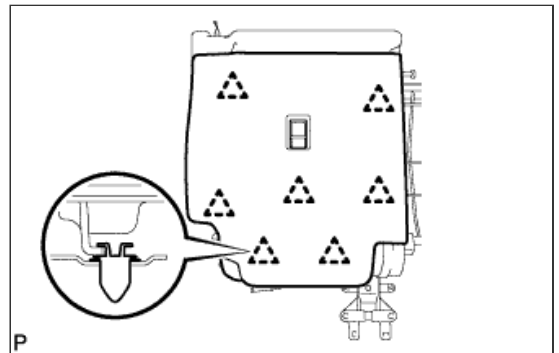


#### 16. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

- a. Detach the 4 claws and remove the 2 supports.

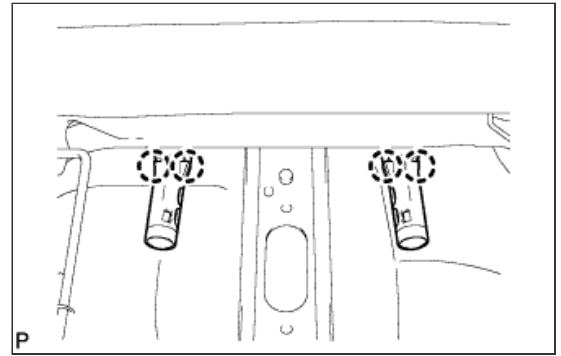

**17. REMOVE SEATBACK COVER WITH PAD**


- a. Remove the nut, detach the 2 guides and disconnect the seatback cover bracket from the seatback frame.

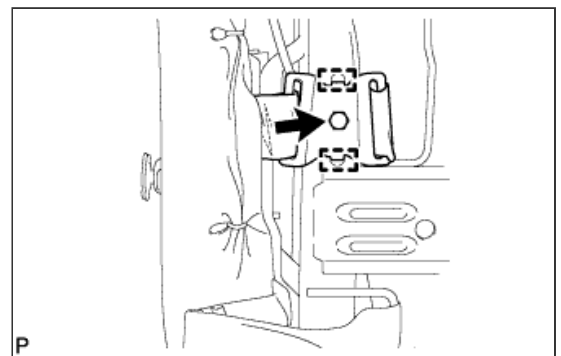


- b. Remove the hog rings and detach the hooks, and then remove the seatback cover with pad.

**Text in Illustration**

*1	Hook
*2	Hog Ring

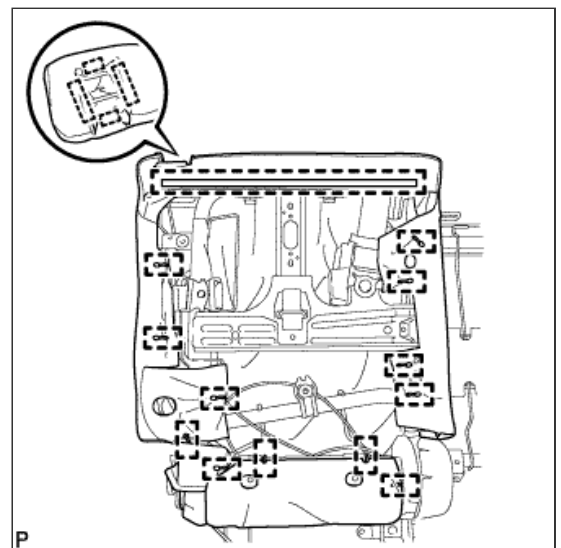


- c. Disconnect the outer belt from the seatback cover with pad.

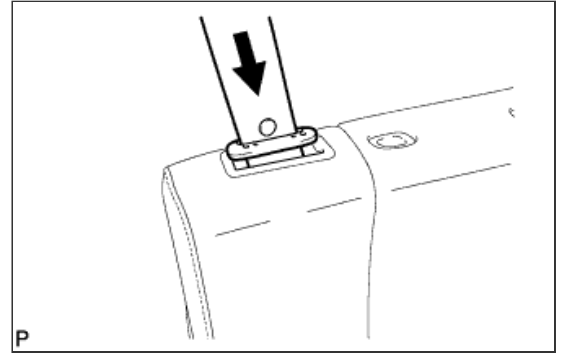

### 18. REMOVE REAR SEAT SHOULDER BELT GUIDE

- a. Detach the claw and guide, and then remove the belt guide.

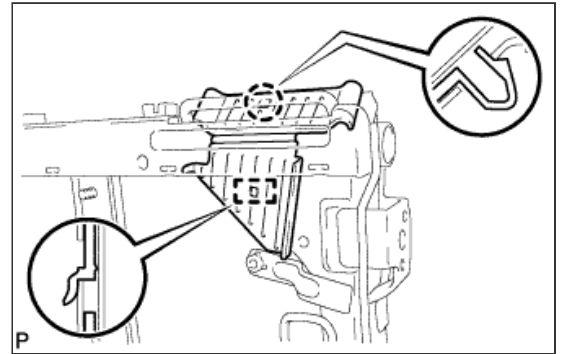

### 19. REMOVE REAR SEATBACK EDGE PROTECTOR

- a. Remove the protector from the seatback frame.

### 20. REMOVE NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

- a. Remove the nut and bolt, and then detach the 2 claws and remove the seat belt.

