

REAR CENTER SEAT OUTER BELT ASSEMBLY (for 60/40 Split Slide Walk-in Seat Type LH Side) > INSPECTION

for Preparation [Click here](#)

1. INSPECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

NOTICE:

Do not disassemble the retractor.

- a. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is more than 45° , check that the belt locks. If the operation is not as specified, replace the No. 1 seat 3 point type belt assembly LH.

Text in Illustration

*a	Unlock
*b	Lock
*c	45°



