

# REAR CENTER SEAT OUTER BELT ASSEMBLY (for 60/40 Split Slide Walk-in Seat Type LH Side) > INSTALLATION

for Preparation [Click here](#)

## CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

## HINT:

A bolt without a torque specification is shown in the standard bolt chart ([Click here](#)).

### 1. INSTALL NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

## NOTICE:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.

- a. Align the seat belt positioning holes with the claws and install the retractor of the seat belt with the nut and bolt as shown in the illustration.

## HINT:

First install the bolt, and then install the nut.

## Torque:

for bolt:


7.5 N\*m { 76 kgf\*cm , 66 in.\*lbf }

for nut:

42 N\*m { 428 kgf\*cm , 31 ft.\*lbf }

## Text in Illustration

*1	Bolt
*2	Nut

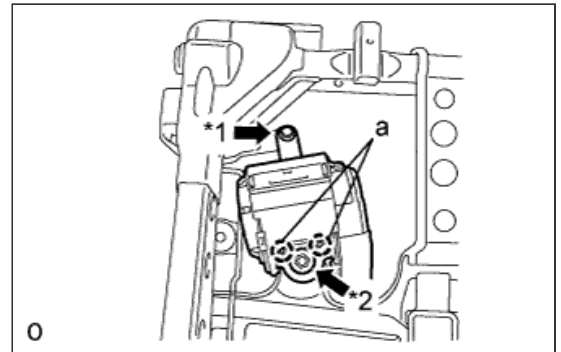

### 2. INSTALL REAR SEATBACK EDGE PROTECTOR


- a. Install the protector to the seatback frame.

### 3. INSTALL REAR SEAT SHOULDER BELT GUIDE

- a. Attach the guide and claw to install the belt guide.

#### 4. INSTALL SEATBACK COVER WITH PAD

- a. Connect the outer belt to the seatback cover with pad.

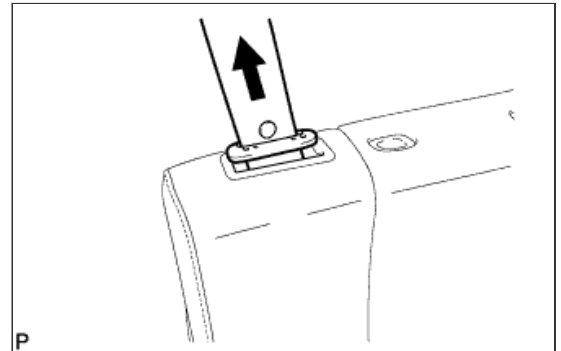

- b. Attach the hooks.

##### Text in Illustration

*1	Hog Ring Pliers
*2	Hook
*3	Hog Ring


- c. Using hog ring pliers, install the seatback cover with pad with new hog rings.
- d. Attach the 2 guides and connect the seatback cover bracket to the seatback frame with the nut.

##### Torque:

**5.5 N\*m { 56 kgf\*cm , 49 in.\*lbf }**

##### NOTICE:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

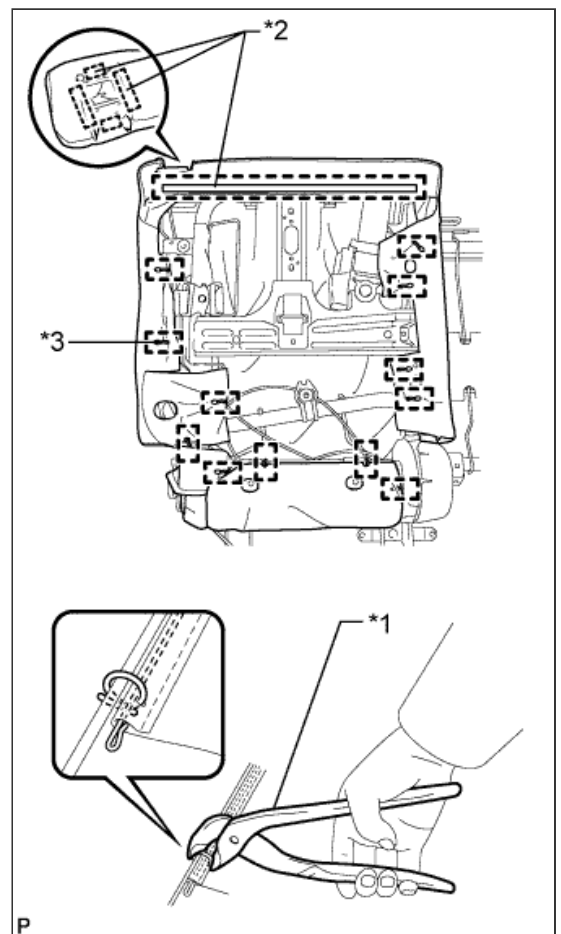

#### 5. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

- a. Attach the 4 claws to install the 2 supports.

#### 6. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY LH


- a. Attach the 7 clips to install the carpet.

## 7. INSTALL REAR SEATBACK COVER

- a. Attach the 4 claws to install the cover.


## 8. INSTALL REAR SEAT SHOULDER BELT COVER

- a. Connect the outer belt to the cover.
  
- b. Attach the 2 guides and 2 claws to install the cover.

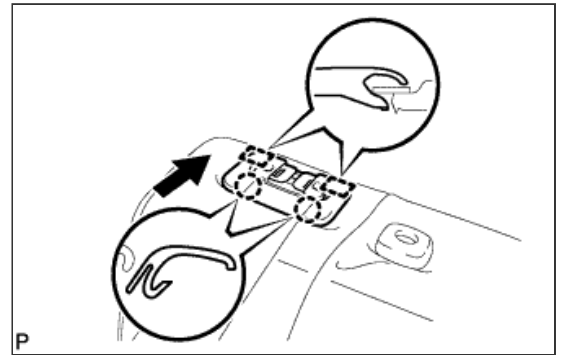


## 9. INSTALL SEAT BELT ANCHOR COVER CAP

- a. Attach the 2 claws to install the cap.

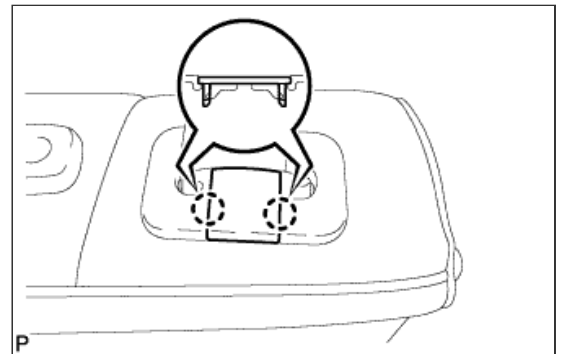


## 10. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH

- a. Connect the cable in the order shown in the illustration to install the lever.
  
- b. Install the 2 screws.

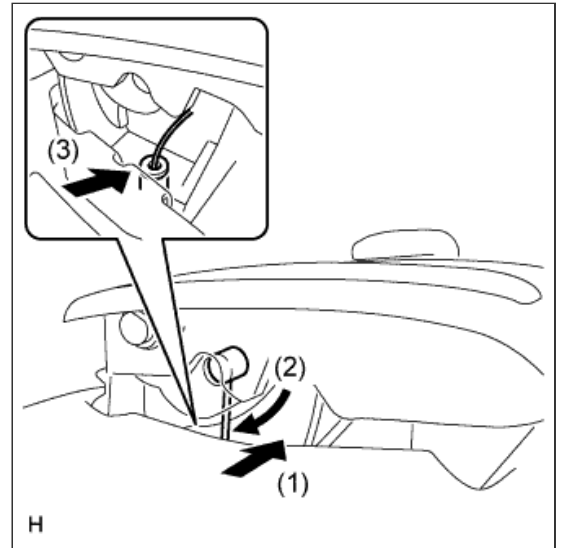

**11. INSTALL RECLINING ADJUSTER KNOB CAP LH**

- a. Attach the guide and claw to install the cap.

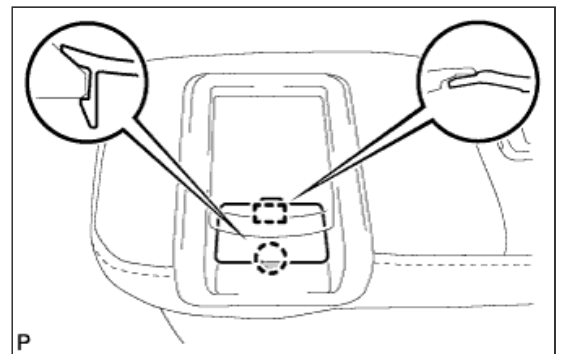

**12. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH**


- a. Install the inner belt and connect the 3 point type belt anchor with the bolt.

**Torque:**  
**42 N\*m { 428 kgf\*cm , 31 ft.\*lbf }**

**NOTICE:**  
 Do not allow the anchor part of the anchor plate sub-assembly to overlap the protruding parts of the seatback frame.

**Text in Illustration**

*a	Protruding Part
----	-----------------

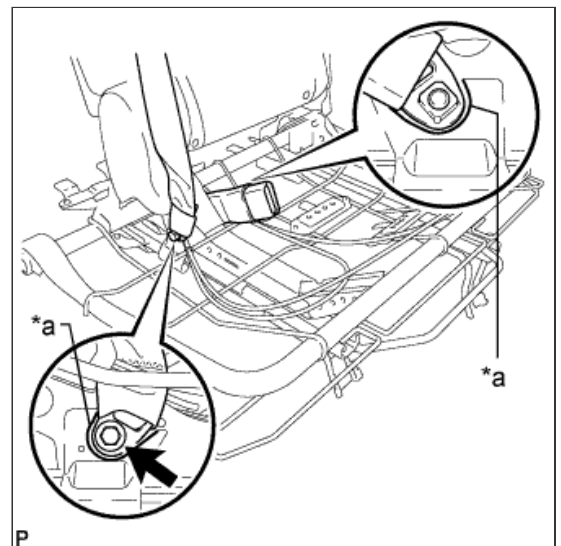

### 13. INSTALL CENTER SEATBACK ASSEMBLY


- a. Install the center seatback with the 2 bolts.

**Torque:**


**21 N\*m { 214 kgf\*cm , 15 ft.\*lbf }**

### 14. INSTALL SEAT CUSHION COVER WITH PAD

- a. Attach the hook.
- b. w/ Seat Heater System:
  - i. Attach the 2 clamps to connect the seat heater wire harness.
  - ii. Connect the 2 seat heater connectors.

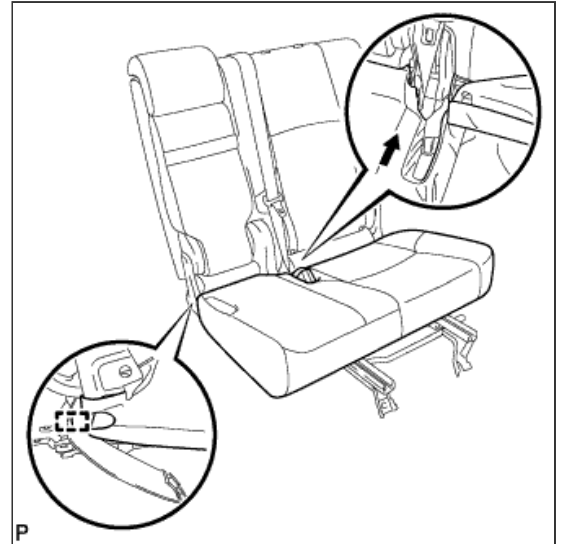

- c. Attach the hooks to install the seat cushion cover with pad.

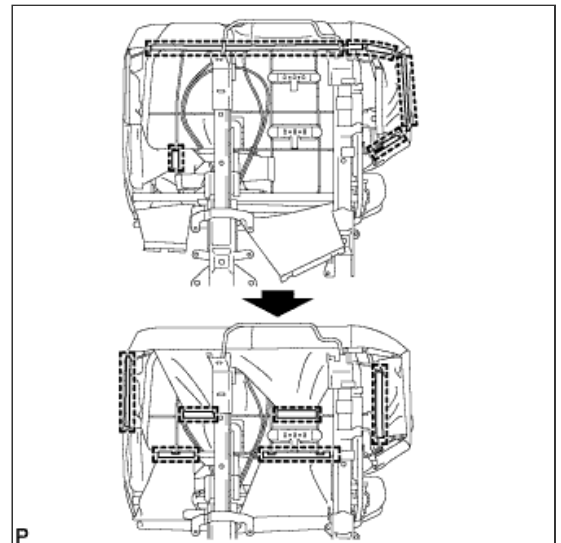


### 15. INSTALL REAR SEATBACK LOCK STRIKER COVER LH

- a. Attach the 3 clips to install the cover.


### 16. INSTALL REAR SEAT CUSHION MOULDING LH

- a. Move the moulding in the direction of the arrow to attach the guide.
- b. Attach the 3 claws and clip to install the moulding.

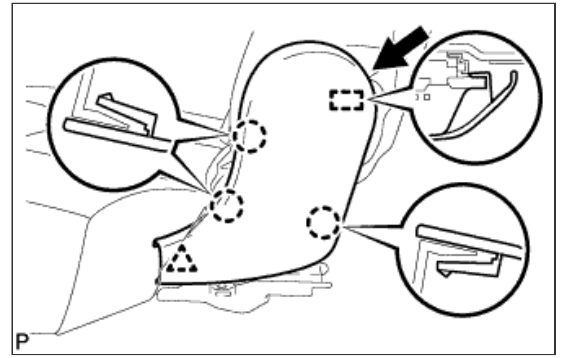

#### 17. INSTALL CENTER SEAT HINGE COVER RH

- a. Attach the 2 guides and install the cover with the clip.

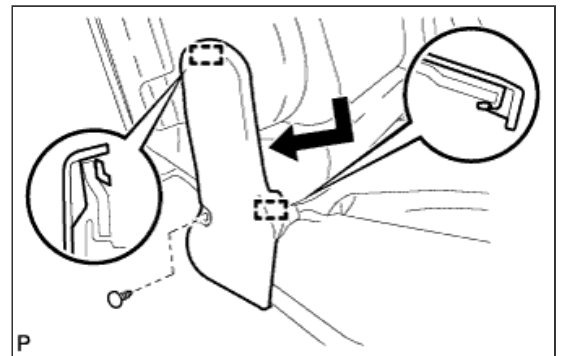


#### 18. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH

- a. Install the handle with the 3 screws.

#### 19. INSTALL REAR SEAT UPPER RECLINING COVER LH

- a. Attach the 2 claws to install the cover.

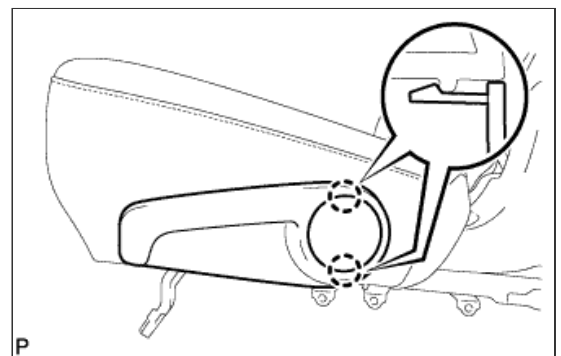

#### 20. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

- a. Install the rear No. 1 seat assembly LH ([Click here](#)).

