

DTC C1201 Engine Control System Malfunction

for Preparation [Click here](#)

DESCRIPTION

If a malfunction is detected in the engine control system, the ECM sends a malfunction signal to the skid control ECU. The skid control ECU stores this DTC and prohibits the following controls:

- VSC
- TRC
- Downhill assist control
- Crawl control
- Multi-terrain select control

DTC Code	DTC Detection Condition	Trouble Area
C1201	A malfunction signal is received from the ECM.	Engine control system

INSPECTION PROCEDURE

1.CHECK ENGINE CONTROL SYSTEM

- a. Check if an engine control system DTC is output ([Click here](#)).

Result

Result	Proceed to
DTC is not output	A
DTC is output	B

B

**GO TO ENGINE CONTROL SYSTEM
(DIAGNOSTIC TROUBLE CODE CHART)
([Click here](#))**

A

REPLACE ECM ([Click here](#))

