

DTC P0985 Shift Solenoid "E" Control Circuit Low (Shift Solenoid Valve SR)

DTC P0986 Shift Solenoid "E" Control Circuit High (Shift Solenoid Valve SR)

for Preparation [Click here](#)

DESCRIPTION


Shifting from 1st to 6th is performed in combination with the ON and OFF operation of shift solenoid valves SL1, SL2, S1, S2, S3, S4 and SR, which are controlled by the ECM. If an open or short circuit occurs in any of the shift solenoid valves, the ECM controls the remaining normal shift solenoid valves to allow the vehicle to be operated safely. Also, the ECM stops sending current to the open or short-circuited solenoid ([Click here](#)).

| DTC Code | DTC Detection Condition | Trouble Area |
|----------|---|--|
| P0985 | ECM detects a short in the solenoid valve SR circuit 2 times when solenoid valve SR is operated (1-trip detection logic). | <ul style="list-style-type: none"> Short in shift solenoid valve SR circuit Shift solenoid valve SR ECM |
| P0986 | ECM detects an open in the solenoid valve SR circuit 2 times when solenoid valve SR is not operated (1-trip detection logic). | <ul style="list-style-type: none"> Open in shift solenoid valve SR circuit Shift solenoid valve SR ECM |

MONITOR DESCRIPTION

These DTCs indicate an open or short in the shift solenoid valve SR circuit. When there is an open or short circuit in any shift solenoid valve circuit, the ECM detects the problem, illuminates the MIL and stores the DTC. When shift solenoid valve SR is ON, if its resistance is 8 Ω or less, the ECM determines there is a short in the shift solenoid valve SR circuit. When shift solenoid valve SR is OFF, if its resistance is 100 kΩ or higher, the ECM determines there is an open in the shift solenoid valve SR circuit ([Click here](#)).

WIRING DIAGRAM

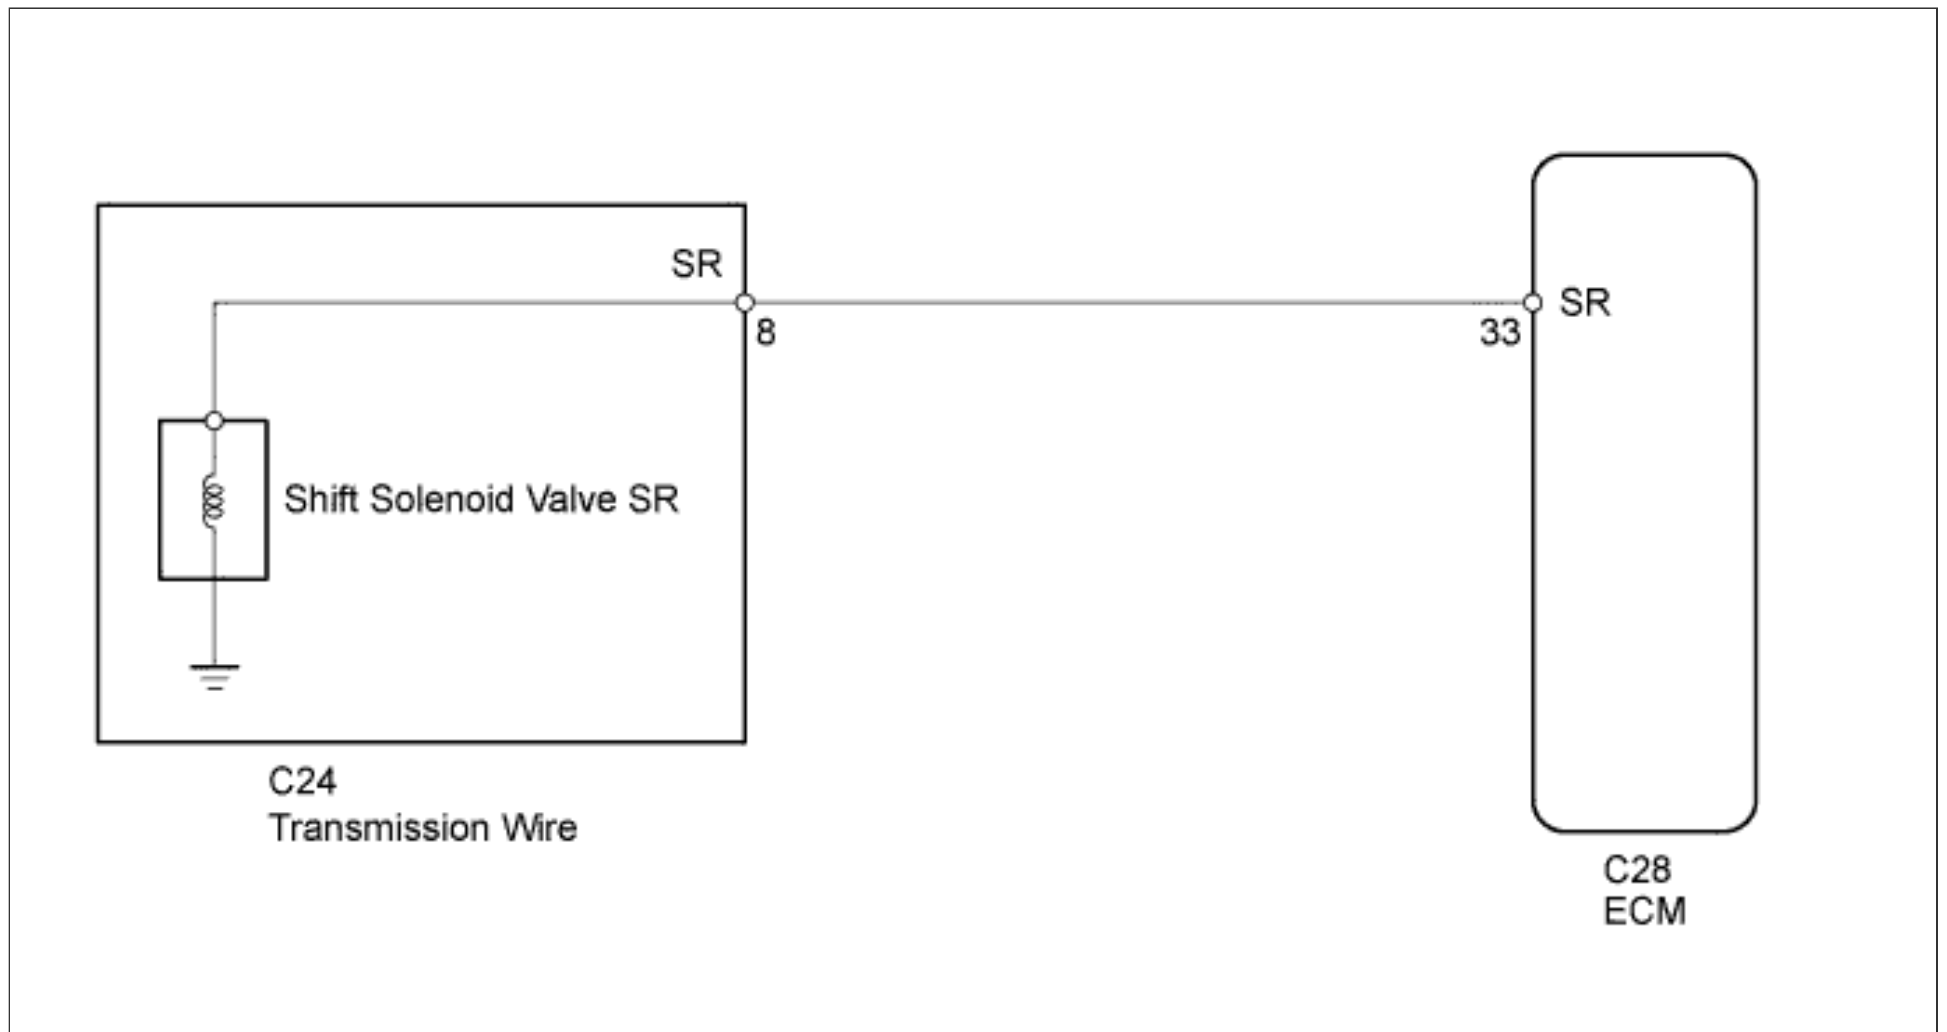

INSPECTION PROCEDURE

HINT:

Shift solenoid valve SR is turned ON/OFF normally when the shift lever is in D:

| | | | | | | |
|-------------------------|-----|-----|-----|-----|-----|-----|
| ECM gear shift command | 1st | 2nd | 3rd | 4th | 5th | 6th |
| Shift solenoid valve SR | ON | ON | ON | ON | OFF | OFF |

1.INSPECT TRANSMISSION WIRE (SHIFT SOLENOID VALVE SR)

- a. Disconnect the C24 transmission wire connector.
- b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

| | | |
|--|--|--|
| | | |
|--|--|--|

| Tester Connection | Condition | Specified Condition |
|----------------------|-------------|---------------------|
| 8 (SR) - Body ground | 20°C (68°F) | 11 to 15 Ω |

Text in Illustration

| | |
|----|---|
| *a | Component without harness connected (Transmission Wire) |
|----|---|

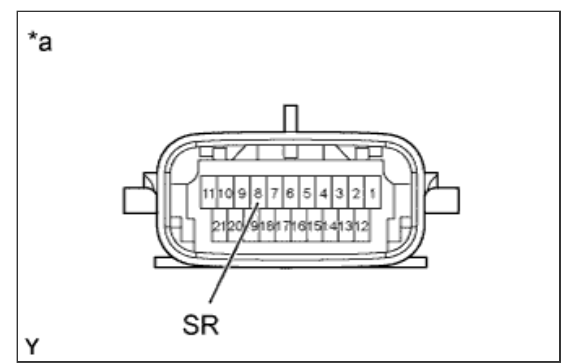

NG

[Go to step 3](#)

OK

2.CHECK HARNESS AND CONNECTOR (TRANSMISSION WIRE - ECM)


- a. Disconnect the C28 ECM connector.
- b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

| Tester Connection | Condition | Specified Condition |
|---------------------------|-------------|---------------------|
| C28-33 (SR) - Body ground | 20°C (68°F) | 11 to 15 Ω |

Text in Illustration

| | |
|----|---|
| *a | Front view of wire harness connector (to ECM) |
|----|---|

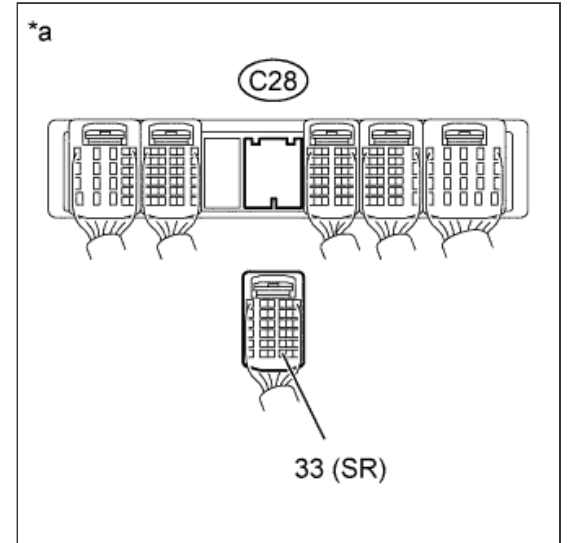

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE ECM ([Click here](#))

3.INSPECT SHIFT SOLENOID VALVE SR

- a. Remove shift solenoid valve SR.
- b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

| Tester Connection | Condition | Specified Condition |
|---|-------------|---------------------|
| Shift solenoid valve SR connector terminal - Shift solenoid valve SR body | 20°C (68°F) | 11 to 15 Ω |

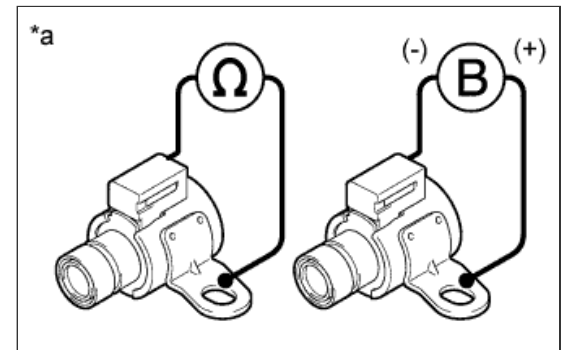

- c. Apply 12 V battery voltage to the shift solenoid valve and check that the valve moves and makes an operating noise.

OK:

| Measurement Condition | Specified Condition |
|---|--|
| <ul style="list-style-type: none"> • Battery positive (+) → Shift solenoid valve SR connector • Battery negative (-) → Shift solenoid valve SR body | Valve moves and makes an operating noise |

Text in Illustration

| | |
|----|---|
| *a | Component without harness connected (Shift Solenoid Valve SR) |
|----|---|

NG

REPLACE SHIFT SOLENOID VALVE SR ([Click here](#))

OK

REPAIR OR REPLACE TRANSMISSION WIRE ([Click here](#))

