

## ROOF HEADLINING > REMOVAL

for Preparation [Click here](#)

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### NOTICE:

- **w/ Navigation System (for HDD):**  
After the engine switch is turned off, the display and navigation module display (HDD navigation system) records various types of memory and settings. As a result, after turning the engine switch off, be sure to wait for the time specified in the following table before disconnecting the cable from the negative (-) battery terminal.

#### Waiting Time before Disconnecting Cable from Negative (-) Battery Terminal :

Condition	Waiting Time
Vehicle enrolled in G-BOOK system	6 minutes
Vehicle not enrolled in G-BOOK system	1 minute

- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected ([Click here](#)).**

### 2. REMOVE REAR NO. 2 SEAT ASSEMBLY

- a. Remove the rear No. 2 seat assembly ([Click here](#)).

### 3. REMOVE REAR NO. 1 SEAT ASSEMBLY

- a. for 60/40 Split Slide Walk-in Seat Type LH Side:  
Remove the rear No. 1 seat assembly ([Click here](#)).
- b. for 60/40 Split Slide Walk-in Seat Type RH Side:  
Remove the rear No. 1 seat assembly ([Click here](#)).

### 4. REMOVE DOOR SCUFF PLATE ASSEMBLY LH

- a. Put protective tape around the door scuff plate.

#### Text in Illustration


*1	Protective Tape
----	-----------------

- b. Using a screwdriver, detach the 4 clips, 10 claws and 2 guides.

**HINT:**

Tape the screwdriver tip before use.

- c. Disconnect the connector and remove the door scuff plate.

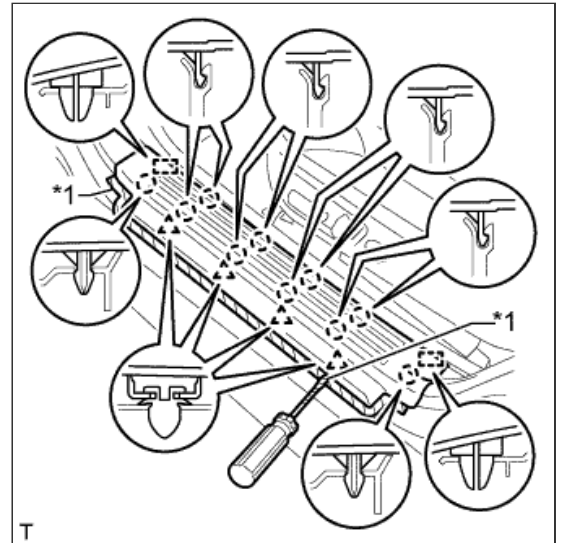


**5. REMOVE DOOR SCUFF PLATE ASSEMBLY RH**

**HINT:**

Use the same procedure described for the LH side.

**6. REMOVE COWL SIDE TRIM BOARD LH**

- a. Remove the clip.
- b. Detach the clip and claw and remove the cowl side trim board.

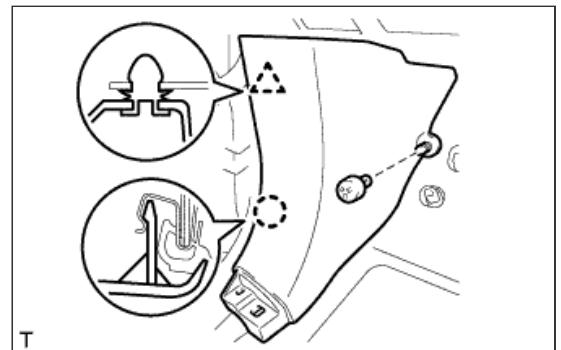


**7. REMOVE COWL SIDE TRIM BOARD RH**

**HINT:**

Use the same procedure described for the LH side.

**8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

- a. Remove the front door opening trim weatherstrip.

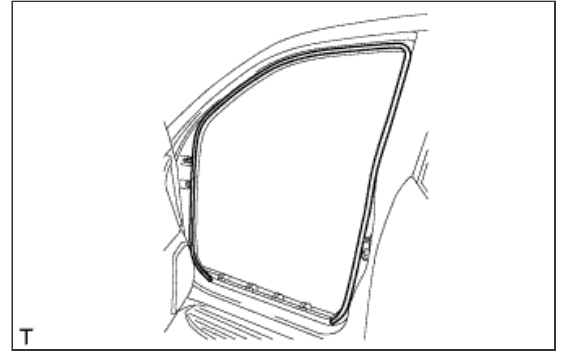

## 9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

### HINT:

Use the same procedure described for the LH side.

## 10. REMOVE FRONT NO. 1 ASSIST GRIP PLUG LH


### HINT:

Use the same procedure for the other front No. 1 assist grip plug.

- a. Using a screwdriver, detach the 2 claws and remove the front No. 1 assist grip plug.

### HINT:

Tape the screwdriver tip before use.

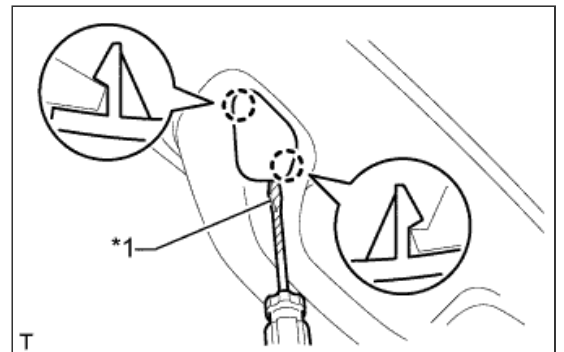

### Text in Illustration

*1	Protective Tape
----	-----------------

## 11. REMOVE FRONT NO. 1 ASSIST GRIP PLUG RH

### HINT:


Use the same procedure described for the LH side.

## 12. REMOVE NO. 1 ASSIST GRIP

### HINT:


Use the same procedure for the other No. 1 assist grip.

- a. Remove the 2 bolts.
- b. Detach the 2 claws and remove the No. 1 assist grip.

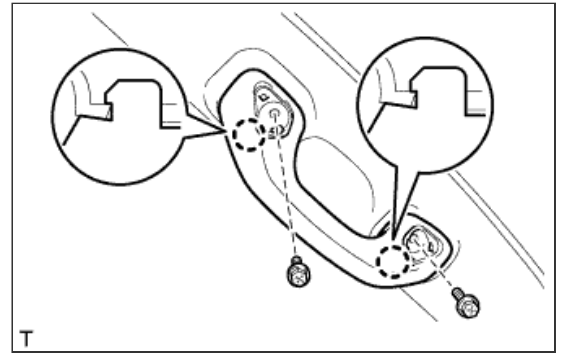

**13. REMOVE FRONT PILLAR GARNISH LH**


- a. Detach the 3 guides and remove the front pillar garnish.

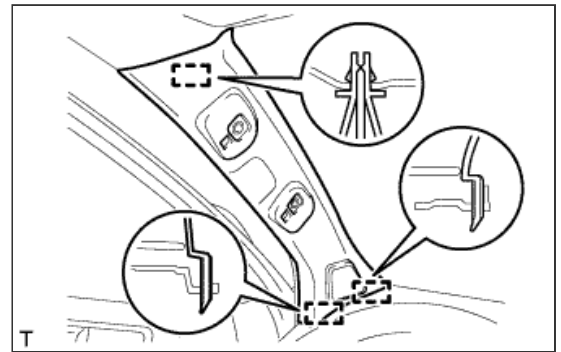

- b. Protect the curtain shield airbag assembly.
  - i. Completely cover the airbag with a cloth or nylon sheet and secure the ends of the cover with adhesive tape as shown in the illustration.

**NOTICE:**

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

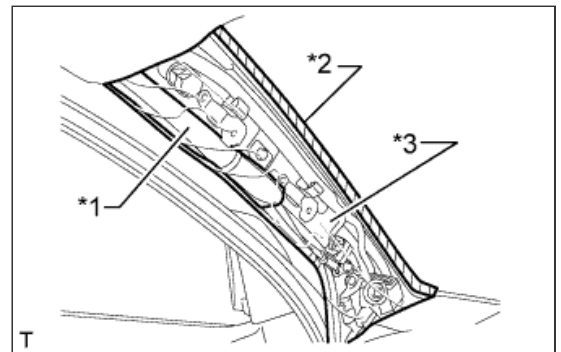

**Text in Illustration**

*1	Curtain Shield Airbag Assembly
*2	Adhesive Tape
*3	Protective Cover

**14. REMOVE FRONT PILLAR GARNISH RH**

**HINT:**

Use the same procedure described for the LH side.

## 15. REMOVE REAR NO. 1 FLOOR STEP COVER

### HINT:

Use the same procedure for all rear No. 1 floor step covers.


- a. Using a screwdriver, detach the 2 claws and remove the rear No. 1 floor step cover.

### HINT:

Tape the screwdriver tip before use.


### Text in Illustration

*1	Protective Tape
----	-----------------

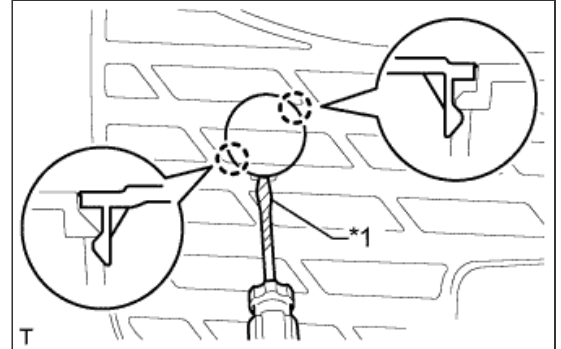

## 16. REMOVE QUARTER SCUFF PLATE LH

- a. Remove the 2 bolts and quarter scuff plate.

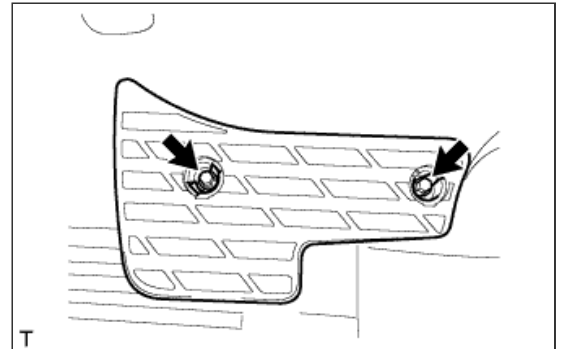

## 17. REMOVE QUARTER SCUFF PLATE RH

### HINT:

Use the same procedure described for the LH side.

## 18. REMOVE REAR DOOR SCUFF PLATE LH


- a. Put protective tape around the rear door scuff plate.
- b. Using a screwdriver, detach the 3 clips, 6 claws and 2 guides and remove the rear door scuff plate.

### HINT:

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

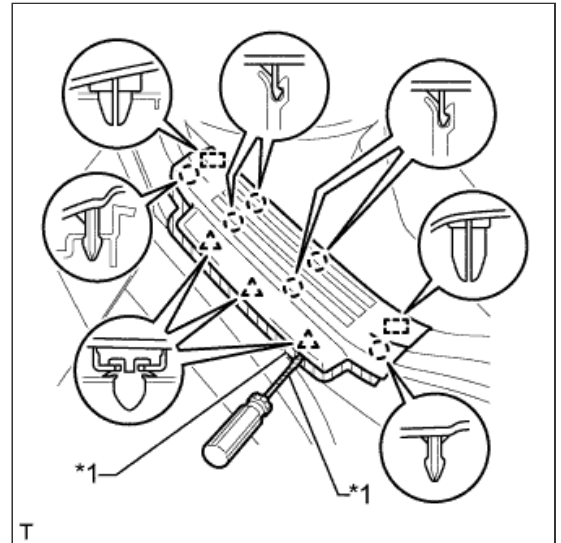


**19. REMOVE REAR DOOR SCUFF PLATE RH**

**HINT:**

Use the same procedure described for the LH side.

**20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**

- a. Remove the rear door opening trim weatherstrip.

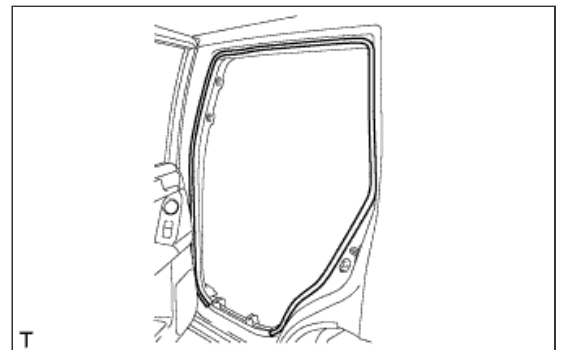

**21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**

**HINT:**


Use the same procedure described for the LH side.

**22. REMOVE OUTER LAP BELT ANCHOR COVER**

**HINT:**


Use the same procedure for the other outer lap belt anchor cover.

- a. Detach the 3 claws and remove the outer lap belt anchor cover.

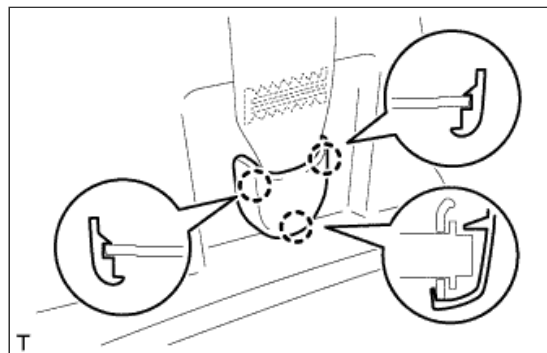


### 23. REMOVE LOWER CENTER PILLAR GARNISH LH

- a. Remove the bolt and disconnect the front seat outer belt floor anchor.

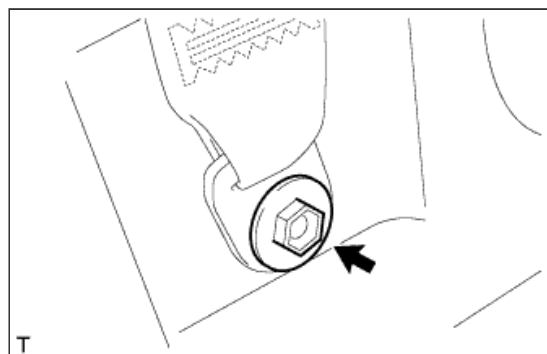

- b. Detach the 4 claws and 2 clips and remove the lower center pillar garnish.

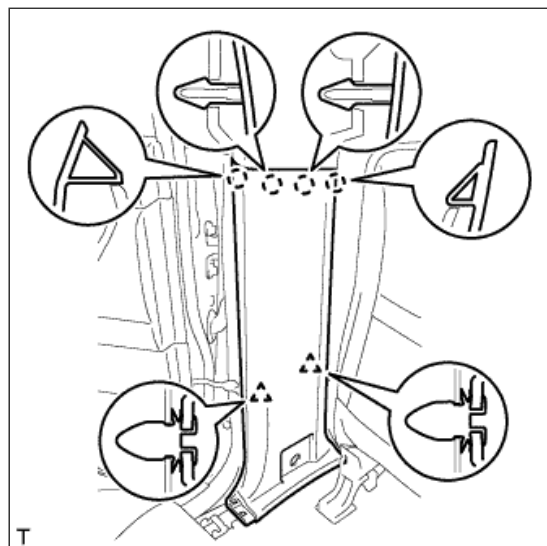

### 24. REMOVE LOWER CENTER PILLAR GARNISH RH

#### HINT:

Use the same procedure described for the LH side.

### 25. REMOVE NO. 2 ASSIST GRIP PLUG LH

**HINT:**

Use the same procedure for the other front No. 2 assist grip plug.


- a. Using a screwdriver, detach the 2 claws and remove the front No. 2 assist grip plug.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

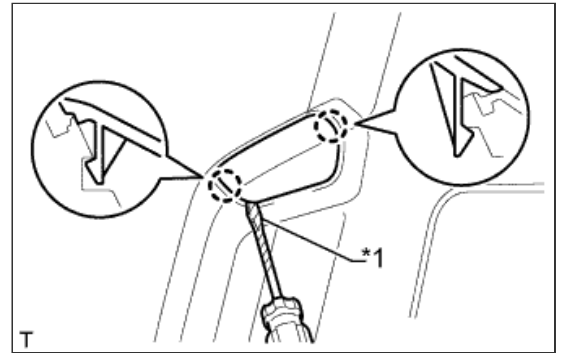

**26. REMOVE NO. 2 ASSIST GRIP PLUG RH**

**HINT:**


Use the same procedure described for the LH side.

**27. REMOVE NO. 2 ASSIST GRIP**

**HINT:**

Use the same procedure for the other No. 2 assist grip.

- a. Remove the 2 bolts.
- b. Detach the 2 claws and remove the No. 2 assist grip.

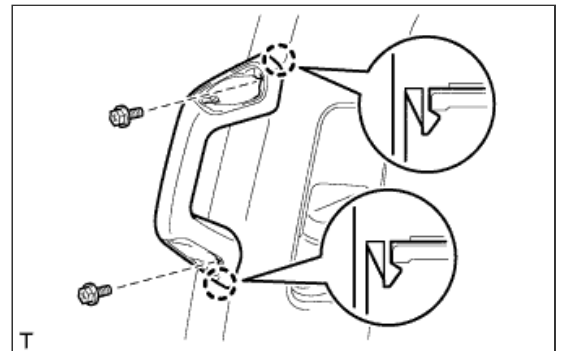


**28. REMOVE CENTER PILLAR GARNISH LH**

- a. Move the front shoulder belt anchor adjuster to the lowest position.
- b. Remove the bolt.
- c. Detach the 2 clips and 2 guides.
- d. Pass the front seat outer belt floor anchor through the center pillar garnish and remove the center pillar



garnish.

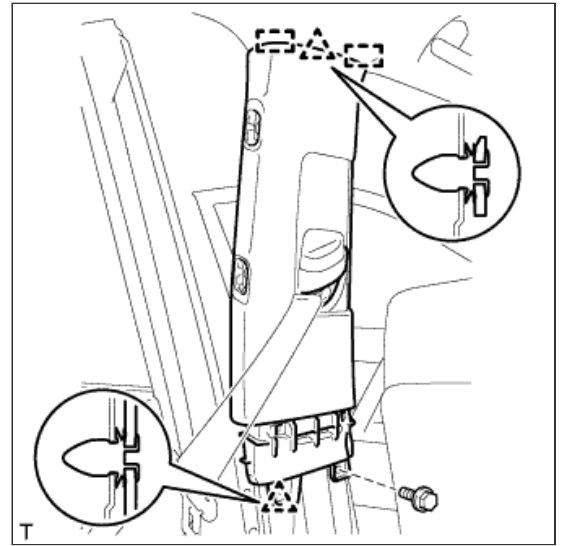

### 29. REMOVE CENTER PILLAR GARNISH RH

#### HINT:

Use the same procedure described for the LH side.

### 30. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)


- a. Remove the tonneau cover.

### 31. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER

#### HINT:

Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

- a. Detach the 3 claws and remove the rear No. 1 seat outer lap belt anchor cover.

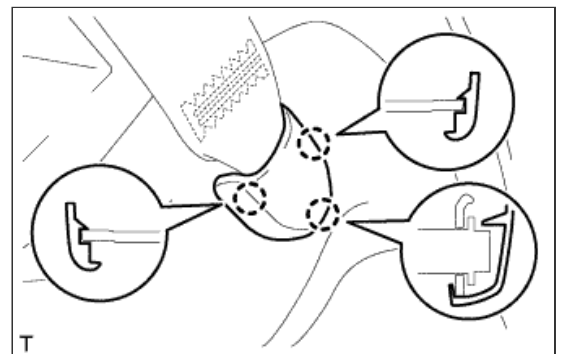


### 32. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

#### HINT:

Use the same procedure for the other No. 1 luggage compartment trim hook.

- a. Remove the luggage compartment trim hook by turning it clockwise.

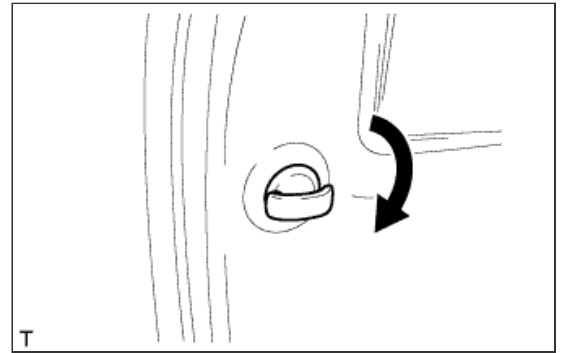

### 33. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/o Tonneau Cover)

**HINT:**

Use the same procedure for the other No. 1 tonneau cover holder cap.


- a. Using a screwdriver, detach the 2 claws and remove the No. 1 tonneau cover holder cap.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

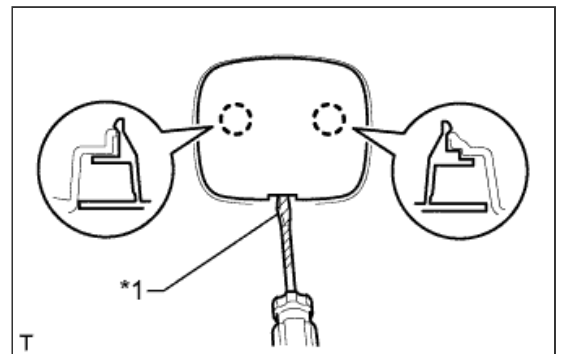

### 34. REMOVE FRONT DECK SIDE TRIM COVER (w/ Tonneau Cover)

**HINT:**

Use the same procedure for the other front deck side trim cover.


- a. Using a screwdriver, detach the 2 claws and remove the front deck side trim cover.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

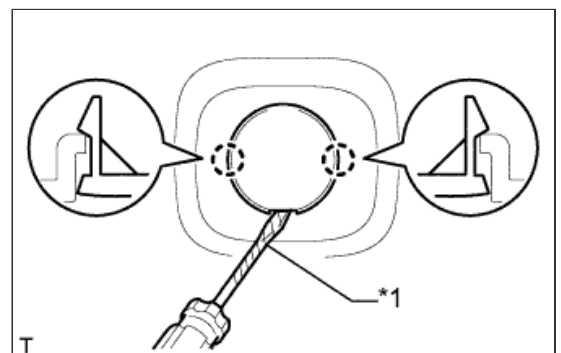

### 35. REMOVE ASSIST GRIP PLUG

**HINT:**

Use the same procedure for all assist grip plugs.


- a. Using a screwdriver, detach the 2 claws and remove the assist grip plug.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

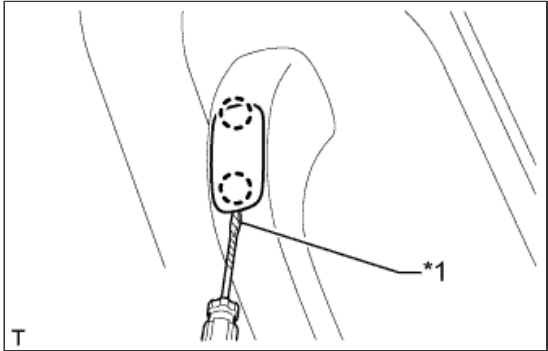


**36. REMOVE ASSIST GRIP SUB-ASSEMBLY**

**HINT:**


Use the same procedure for the other assist grip.

- a. Remove the 2 bolts and assist grip.

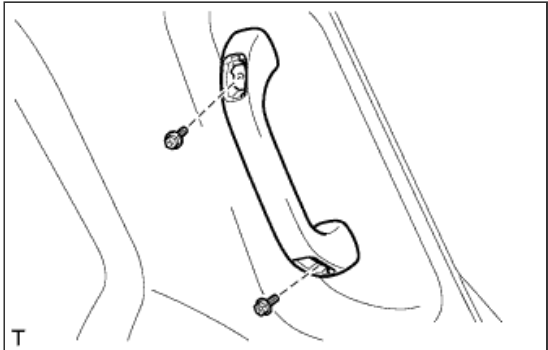

**37. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**


- a. Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

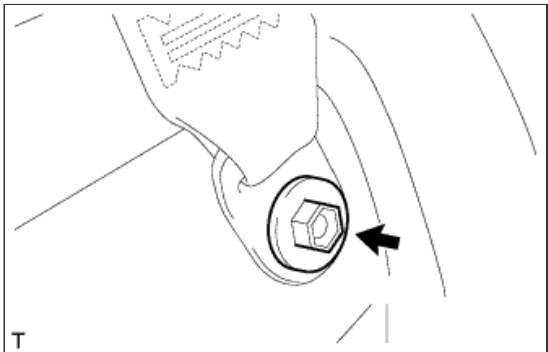


- b. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.

- c. Remove the 2 bolts and 2 screws.

- d. Detach the 3 clips and 8 claws.

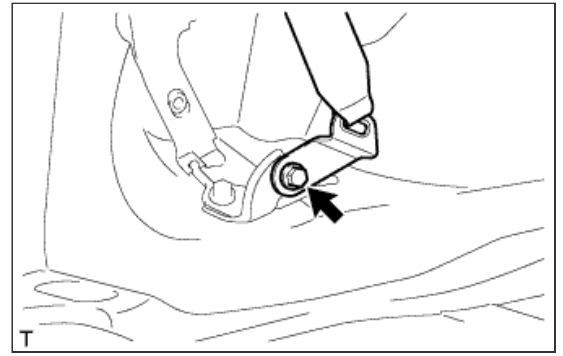


e. Disconnect each connector and remove the deck trim side panel.

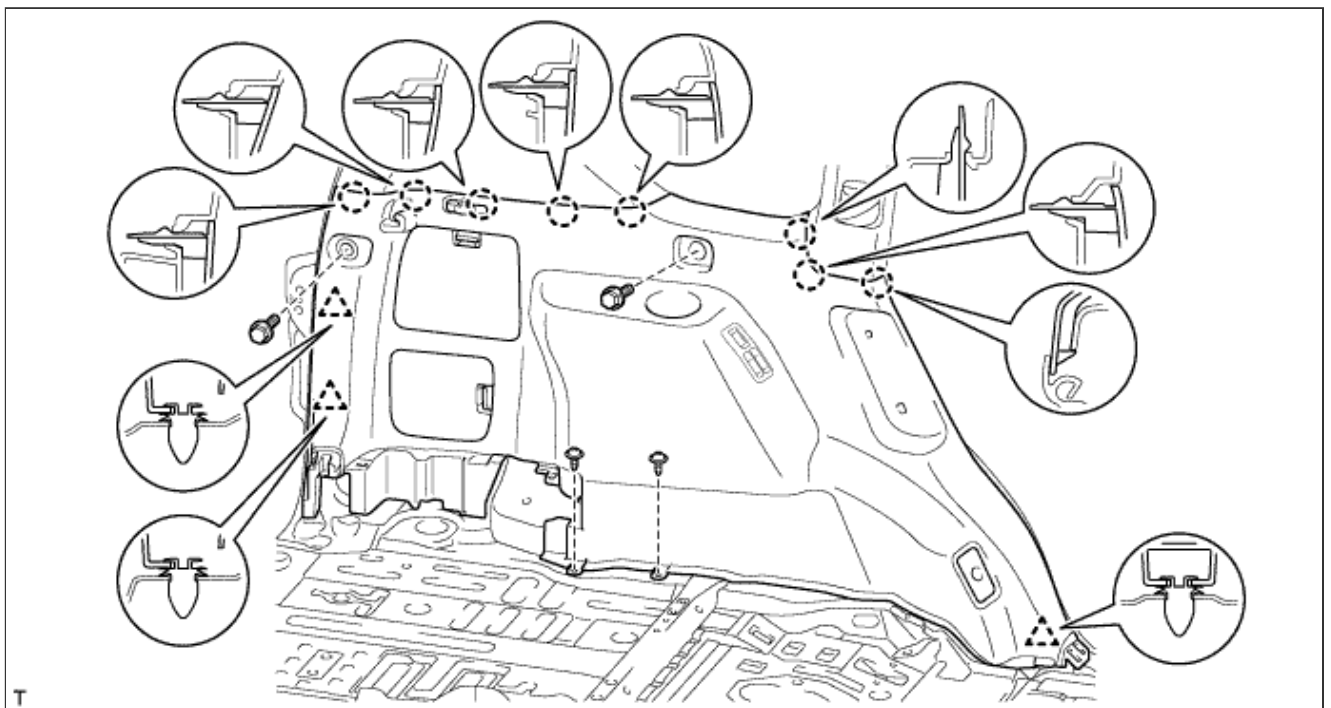


### 38. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH


a. Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

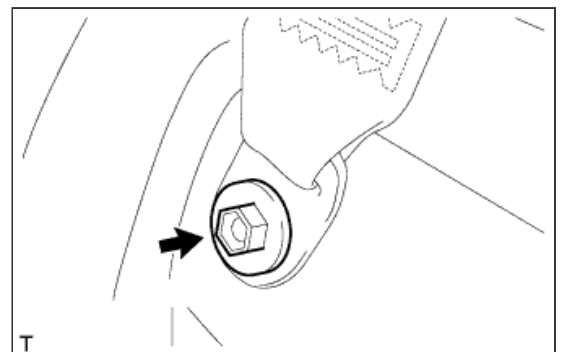

- b.** Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.
- c.** Remove the 2 bolts and screw.
- d.** Detach the 3 clips and 8 claws.

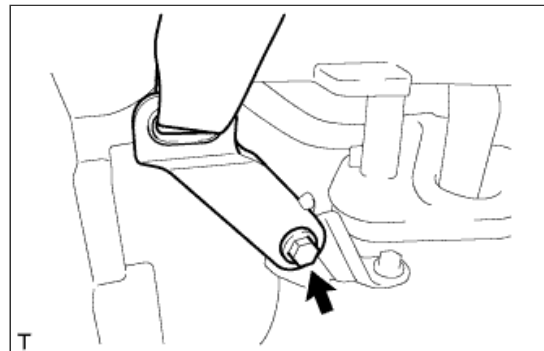


- e.** Disconnect each connector and remove the deck trim side panel.

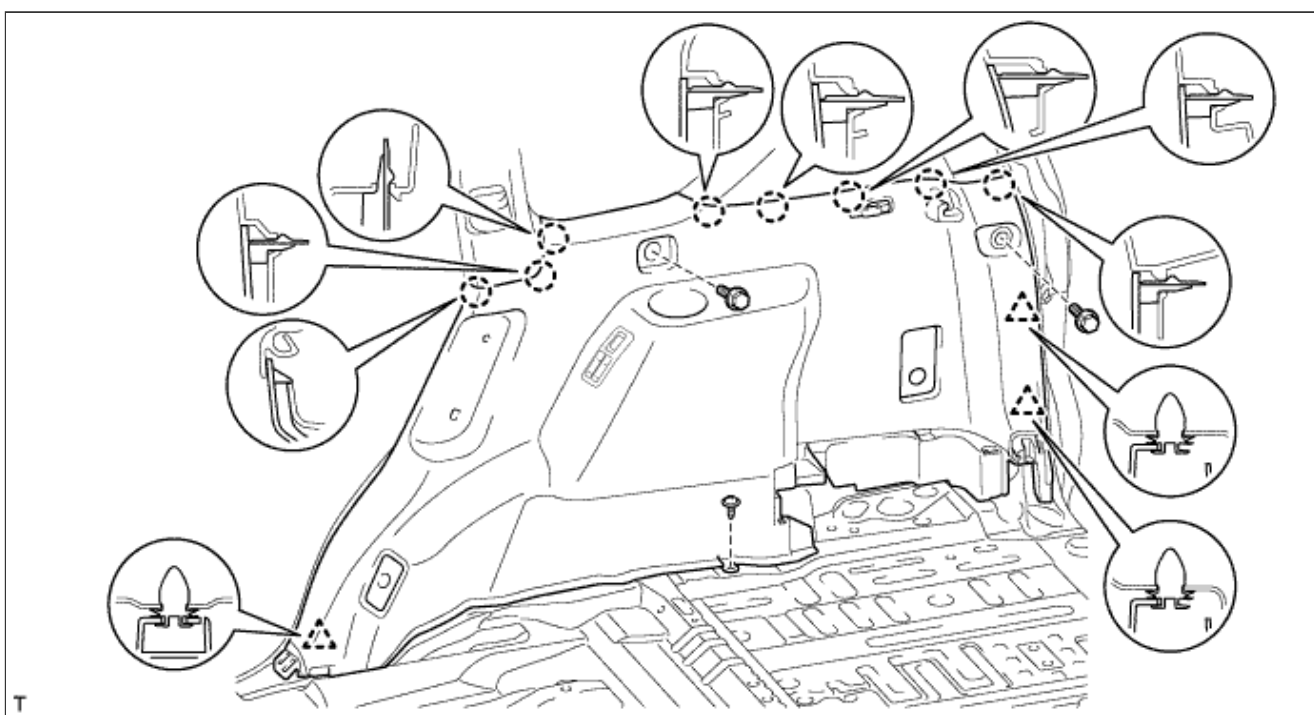

### 39. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

- a.** Move the rear shoulder belt anchor adjuster to the lowest position.
- b.** Detach the 2 clips and 2 guides.
- c.** Pass the rear No. 1 seat outer belt floor anchor through the front quarter trim panel and remove the front quarter trim panel.

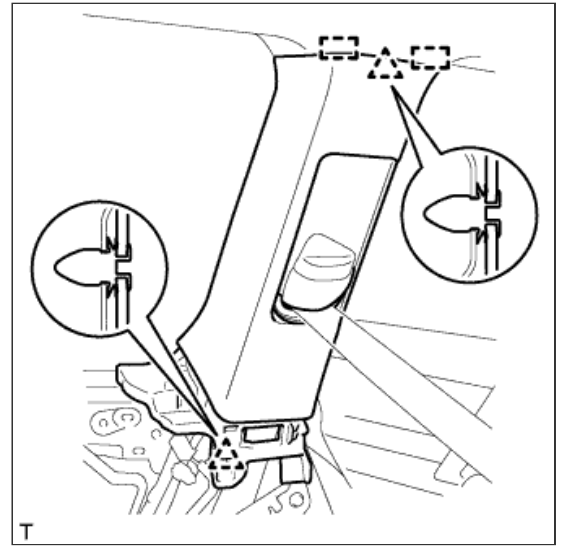


#### 40. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

##### HINT:


Use the same procedure described for the LH side.

#### 41. REMOVE REAR QUARTER TRIM PANEL ASSEMBLY LH

- a. Detach the 7 clips and 2 guides.
- b. Disconnect the connector.

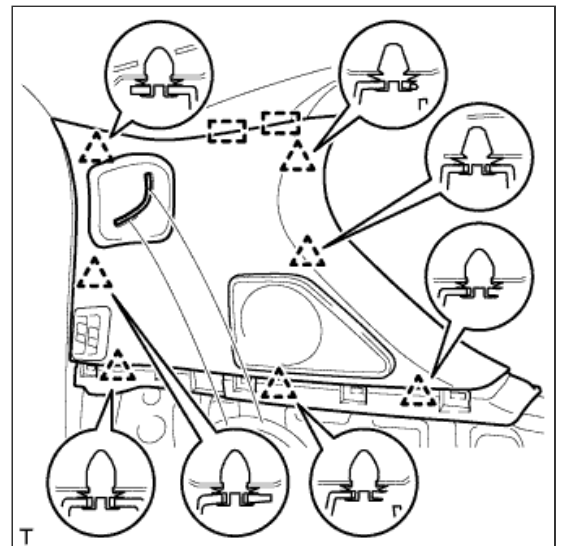

- c. Detach the 4 clips and 2 guides, pass the rear No. 2 seat outer belt floor anchor through the rear quarter trim panel and remove the rear quarter trim panel.

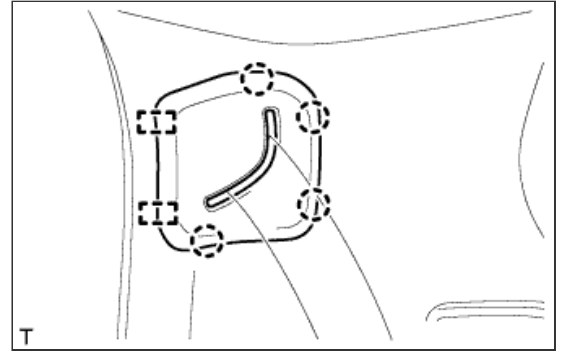

#### 42. REMOVE REAR QUARTER TRIM PANEL ASSEMBLY RH

**HINT:**

Use the same procedure described for the LH side.

#### 43. REMOVE ASSIST GRIP SUB-ASSEMBLY

**HINT:**

Use the same procedure for the other assist grip.

- a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.


**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

- b. Detach the 2 clips and remove the assist grip.
- c. Remove the 2 clips from the vehicle body.

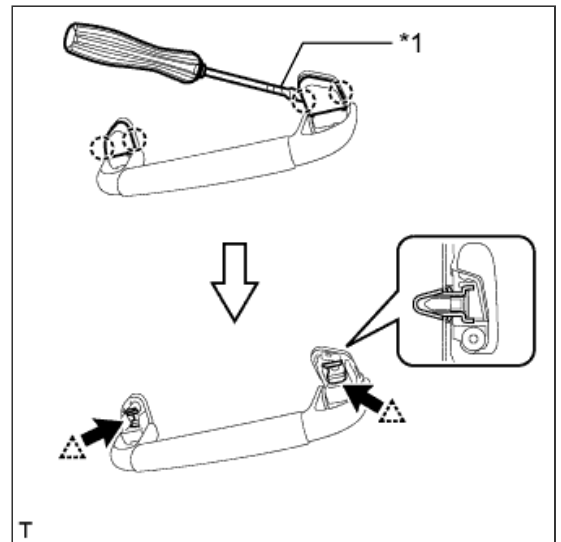

#### 44. REMOVE REAR ASSIST GRIP ASSEMBLY LH

- a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.


**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

- b. Detach the 2 clips and remove the assist grip.
- c. Remove the 2 clips from the vehicle body.

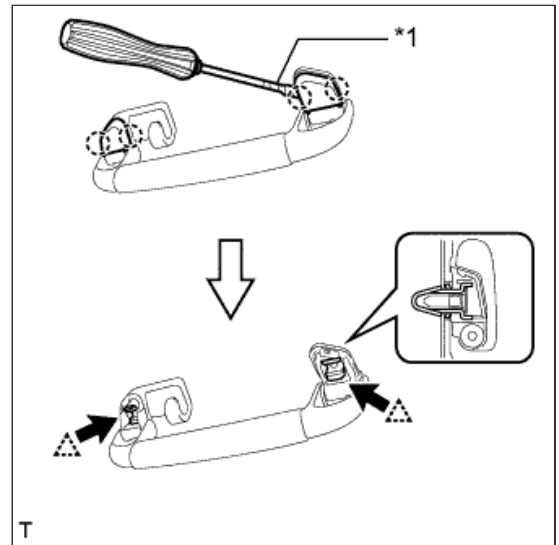

**45. REMOVE REAR ASSIST GRIP ASSEMBLY RH**

**HINT:**

Use the same procedure described for the LH side.

**46. REMOVE ASSIST GRIP**

**HINT:**

Use the same procedure for the other assist grip.


- a. Using a screwdriver, detach the 4 claws and open the 2 covers.

**HINT:**

Tape the screwdriver tip before use.


**Text in Illustration**

*1	Protective Tape
----	-----------------

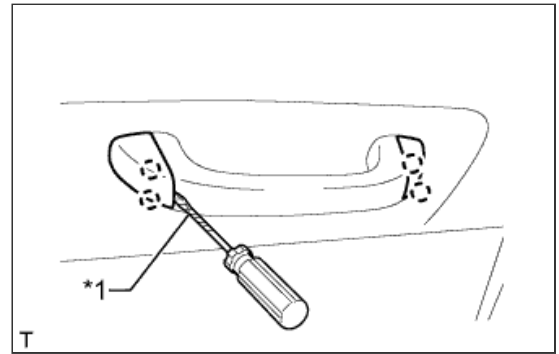

- b. Remove the 2 bolts and assist grip.



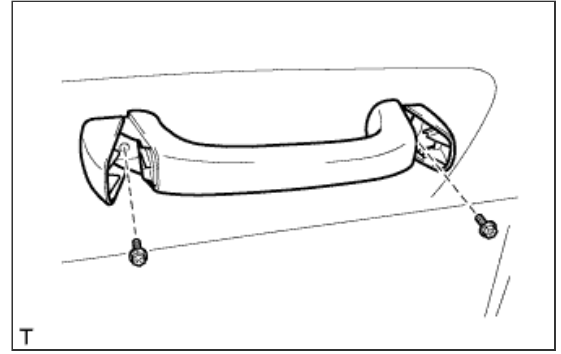


#### 47. REMOVE VISOR BRACKET COVER

**HINT:**


Use the same procedure for the other visor bracket cover.

- a. Detach the 4 claws and remove the visor bracket cover.

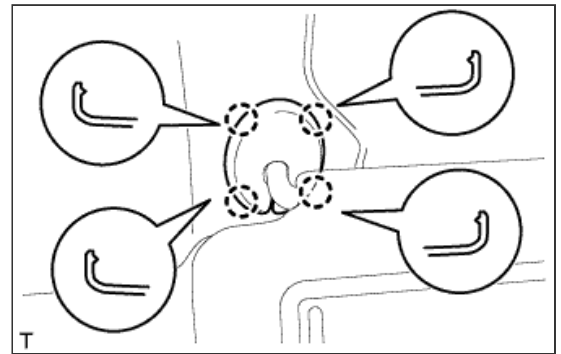

#### 48. REMOVE VISOR ASSEMBLY LH

- a. Remove the 2 screws and visor.

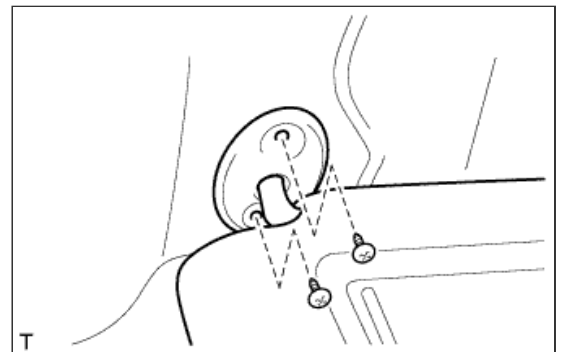

#### 49. REMOVE VISOR ASSEMBLY RH

**HINT:**


Use the same procedure described for the LH side.

#### 50. REMOVE VISOR HOLDER

**HINT:**


Use the same procedure for the other visor holder.

- a. Turn the visor holder approximately 45° and pull it out as shown in the illustration.
- b. Detach the 2 claws and remove the visor holder.

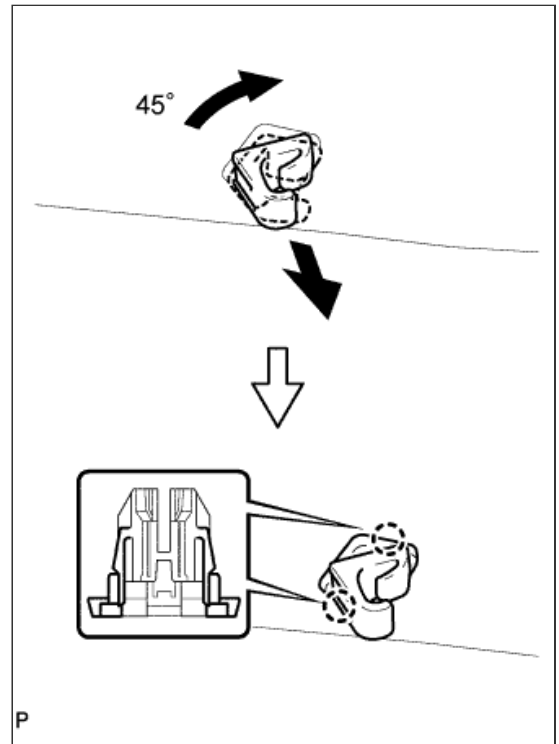


**51. REMOVE MAP LIGHT ASSEMBLY**

- a. Detach the 4 clips.
- b. Disconnect the connector and remove the map light.

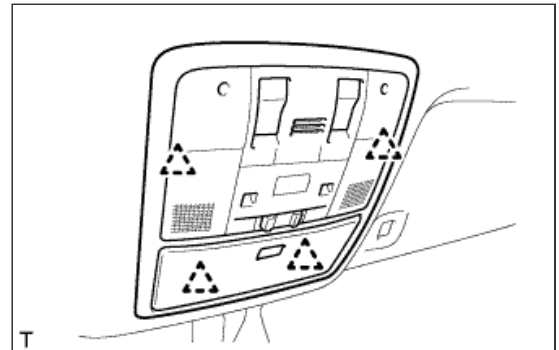


**52. REMOVE RAIN SENSOR COVER**

- a. Detach the 2 claws and remove the rain sensor cover.

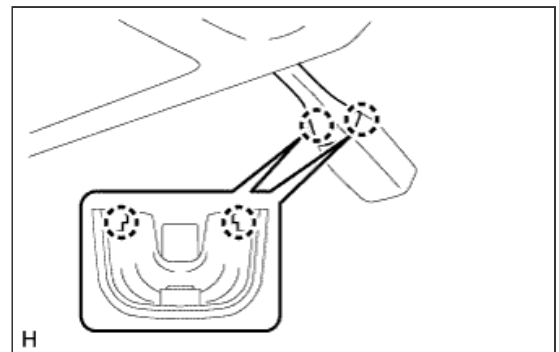


### 53. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER

- a. Detach the 2 claws and slide the inner rear view mirror stay holder cover as shown in the illustration.

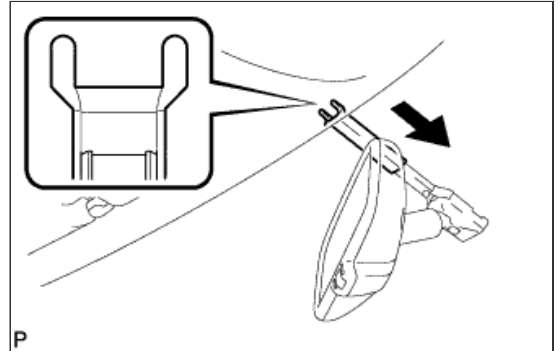

- b. Detach the 2 claws and remove the inner rear view mirror stay holder cover.

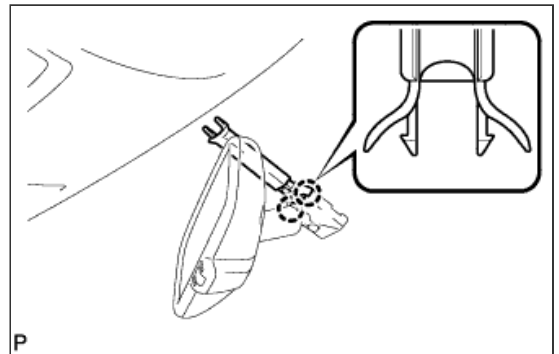


### 54. REMOVE NO. 1 ROOM LIGHT ASSEMBLY


- a. for Center:  
Remove the No. 1 room light assembly ([Click here](#)).
- b. for Rear:  
Remove the No. 1 room light assembly ([Click here](#)).

### 55. REMOVE REAR SIDE NO. 1 AIR DUCT

- a. Detach the 2 claws and remove the cooler plate.

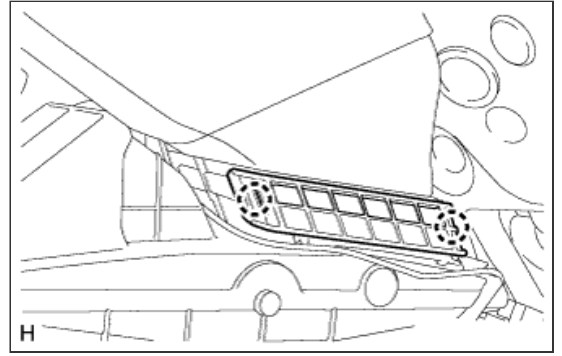


- b.** Swing the bottom of the duct sideways and remove the duct.

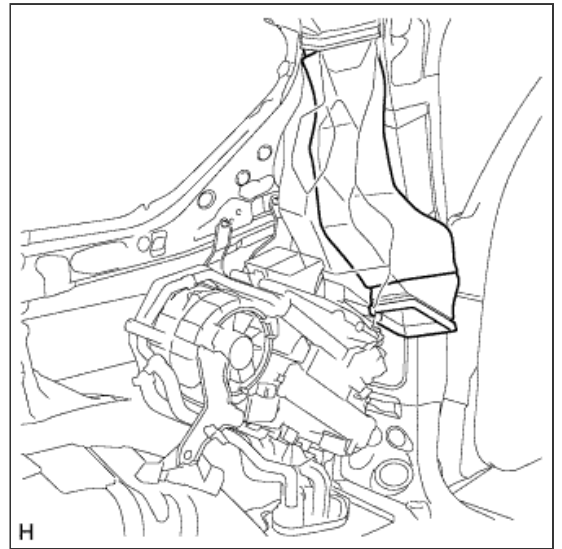


**56. REMOVE ROOF HEADLINING ASSEMBLY**


- a.** Disconnect the inner mirror connector.
- b.** Disconnect the rain sensor connector.

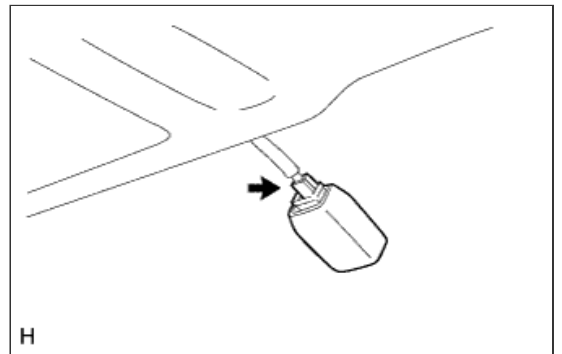

- c.** Disconnect the drive gear connector.

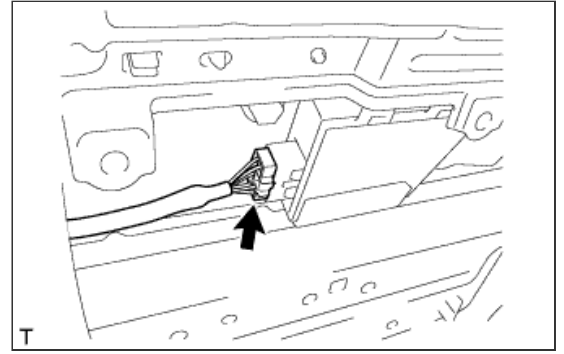


**d.** Disconnect the 2 connectors and detach the 3 clamps from the front pillar LH.

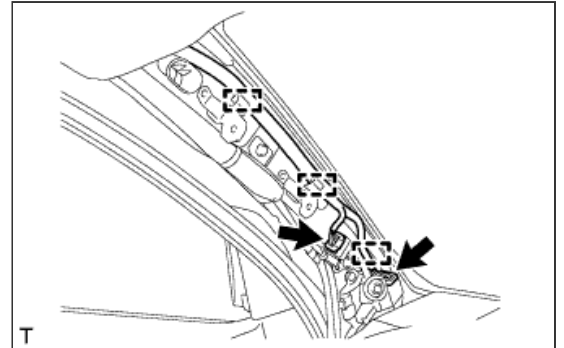


**e.** Remove the bolt.


**f.** Disconnect the 2 connectors and detach the 3 clamps from the front pillar RH.

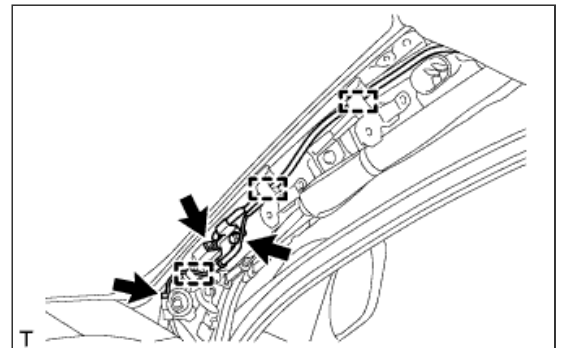

**g.** Disconnect the 2 connectors and detach the clamp from the rear pillar LH.

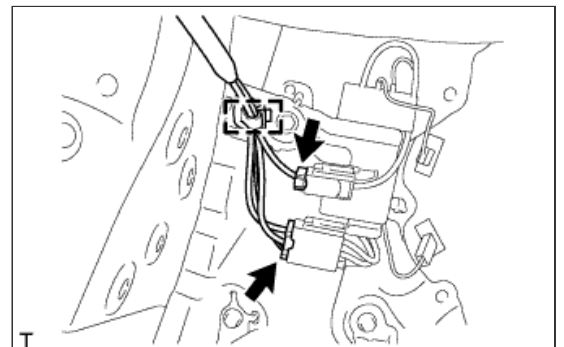


**h.** Disconnect the connector and detach the 3 clamps from the rear pillar RH.

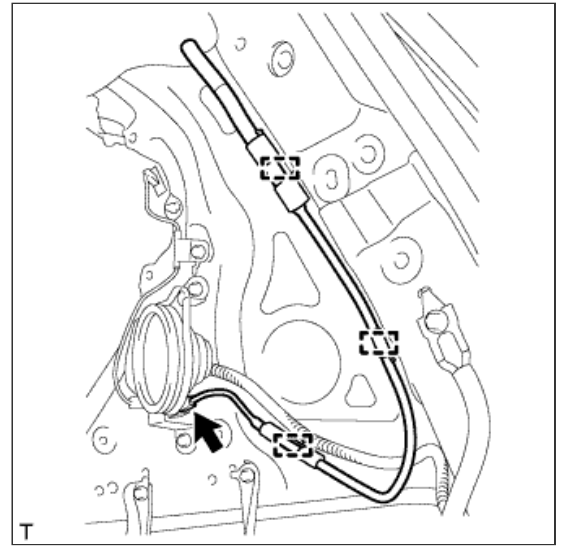


i. Detach the 2 clips, 2 guides and 8 fasteners.

**Text in Illustration**

*1	Guide
*2	Fastener

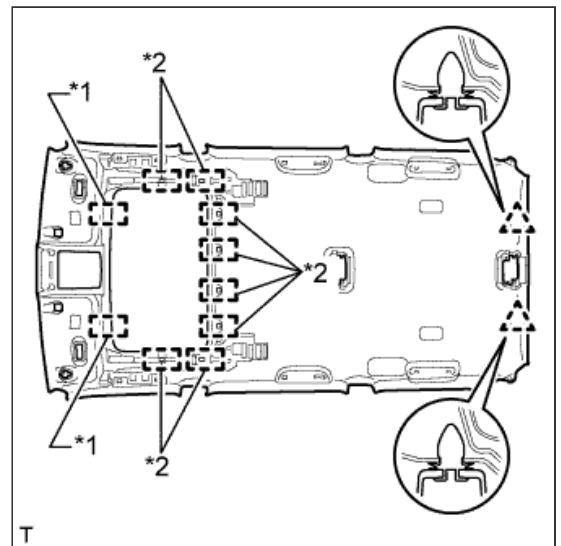


j. Disconnect the antenna cord connector.

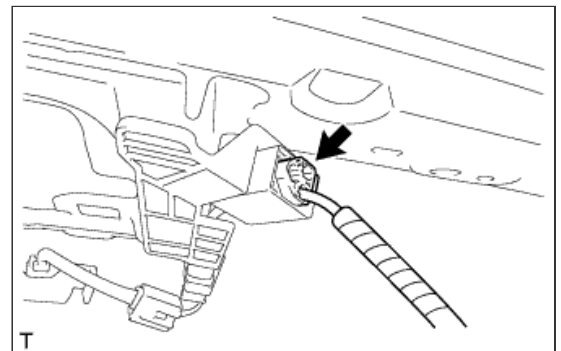

k. Remove the roof headlining from the back door as shown in the illustration.


**NOTICE:**

Be careful not to damage the roof headlining when removing it.

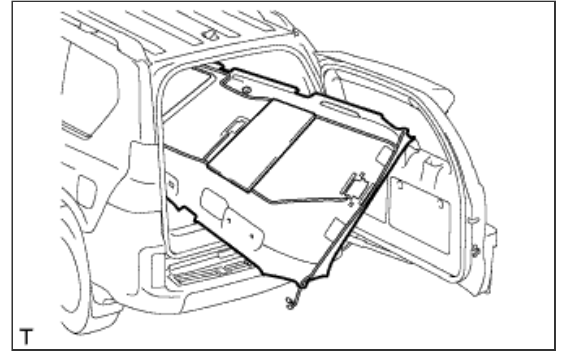

#### 57. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

- a. Detach the 5 claws of the front shoulder belt anchor plate and slide the front shoulder belt anchor plate to remove it.

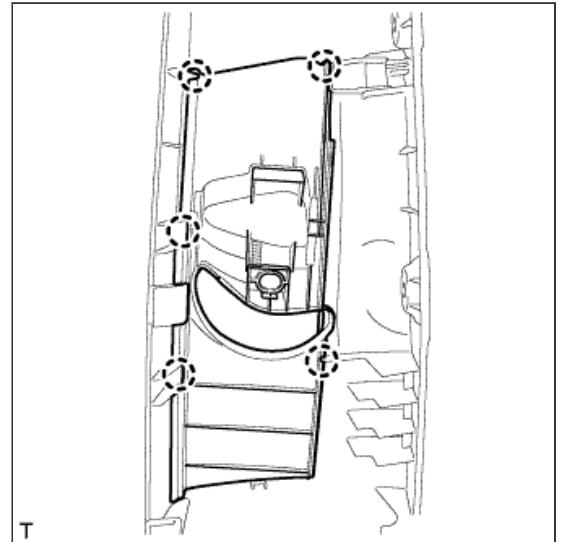


#### 58. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

#### HINT:

Use the same procedure described for the LH side.

#### 59. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

- a. Detach the 6 claws of the rear shoulder belt anchor plate and slide the rear shoulder belt anchor plate to remove it.

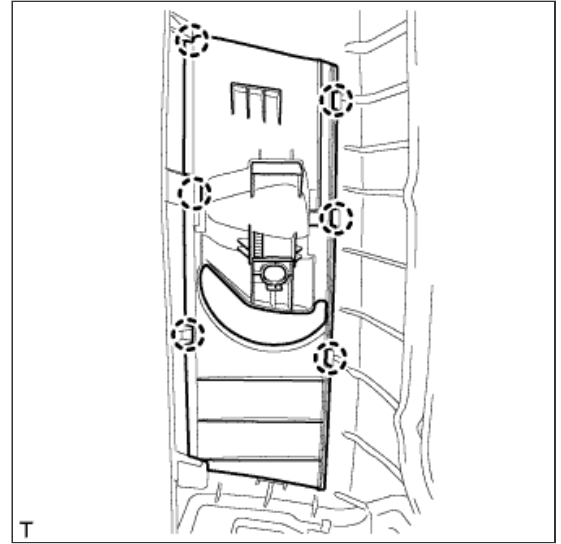

**60. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH**

**HINT:**

Use the same procedure described for the LH side.


**61. REMOVE NO. 1 ROOF SIDE RAIL GARNISH LH**

- a. Detach the 3 clips.
- b. Cut off the 3 clips and remove the roof side rail garnish.

**Text in Illustration**

*a	Cut Off Position
----	------------------

- c. Remove the 3 clips from the vehicle body.

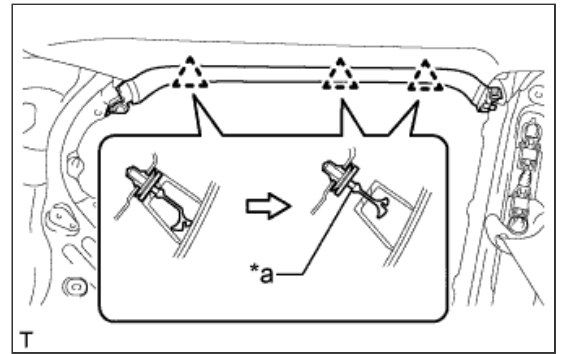

**62. REMOVE NO. 1 ROOF SIDE RAIL GARNISH RH**


**HINT:**

Use the same procedure described for the LH side.

**63. REMOVE REAR SEAT SHOULDER BELT HANGER LH**

- a. Detach the claw and guide and remove the rear seat shoulder belt hanger.



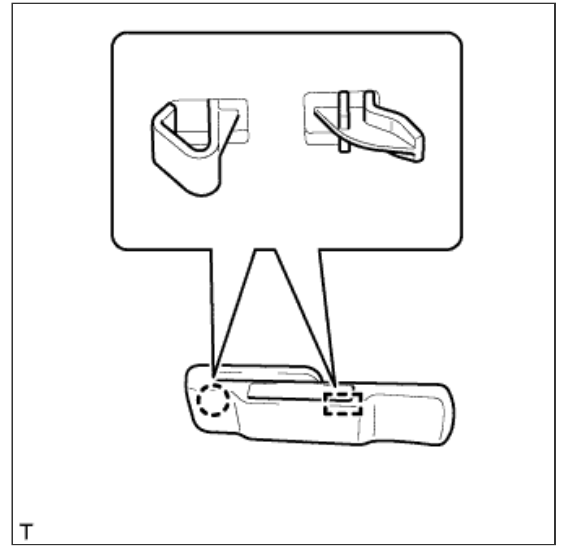

#### 64. REMOVE REAR SEAT SHOULDER BELT HANGER RH

**HINT:**


Use the same procedure described for the LH side.

#### 65. REMOVE QUARTER TRIM COVER

**HINT:**


Use the same procedure for the other quarter trim cover.

- a. Detach the 2 claws and remove the quarter trim cover.

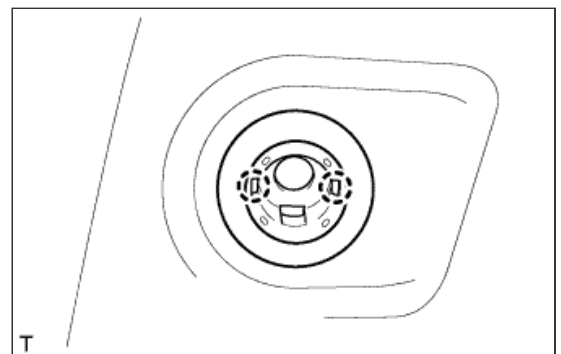

#### 66. REMOVE QUARTER TRIM JACK COVER

- a. Detach the 3 claws and 2 guides and remove the quarter trim jack cover.

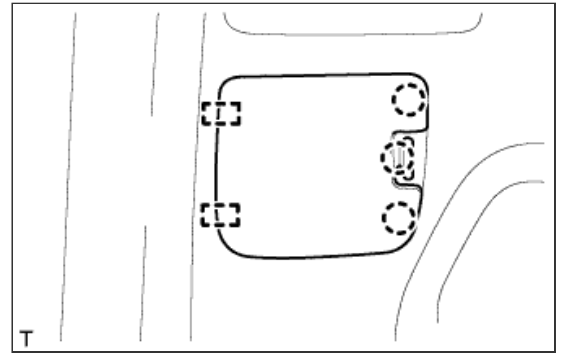

**67. REMOVE DECK SIDE TRIM COVER LH**

- a.** Detach the 3 claws and 2 guides and remove the deck side trim cover.

