

3. Disable direct hazards / Safety regulations

 
If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock Power tilt and telescopic steering Sliding roof Power window Electric parking brake Power seat Power back door

When the 12 V battery is disconnected, electrical components cannot be operated.


Perform procedure Main or Alternative to completely shut off the vehicle.

<Main Procedure>









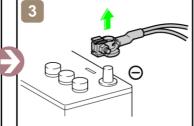

*1: 5 m (16.4 ft) or more

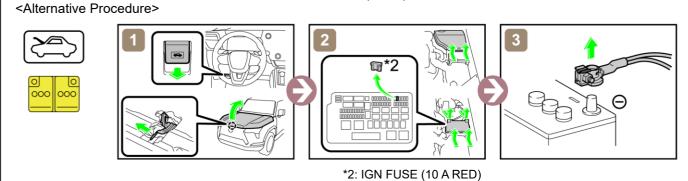

■ Access to 12 V Battery

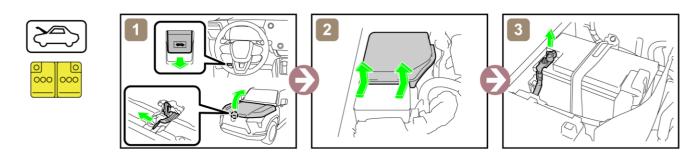

4. Access to the occupants

Window Glass

