

 
# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service.




It is also possible to customize certain vehicle features yourself using the navigation system.


## Vehicles with Navigation system:

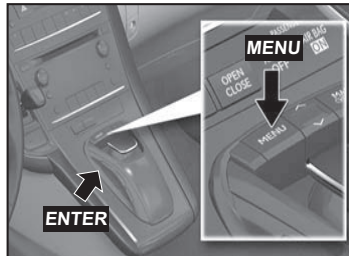


**STEP 1** Press the **MENU** button.

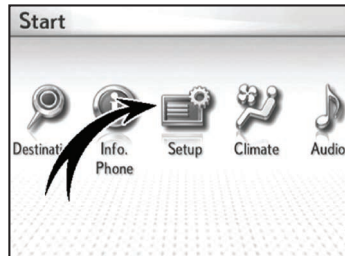 

 
**STEP 2** Select **Setup** using the Remote Touch unit and press **ENTER**.

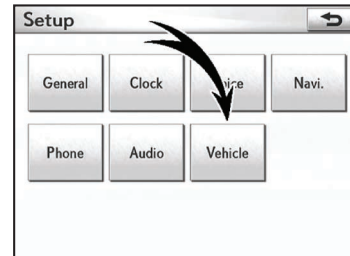

 **STEP 3** Select **Vehicle** and press **ENTER**.

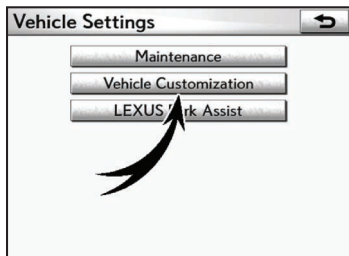

 **STEP 4** Select **Vehicle Customization** and press **ENTER**.

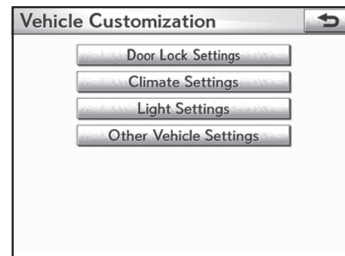

**STEP 5** Select category and press **ENTER**. Scroll to specific customization setting.

Vehicle must be in "ON" mode to program personalized settings.



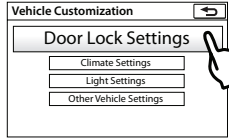

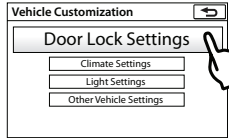

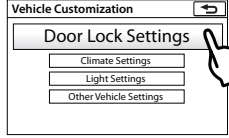

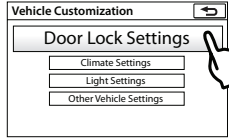










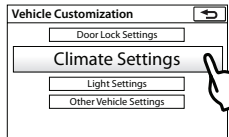

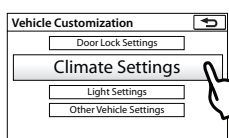

After changing the settings, select **Save** using the Remote Touch unit and press **ENTER**.

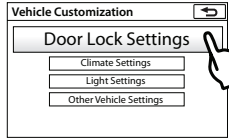

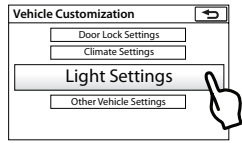

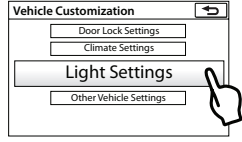

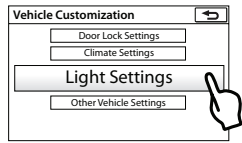

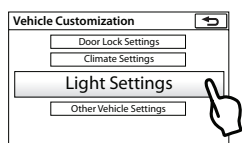

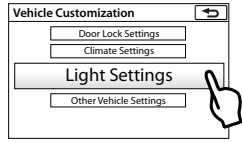

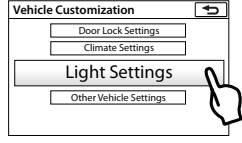

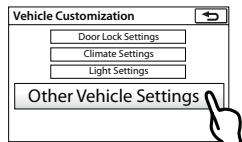

Please refer to the 2010 HS 250h Quick Guide, or Navigation Owner's Manual for more information on Remote Touch operations.

### Settings that can be customized by:





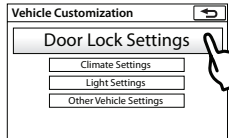

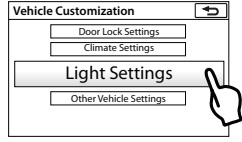
	Using the navigation system	Dealer
<h3>Door Lock Settings</h3> <ol style="list-style-type: none"> <li> <b>Speed Sensitive Auto Lock</b>                      When the vehicle reaches 13 mph:                     <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will not lock. (Standard) = Off</li> <li><input type="checkbox"/> All the doors will automatically lock. = On</li> </ul> </li> <li> <b>Shift-Linked Auto Lock</b>                      When the vehicle is taken out of park and placed into another range:                     <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off</li> <li><input type="checkbox"/> The doors automatically lock. (Standard) = On</li> </ul> </li> <li> <b>Shift-Linked Auto Unlock</b>                      When the engine is running and the vehicle is placed into park:                     <ul style="list-style-type: none"> <li><input type="checkbox"/> All the doors will remain locked. = Off</li> <li><input type="checkbox"/> All the doors will automatically unlock. (Standard) = On</li> </ul> </li> <li> <b>Driver Door-Linked Unlock</b>                      When the vehicle is turned off and the driver door is opened within 10 seconds:                     <ul style="list-style-type: none"> <li><input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off</li> <li><input type="checkbox"/> All of the remaining doors will automatically unlock. = On</li> </ul> </li> <li> <b>Unlock on Second Key Turn</b>                      When using the mechanical key to unlock the doors:                     <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul> </li> </ol>		

LPS options were correct at time of development. All options are subject to change without prior notice.

Door Lock Settings (cont'd)	Using the navigation system	Dealer
<p><b>6. Remote 2-Press Unlock</b>                      When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>		
<p><b>7. Select Doors to Unlock</b>                      When pressing the unlock button one time on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All</li> <li><input type="checkbox"/> Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver</li> </ul>		
<p><b>8. Access System with Elec. Key</b>                      When unlocking the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off</li> <li><input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard) = On</li> </ul>		
<p><b>9. Auto Relock Time Adjust</b>                      When the unlock button on the electronic key is pressed and the doors are not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will automatically re-lock in 30 seconds.</li> <li><input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard)</li> <li><input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</li> <li><input type="checkbox"/> 0 seconds.</li> </ul>		
<p><b>10. Lock/Unlock Answer Back</b>                      Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press the lock/unlock button and the system will not beep. = Off</li> <li><input type="checkbox"/> Press the lock/unlock button and the system will beep. (Standard) = On</li> </ul>		
<p><b>11. Lock Feedback Volume</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> off</div> <div style="text-align: center;"> volume 1</div> <div style="text-align: center;"> volume 2</div> <div style="text-align: center;"> volume 3</div> <div style="text-align: center;"> volume 4</div> <div style="text-align: center;"> volume 5</div> <div style="text-align: center;"> loudest (standard)</div> </div>		
<p><b>Climate Settings</b></p>		
<p><b>12. Auto A/C Mode</b>                      When Auto A/C is selected:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On</li> <li><input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off</li> </ul> <p>* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p><b>13. Efficient Ventilation Mode</b>                      When the front defogger is activated:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off</li> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On</li> </ul>		

Light Settings	Using the navigation system	Dealer
<p><b>14. Light Sensor Sensitivity</b> When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <p> <input type="radio"/> very dark                        <input type="radio"/> dark                        <input type="radio"/> normal (standard)                        <input type="radio"/> light                        <input type="radio"/> very light                 </p>		
<p><b>15. Headlight Off Time Adjust</b> After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:</p> <p> <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.  <input type="checkbox"/> The headlights will turn off in 30 seconds.  <input type="checkbox"/> The headlights will turn off in 60 seconds. (Standard)  <input type="checkbox"/> The headlights will turn off in 90 seconds.                 </p>		
<p><b>16. Daytime Running Lights</b> Illumination of daytime running lights:</p> <p> <input type="checkbox"/> OFF.  <input type="checkbox"/> ON. (Standard)                 </p>		
<p><b>17. Int. Light Off Adjustment</b> After closing the door, the interior lights can be adjusted to stay on for the following:</p> <p> <input type="checkbox"/> 15 seconds. (Standard)  <input type="checkbox"/> 7.5 seconds.  <input type="checkbox"/> 30 seconds.  <input type="checkbox"/> 0 seconds.                 </p>		
<p><b>18. Ext. Lights Off Time Adjust</b> After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <p> <input type="checkbox"/> 15 seconds. (Standard)  <input type="checkbox"/> 7.5 seconds.  <input type="checkbox"/> 30 seconds.  <input type="checkbox"/> 0 seconds.                 </p>		
<p><b>19. Instrument Dim. Sensitivity</b> Level of light required to dim the instrument panel lights:</p> <p> <input type="radio"/> very dark                        <input type="radio"/> dark                        <input type="radio"/> normal (standard)                        <input type="radio"/> light                        <input type="radio"/> very light                 </p>		
<p><b>20. Instrument Rest. Sensitivity</b> Level of light required to brighten the instrument panel lights:</p> <p> <input type="radio"/> very light                        <input type="radio"/> light                        <input type="radio"/> normal (standard)                        <input type="radio"/> dark                        <input type="radio"/> very dark                 </p>		
<p><b>Other Vehicle Settings</b></p> <p><b>21. Driver's Seat Easy Exit*</b> When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:</p> <p> <input type="checkbox"/> Remain in the current position, as set by the driver. = Off  <input type="checkbox"/> Automatically move away from the steering wheel partially. (Standard) = Partial  <input type="checkbox"/> Automatically move away from the steering wheel fully. = Full                      * If equipped                 </p>		

Settings that can be customized by:

<b>Programmable by Dealer Only</b>	Using the navigation system	Dealer
<p><b>22. Flashing of Signal Lights</b>                      Using the electronic key, the following functions can be programmed:  <input type="checkbox"/> Press the lock or unlock button and the lights will not flash. = Off  <input type="checkbox"/> Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>23. Open Windows with Elec. Key</b>                      When pressing the unlock button on the electronic key for 3 seconds:  <input type="checkbox"/> The windows will not roll down. (Standard) = Off  <input type="checkbox"/> All the windows will roll down. = On</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>24. Open Windows and Moonroof with Elec. Key</b>                      When pressing the unlock button on the electronic key for 3 seconds:  <input type="checkbox"/> The windows will roll down and the moonroof will not open. = Off  <input type="checkbox"/> All the windows will roll down and the moonroof will open. (Standard) = On                      * Note: Option # 23 must be on.</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>25. Slide/Tilt Moonroof with Elec. Key</b>                      When option # 23 and # 24 are on, the moonroof can be programmed for the following:  <input type="checkbox"/> Slide. (Standard)  <input type="checkbox"/> Tilt.</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>26. Tilt Away of Steering Wheel*</b>                      When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following:  <input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On  <input type="checkbox"/> Remain in the current position, as set by the driver. = Off                      * If equipped</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>27. Automatic Recirculation of air when using A/C</b>                      When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:  <input type="checkbox"/> To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard)  <input type="checkbox"/> When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.</p>	<p>_____</p>	<p> Dealer only</p>
<p><b>28. Reverse Beep Alert</b>                      When the vehicle is put in reverse, the interior reverse beep alert can be set to the following:  <input type="checkbox"/> Beep continuously. (Standard)  <input type="checkbox"/> Beep once.</p>	<p>_____</p>	<p> Dealer only</p>

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

\_\_\_\_\_  
 Repair Order Number (Dealer only)

\_\_\_\_\_  
 Vehicle Identification Number (Dealer only)

**VEHICLES WITH NAVIGATION SYSTEM:**

QUICK FEATURE REFERENCE	EXPLANATION OF FEATURE	FUNCTION SELECT	ITEM SELECT	SCAN SETTINGS	STANDARD SETTING
1 Speed Sensitive Auto Lock	When the vehicle reaches 13 mph: 1. The doors will not lock. (Standard) 2. All the doors will automatically lock.	DOOR LOCK	AUTO LOCK	1 = OFF 2 = ON	OFF
2 Shift-Linked Auto Lock	When the vehicle is taken out of park and placed into another range: 1. The doors, if unlocked, will not automatically lock. 2. The doors automatically lock. (Standard)	DOOR LOCK	AUTO LOCK/SHIFT	1 = OFF 2 = ON	ON
3 Shift-Linked Auto Unlock	When the engine is running and the vehicle is placed into park: 1. All the doors will remain locked. 2. All the doors will automatically unlock. (Standard)	DOOR LOCK	AUTO UNLOCK/SHIFT	1 = OFF 2 = ON	ON
4 Driver Door-Linked Unlock	When the vehicle is turned off and the driver door is opened within 10 seconds: 1. All of the remaining doors will remain locked. (Standard) 2. All of the remaining doors will automatically unlock.	DOOR LOCK	ALL UNLOCK/OPEN -CLOSE	1 = OFF 2 = ON	OFF
5 Unlock on Second Key Turn	When using the mechanical key to unlock the doors: 1. Turning the key one time will unlock all doors. 2. Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard)	DOOR LOCK	UNLOCK KEY TWICE	1 = OFF 2 = ON	ON
6 Remote 2-Press Unlock	When using the electronic key to unlock the doors: 1. Pressing the unlock button one time will unlock all doors. 2. Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard)	WIRELESS DOOR LOCK	UNLOCK 2 OPERATION	1 = OFF 2 = ON	ON
7 Select Doors to Unlock	When pressing the unlock button one time on the electronic key: 1. All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). 2. Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard)	WIRELESS DOOR LOCK	UNLOCK 2 OPERATION	1 = OFF 2 = ON	ON
8 Access System with Elec. Key	When unlocking the doors: 1. Deactivates SmartAccess, only accessible using elec. key unlock button. 2. Use SmartAccess (touch door handle) or remote buttons. (Standard)	WIRELESS DOOR LOCK	WIRELESS CONTROL	1 = OFF 2 = ON	ON
9 Auto Relock Time Adjust	When the unlock button on the electronic key is pressed and the doors are not opened: 1. The doors will automatically re-lock in 30 seconds. 2. The doors will automatically re-lock in 60 seconds. (Standard) 3. The doors will automatically re-lock in 120 seconds.	WIRELESS DOOR LOCK	AUTO LOCK TIME	1 = 30S 2 = 60S 3 = 120S	60S
10 Lock/Unlock Answer Back	Using the electronic key, the following functions can be programmed: 1. Press the lock/unlock button and the system will not beep. 2. Press the lock/unlock button and the system will beep. (Standard)	WIRELESS DOOR LOCK	WIRELESS BUZZER RESP	1 = OFF 2 = ON	ON
11 Lock Feedback Volume	When the lock button is pressed on the electronic key, the system volume can be programmed as follows: 1. Loudest (Standard) 2. Level 6 3. Level 5 4. Level 4 5. Level 3 6. Level 2 7. Level 1 8. Off	WIRELESS DOOR LOCK	WIRELESS BUZZER VOL	1 = LEVEL7 2 = LEVEL6 3 = LEVEL5 4 = LEVEL4 5 = LEVEL3 6 = LEVEL2 7 = LEVEL1 8 = LEVEL0	LEVEL7
12 Auto A/C Mode	When Auto A/C is selected: 1. It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) 2. It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* * Note: The AC compressor will be engaged when the auto AC button is pressed a second time.	AIR CONDITIONER	COMPRESSOR MODE	1 = AUTOMATIC 2 = MANUAL	AUTOMATIC

QUICK FEATURE REFERENCE	EXPLANATION OF FEATURE	FUNCTION SELECT	ITEM SELECT	SCAN SETTINGS	STANDARD SETTING
13 Efficient Ventilation Mode	When the front defogger is activated: 1. It will automatically blow air onto the windshield without engaging the air conditioner compressor. 2. It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard)	AIR CONDITIONER	FOOT/DEF AUTOMATIC BLOW UP FUNCTION	1 = OFF 2 = ON	ON
14 Light Sensor Sensitivity	When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode): 1. Normal (Standard) 2. Very dark 3. Dark 4. Light 5. Very light	LIGHT CONTROL	SENSITIVITY	1 = NORMAL 2 = DARK2 3 = DARK1 4 = LIGHT1 5 = LIGHT2	NORMAL
15 Headlight Off Time Adjust	After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position: 1. The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened. 2. The headlights will turn off in 30 seconds. 3. The headlights will turn off in 60 seconds. (Standard) 4. The headlights will turn off in 90 seconds.	LIGHT CONTROL	LIGHT AUTO OFF DELAY	1 = OFF 2 = 30S 3 = 60S 4 = 90S	60S
16 Daytime Running Lights	Illumination of daytime running lights: 1. OFF. 2. ON. (Standard)	LIGHT CONTROL	DRL FUNCTION	1 = OFF 2 = ON	ON
17 Int. Light Off Adjustment	After closing the door, the interior lights can be adjusted to stay on for the following: 1. 15 seconds. (Standard) 2. 7.5 seconds. 3. 30 seconds.	ILLUMINATED ENTRY	LIGHTING TIME	1 = 15S 2 = 7.5S 3 = 30S	15S
18 Ext. Lights Off Time Adjust	After closing the door, the exterior lights can be adjusted to stay on for the following: 1. 15 seconds. (Standard) 2. 7.5 seconds. 3. 30 seconds. 4. 0 seconds.	ILLUMINATED ENTRY	MIRROR FOOT LIGHT TIME	1 = 15S 2 = 7.5S 3 = 30S 4 = 0S	15S
19 Instrument Dim. Sensitivity	Level of light required to dim the instrument panel lights: 1. Normal (Standard) 2. Very dark 3. Dark 4. Light 5. Very light	LIGHT CONTROL	DISPEX ON SEN	1 = NORMAL 2 = DARK2 3 = DARK1 4 = LIGHT1 5 = LIGHT2	NORMAL
20 Instrument Rest. Sensitivity	Level of light required to brighten the instrument panel lights: 1. Normal (Standard) 2. Very dark 3. Dark 4. Light 5. Very light	LIGHT CONTROL	DISPEX OFF SEN	1 = NORMAL 2 = DARK2 3 = DARK1 4 = LIGHT1 5 = LIGHT2	NORMAL
21 Driver's Seat Easy Exit*	When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following: 1. Remain in the current position, as set by the driver. 2. Automatically move away from the steering wheel partially. (Standard) 3. Automatically move away from the steering wheel fully * If equipped	SEAT	SEAT MOVE DISTANCE	1 = OFF 2 = LITTLE 3 = STANDARD	LITTLE
22 Flashing of Signal Lights	Using the electronic key, the following functions can be programmed: 1. Press the lock or unlock button and the lights will not flash. 2. Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard)	WIRELESS DOOR LOCK	HAZARD ANSWER BACK	1 = OFF 2 = ON	ON
23 Open Windows with Elec. Key	When pressing the unlock button on the electronic key for 3 seconds: 1. The windows will not roll down. (Standard) 2. All the windows will roll down.	POWER WINDOW	P/W DOWN W/TRANSMIT	1 = OFF 2 = ON	OFF

QUICK FEATURE REFERENCE	EXPLANATION OF FEATURE	FUNCTION SELECT	ITEM SELECT	SCAN SETTINGS	STANDARD SETTING
24 Open Windows and Moonroof with Elec. Key	When pressing the unlock button on the electronic key for 3 seconds: 1. The windows will roll down and the moonroof will not open. 2. All the windows will roll down and the moonroof will open. (Standard) *Note: Option # 23 must be on.	SLIDEROOF	WIRELESS KEY REALTED OPEN	1 = OFF 2 = ON	ON
25 Slide/Tilt Moonroof with Elec. Key	When option # 23 and # 24 are on, the moonroof can be programmed for the following: 1. Slide. (Standard) 2. Tilt	SLIDEROOF	WIRELESS KEY REALTED OPERATION	1 = SLIDE 2 = TILT	SLIDE
26 Tilt Away of Steering Wheel*	When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following: 1. Automatically move up and away from the driver position setting. (Standard) 2. Remain in the current position, as set by the driver. *If equipped	TILT & TELESCO	AUTOAWAY/RETURN FUNCTION	1 = ON 2 = OFF	ON
27 Automatic Recirculation of air when using A/C	When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following: 1. To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard) 2. When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.	AIR CONDITIONER	AIR INLET MODE	1 = AUTOMATIC 2 = MANUAL	AUTOMATIC
28 Reverse Beep Alert	When the vehicle is put in reverse, the interior reverse beep alert can be set to the following: 1. Beep continuously. (Standard) 2. Beep once.	WARNING	REVERSEBUZZER	1 = CONTINUAL 2 = SINGLE	CONTINUAL