


Last Modified: 5-25-2010	6.4 K	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000003MUA009X
Title: LIGHTING (INT): ROOM LIGHT: COMPONENTS (2010 HS250H)		

COMPONENTS


ILLUSTRATION

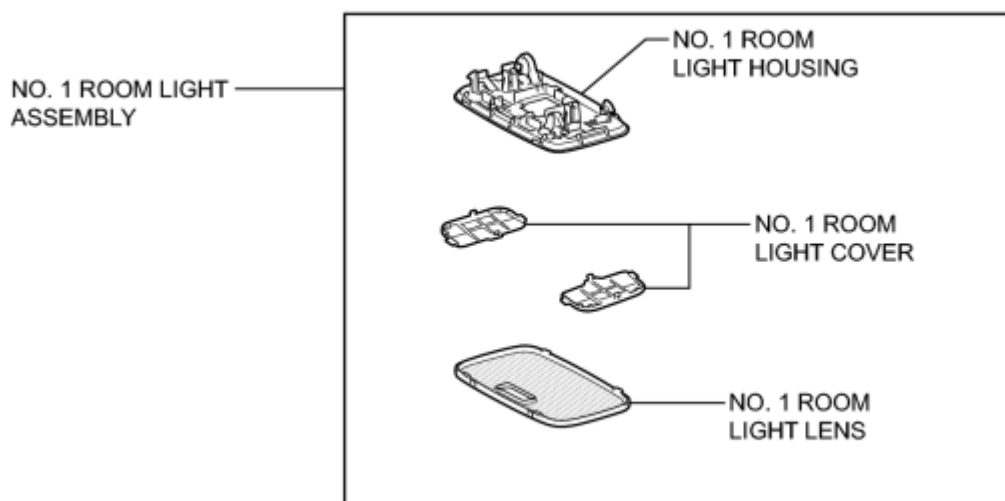

Last Modified: 5-25-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000003MUN009X
Title: LIGHTING (INT): ROOM LIGHT: REMOVAL (2010 HS250H)		

REMOVAL

1. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

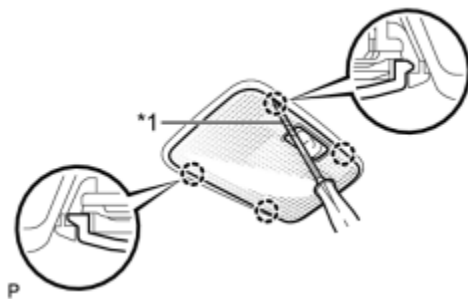


(a) Using a screwdriver with its tip wrapped with protective tape, disengage the 4 claws and remove the No. 1 room light lens.

Text in Illustration

*1

Protective Tape

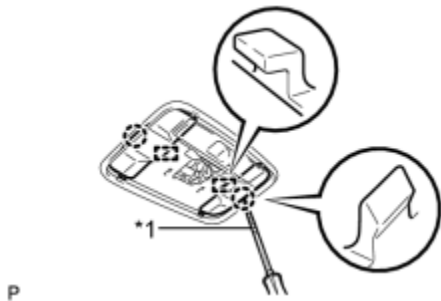


(b) Using a screwdriver with its tip wrapped with protective tape, disengage the 2 claws and 2 guides, and remove the 2 No. 1 room light covers.

Text in Illustration

*1

Protective Tape

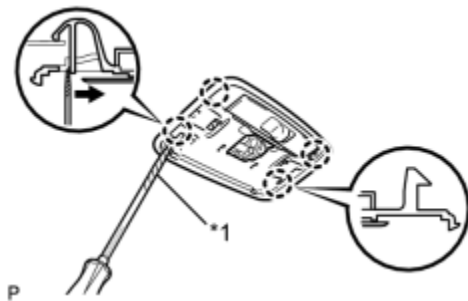


(c) Using a screwdriver with its tip wrapped with protective tape, disengage the 4 claws and disconnect the No. 1 room light housing as shown in the illustration.

Text in Illustration


*1

Protective Tape

(d) Using a screwdriver, disengage the 4 claws and disconnect the room light switch base from the No. 1 room light housing.

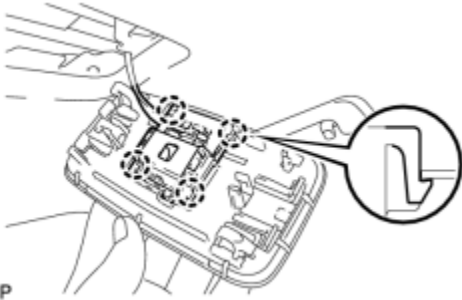

P

 

Last Modified: 5-25-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000003MUM009X
Title: LIGHTING (INT): ROOM LIGHT: INSTALLATION (2010 HS250H)		


INSTALLATION

1. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

(a) Align the switch parts shown in the illustration and engage the 4 claws to install the room light switch base to the No. 1 room light housing.



Text in Illustration	
*1	Switch Part of Room Light Switch Base
*2	Switch Part of No. 1 Room Light Housing

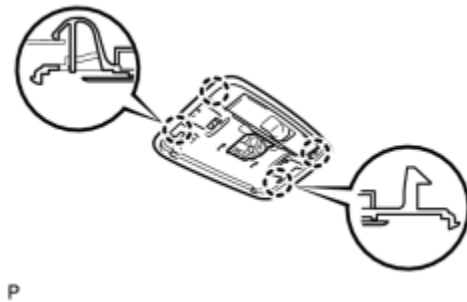


(b) Engage the 4 claws and install the No. 1 room light housing.



(c) Engage the 2 claws and 2 guides to install the 2 No. 1 room light covers.

(d) Engage the 4 claws to install the No. 1 room light lens.

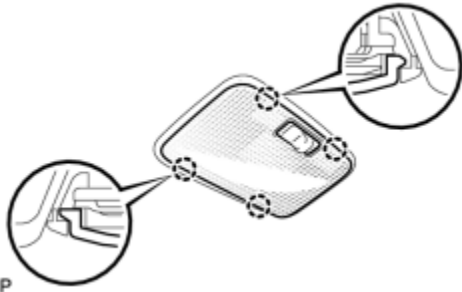

P

