 


Search keyword(s)

Search

>Results RM > NCF > EWD




Lighting (Exterior) Rear combination lamp Removal

Steps

1.Remove the rear lamp cover	81952E
2.Tail lamp (rear combination lamp) lens & body LH removal	81561D
3.Remove rear turn signal lamp bulb	81550L
4.Remove rear bumper assembly	
5.Remove rear bumper side support LH	52156F
6.Remove the luggage compartment floor mat	64711
7.Remove the tool box (with stays)	75201
8.Removing the rear floor finish plate	58387
9.Remove Luggage compartment lamp ASSY NO.1	81330
10.Remove the luggage compartment trim cover FR	64717A


a. Remove the two luggage compartment trim hooks No. 2 as shown.

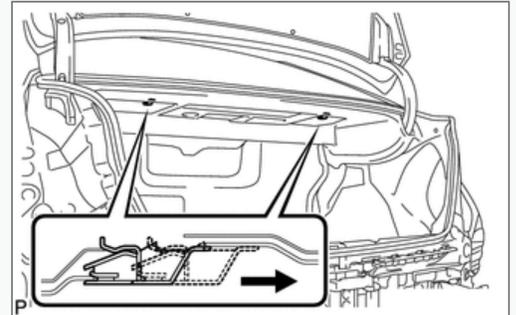

b. Remove the four tabs (A).

c. Remove the two interlocking tabs (B).


d. Remove the four fasteners and remove the luggage compartment trim CoverFR.

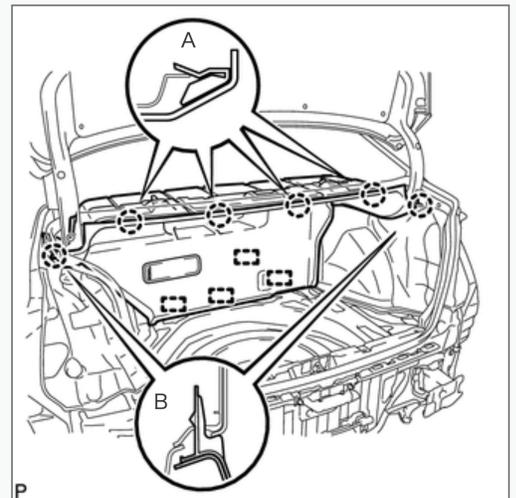

11.Remove the rope hook	66311L
12.Remove Luggage compartment trim cover INN LH	64722

a. Using a clip remover, remove the 3 clips and remove the luggage compartment trim CoverINN LH.



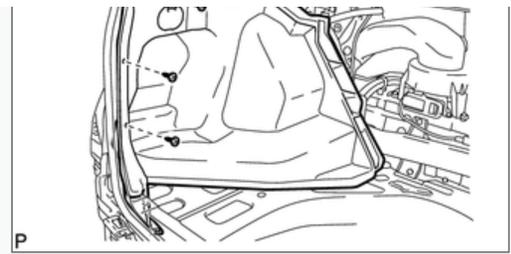

13.Remove rear combination lamp socket & wire SUB-ASSY LH

81565