



RX 400h  
Lexus Personalized Settings

## Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge, provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.

---

Repair Order Number

---

Vehicle Identification Number (VIN)

# Door Lock Systems

---

## 1 Unlocking driver's door/all passenger doors

By pressing the remote key door unlock button, the following functions can be programmed:

- Pressing the unlock button one time will unlock all doors. (Rear included)
- Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard)

## 2 Flashing of signal lights

Using the remote key, the following functions can be programmed:

- Press the LOCK/UNLOCK button on the remote key and the lights will not flash.
- Press the LOCK button and the lights will flash once. Press the UNLOCK button and the lights will flash twice. (Standard)

## 3 Unlocking of doors when placing vehicle into park

While the engine is running and the vehicle is placed into park, the vehicle can be programmed as follows:

- When placing the vehicle into park, all of the doors will remain LOCKED.
- When placing the vehicle into park, ALL the doors will automatically UNLOCK. (Standard)

## 4 Locking of doors when shifting from park into another range

While the brake pedal is being pressed and the vehicle is taken out of park and placed into another range, the doors can be programmed as follows:

- Remain unchanged.
- Automatically lock. (Standard)

## Power Windows

---

### 5 Using the remote key to open all windows

By pressing the UNLOCK button on the remote key for 3 seconds, the vehicle can be programmed as follows:

- The windows will not roll down.
- All the windows will roll down. (Standard)

\* Note: See moonroof for additional options.

## Moonroof

---

### 6 Using remote key to open moonroof

By pressing the UNLOCK button on the remote key for 3 seconds, the following options can be programmed:

- The moonroof will not open.
- The moonroof will open. (Standard)

\* Note: Option #5 must be on.

### 7 Using the remote key to open/tilt moonroof

When option #5 and #6 are active, the moonroof can be programmed for the following:

- Slide. (Standard)
- Tilt.

# Lighting Systems

---

## 8 Illumination of cabin light

After closing the door, the interior lights can be adjusted to stay on for the following:

- 7.5 seconds.
- 15 seconds. (Standard)
- 30 seconds.

## 9 Delay for headlights to turn off

After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position, the lights can be programmed for the following:

- Turn off immediately, when the vehicle is turned off and the driver door is opened.
- Turn off in 30 seconds. (Standard)
- Turn off in 60 seconds.
- Turn off in 90 seconds.

## 10 Sensitivity of automatic headlights

While driving the vehicle and the headlight switch is placed in the "AUTO" mode, the front headlights can be programmed to turn on under darker or lighter ambient light conditions.

- Very light
- Light
- Standard
- Dark
- Very dark

## Tilt Steering Wheel

---

### 11 Auto tilt away of the steering wheel

When the vehicle is placed in park, the ignition turned off, and the key is removed from the ignition, the steering wheel can be set to the following:

- Automatically move up and away from the driver position setting. (Standard)
- Remain in the current position, as set by the driver.

## Air Conditioner

---

### 12 Automatic recirculation of air when using A/C

While the air conditioner is ON or in AUTO, the vehicle can be programmed for the following:

- To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirements set. (Standard)
- When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.

## Power Back Door

---

### 13 Power back door buzzer volume

When opening the rear door, the buzzer volume can be programmed for the following:

- 6-7 high beeps activate when opening/closing.
- 6-7 medium beeps activate when opening/closing.
- 2 medium beeps activate when opening/closing the vehicle. (Standard)

## **14** Power back door assist

After unlocking all of the doors, and manually pressing the release button on the rear door, the vehicle can be programmed for the following:

- When pressing the release button, the door must be opened manually. (Standard)
- When pressing the release button, the rear door will be assisted and open automatically.

## **15** One motion power back door

When opening the rear door, the vehicle can be programmed for the following:

- After unlocking all the doors, then pressing the rear door release button on the remote key, the rear door will open automatically.
- After pressing the rear door release button on the remote key, the rear door will open. (Doors do not need to be unlocked first) (Standard)

\* Note: Option #16 is not available if one motion (#2) is selected. The back door will not lock automatically after it has been opened and then closed. You can lock the back door, with your vehicles wireless remote, when you leave your vehicle.

## **16** Power back door

To open the rear door, after unlocking the doors, the rear door can be programmed for the following:

- After momentarily pressing the rear door release button on the remote key, the rear door will open.
- After pressing the rear door release button twice on the remote key, the rear door will open.
- After pressing and holding the rear door release button on the remote key for 0.8 seconds, the rear door will open. (Standard)
- The rear door, release door button is turned off and will not function.

