


Tire Inflation Pressure Compensation and Adjustment

Service Category General

Section Pre-Delivery Service

Market USA

Lexus Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2013	CT200H, ES350, GS350, GS450H, GX460, IS F, IS250, IS250C, IS350, IS350C, LS460, LS600H, LX570, RX350, RX450H	

Introduction

The purpose of this bulletin is to provide a procedure to adjust tire pressure correctly when outside temperature is significantly colder or warmer than shop temperature.

Seasonal temperature change can dramatically alter tire pressure, which can cause the tire pressure warning lamp to illuminate.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

Tire Pressure vs. Tire Temperature

Tire temperature is dependent on “cold” tire pressure, driving distance and speed, ambient temperature and road surface temperature. As the temperature of the tire changes, air in the tire expands and contracts, changing the tire’s air pressure. The cold tire pressure for all Lexus models will vary and will need to be adjusted accordingly.


“Cold” tire pressure, as shown on the tire pressure label on our vehicles, is generally considered to be the pressure in a tire that has not been driven in the past 4 hours and has been parked outdoors.

The TPWS **MUST** be initialized with the tire pressure marked on the vehicle placard. Tires are then adjusted according to the information in this bulletin to ensure that the TPWS light does not illuminate unnecessarily.

Tire Inflation Pressure Compensation and Adjustment

Tire Pressure Adjustment

Figure 1. Tire Pressure Chart

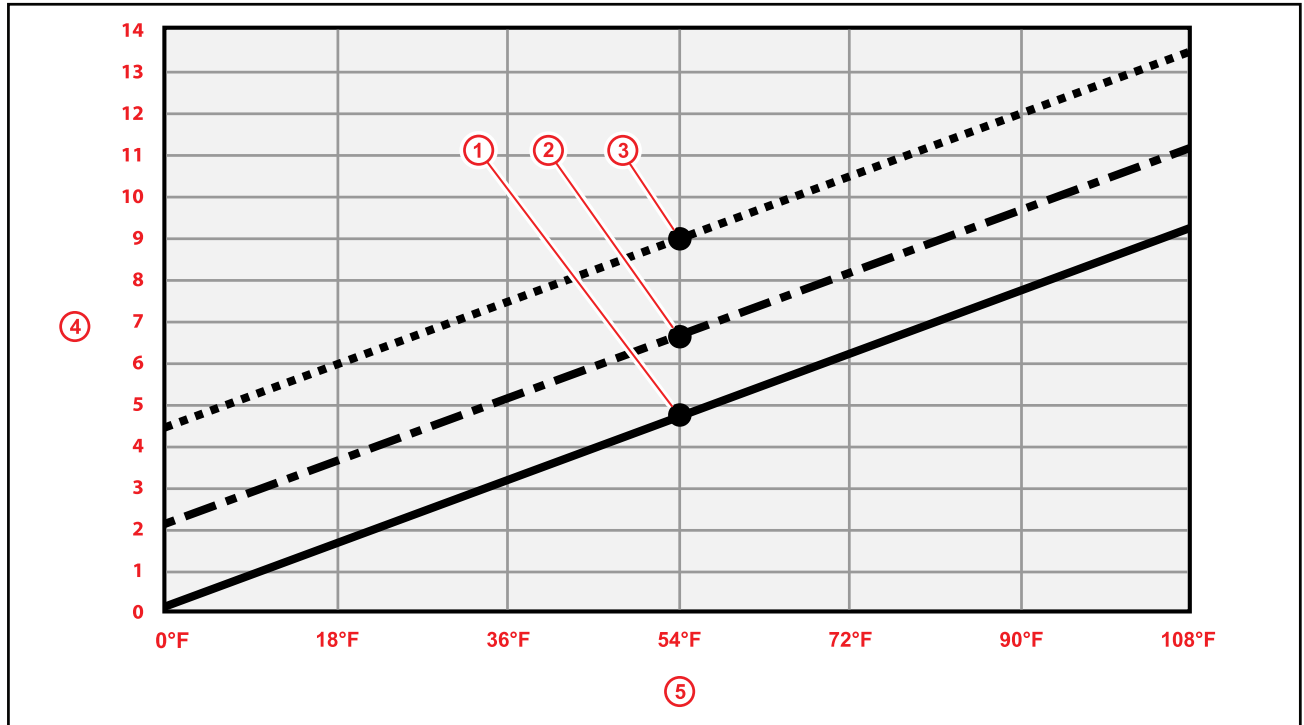

1	— Example 1: Cold Tires — Car Has Not Been Driven for 4 Hours and Parked Outside
2	- - - Example 2: Warm Tires — Car Has Just Been Driven a Short Distance in Traffic
3	· · · · · Example 3: Hot Tires — Car Has Just Been Driven for at Least 1 Hour of Highway Driving
4	Tire Pressure Adjustment (psi)
5	Temperature DIFFERENCE Between Seasonable Lowest Temperature and Workshop Temperature

Recommended Tire Pressure Adjustment:

NOTE
Use a high quality accurate tire pressure gauge, and check its accuracy regularly.

- Consider the difference of the air temperature in the workshop and the lowest ambient temperature that may be expected in the next few weeks (especially in winter).
- Use the chart (Figure 1) to compensate for temperature of the tires when adjusting tire pressure.
- Use temperature compensation Example 1 for the spare tire.

Example 1: Temperature Compensation – “Cold” Tires

- The vehicle has been parked overnight outside shop (vehicle has “cold” tires) and tire pressures are set to 31.9 psi.

Tire Inflation Pressure Compensation and Adjustment

Example 1: Temperature Compensation – “Cold” Tires (Continued)

- Workshop temperature is 68°F, and expected lowest ambient temperature in the local area is to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the tire pressure chart (Figure 1), find the intersection of the cold tire line at the point corresponding to 54°F, and read off the value on the tire pressure change axis. In this case it would be about 4.9 psi.
- The tires should be filled to:
31.9 + 4.9 psi = 36.8 psi

Example 2: Temperature Compensation – “Warm” Tires

- The vehicle has been driven to the shop on surface streets for about 30 minutes (vehicle has “warm” tires) and tire pressures are set to 31.9 psi.
- Workshop temperature is 68°F and expected lowest ambient temperature in your area is to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the Tire Pressure Chart (Figure 1), find the intersection of the warm tire line at the point corresponding to 54°F and read off the value on the tire pressure change axis. In this case it would be about 6.7 psi.
- The tires should be filled to:
31.9 + 6.7 psi = 38.6 psi

Example 3: Temperature Compensation – “Hot” Tires

- The vehicle has been driven to the shop on the highway for at least 60 minutes (vehicle has “hot” tires) and tire pressures are set to 31.9 psi.
- Workshop temperature is 68°F, and the expected lowest ambient temperature in the area is expected to be 14°F.
- Subtract the expected lowest temperature (14°F) from the highest expected temperature (68°F) = 54°F.
- Using the tire pressure chart (Figure 1), find the intersection of the hot tire line at the point corresponding to 54°F, and read off the value on the tire pressure change axis. In this case it would be about 9.0 psi.
- The tires should be filled to:
31.9 + 9.0 psi = 40.9 psi